

# SMALL ICE MAKER

## INSTRUCTION MANUAL (INSTALLATION MANUAL)

Thank you for purchasing this product.  
To ensure proper use, we recommend that you read this  
instruction manual before operating the unit.



### CONTENTS

 
● SAFETY PRECAUTIONS . . . . .	1	3
● HOW TO USE . . . . .	4	5
● CLEANING . . . . .		6
● IN CASE OF THE FOLLOWING . . . . .		7
● BEFORE REQUESTING SERVICE . . . . .	7	8
● REQUIRED INFORMATION . . . . .		8
● PART NAMES AND FUNCTIONS . . . . .		9
● SPECIFICATIONS . . . . .		10

CLEVER USE SAVE ELECTRICITY

# SAFETY PRECAUTIONS 1

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the unit.
- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handling of the unit could lead to death or serious injury are listed under the "⚠️ WARNING" heading. However, the cases listed under the "⚠️ CAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

	<b>WARNING</b> Improper handling of the unit could lead to death or serious injury.
	<b>CAUTION</b> Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark  contains information that should be strictly adhered to.
- After reading the instruction manual, store it in an easily accessible place where the user(s) of this product can easily find it.

## ◆ PRECAUTIONS FOR INSTALLATION

### ⚠️ WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

## ◆ PRECAUTIONS FOR USE

### ⚠️ WARNING

 <p><b>DON'T TAMPER</b></p> <p>All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.</p> 	 <p><b>ELECTRICAL SHOCK HAZARDS</b></p> <p>Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.</p> 
 <p><b>FLAMMABLE</b></p> <p>Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.</p> 	 <p><b>PROHIBITED</b></p> <p>Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it, possibly resulting in electrical shock or fire.</p> 
 <p><b>PROHIBITED</b></p> <p>Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.</p> 	 <p>When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating or fire.</p> 

# SAFETY PRECAUTIONS 2

 
## ⚠ WARNING



Power voltage:187V~242V/60Hz,50Hz  
It is necessary that single-phase  
alternating current,individual single-phase  
3 hole wallet (250V 10A)and fuse(6A)  
and earth reliably .)




Never attempt to insert fingers, sticks, etc.  
Into the cold air suction outlet. A circulation  
fan is rotating at high speed inside the outlet.  
Injury, electrical shock and improper operation  
could result.

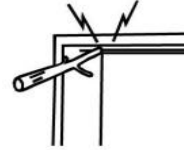

PROHIBITED

 For indoor use only. Using the unit in a  
location exposed to rain could result in  
electrical leakage and electrical shock.

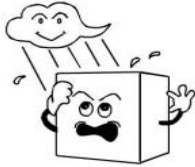


PROHIBITED


Never place heavy objects or items containing  
water on top of the unit. Objects could fall  
down and cause injury and spilled water could  
deteriorate the insulation of electrical  
components and result in electrical leakage.



 Install the unit in a location where the  
floor is sturdy enough to support the  
load of the unit. If the floor is not sturdy  
enough or installation is incorrectly  
performed, the unit could tip over and  
falling shelves and products could cause  
personal injury.



 
Don't push or pull unit directly avoid  
blending the support feet.

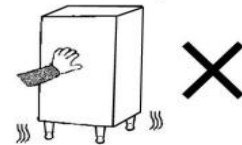


Should the unit need temporary storage,  
make sure not to store the unit in a  
location where children play and take  
precautions so that the door cannot be  
completely closed. This will minimize the  
risk that a child becomes trapped inside  
the compartment.



 Away from hot air sources  
cooling performance is reduced if the unit is  
placed near heat sources such as hot plates and  
stoves and if it is exposed to direct sunlight.

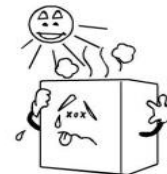

 Leave disassembly and disposal of the  
unit to qualified experts.

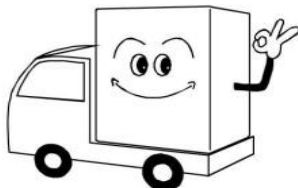


# SAFETY PRECAUTIONS 3


## ⚠ WARNING

### WELL VENTILATED PLACE

 
Please make more than 20cm space between Chest freezer and wall. If there are no space, cooling capacity can drop down.

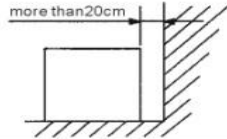

 If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.

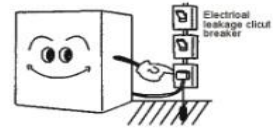


 Never climb onto the unit. The unit could tip over or fall and cause material damage or injury.

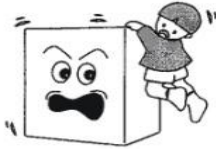

DISCONNECT  
POWER CORD  
PLUG FROM  
WALL OUTLET

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock or fire.



# HOW TO USE

## BEFORE USE

- Remove shipping package, tape, etc, and leave doors open ventilation for a while.
- Check carefully if the unit has been destroyed during the transportation after open the package  
The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Open the door of storage chamber, take out the accessories from it.
- fixing the feet: pad the bottom of the unit with the foam supplied, revolve 4 adjustable feet into corresponding rivet-nut.
- level the ice maker by adjusting the feet.

## Connect the water supply

- This unit supply a flow pipe, the elbow side of which connect the water tie-in in back of Unit, and the other side connect 3/4" whorl pipe, must install a soft gasket in the two joint avoiding leak.
- Install a water valve nearby the water supply pipeline for easy controlling water supply.
- The water used in this unit must accord with the international standard on drinking water, you can install the water filtrated system considering the actual condition of water supply.

## DRAIN

- Later in the ice machine has two drains, two drains and two drain connections, drains into the other end of the sewer.  
The lowest point of drain must overtop the highest point of the channel avoiding refluxence.

## Electric connecting

- Voltage range: 220~240V/50Hz; if current fluctuate, add a regulator.  
Must supply a individual three-hole plug and earth well.

## Function instruction

- This unit have such functions as water automaticly、 making ice falling ice、 ice-full stopping automaticly.
- Once power and water supply well, this unit start water、 makeing ice、 falling ice circularly have such function as water automatically、 making ice falling ice、 ice-full stopping automatically.

## Operation instruction

- After ice storage chamber is full, the control system will cut off the power automaticly, as well as the compressor stop to operate.
- After ice is taken out from storage chamber (about 3 minutes), the control system will switch to ice-making mode automatically.

# HOW TO USE 2

## EXTREME CONDITION PARAMETER

- The lowest room temperature:10℃
- The highest room temperature:38
- The lowest water-supply press:0.02MPa
- The highest water-supply press:0.5MPa
- The lowest water temperature:2℃
- The highest water temperature:32℃

## WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

 
- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker.the compressor may be overloaded.and/or other damage may occur.

## EFFICIENT USE

Please follow the below instruction,you could save energy.

- To prevent cold air from escaping,open and colse the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

By the raise of circumstance temperature and water temperature,the ice-making capacity reduces.(Details in graph down)

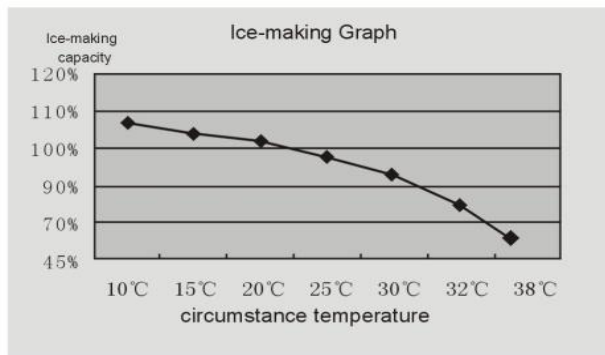

Note: this graph show the actual ice-making capacity by10℃ water; as water temperature raise,ice-making capacity reduces.

## UNIT HEIGHT ADJUSTMENT

The unit height can be adjusted by revolve the adjustable leg.

# CLEANING

**WARNING**

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

## CLEAN CONDENSER

- Clean condenser once half year to keep it well-ventilated.
- Cut power off and cool condenser before cleaning.
- Don't touch the aliform pieces during cleaning to avoid cut.
- After taking out the front faceplate, use cleaner or brush to do it.



**Cleaning condenser**

# IN CASE OF THE FOLLOWING

---

## 1 WHEN NOT USED FOR ALONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water.  
Come away the water supply pipe from the back of unit, and drain all water in it.
- To prevent mold formation and bad smell, leave the door open to dry the compartment completely

## 2 TRANSPORTATION

- Disconnect the power cord plug from the wall outlet.
- When moving the ice maker, make sure that the feet do not damage the power cord.
- Do not let the feet hit against floor steps, thresholds, etc.

## 3 TEMPORARY STORAGE

- Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door
- Make sure not to store the unused ice maker at a location where children play.
- Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

# BEFORE REQUESTING SERVICE

---

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet.

Transfer the ice stored in the ice maker to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in “REQUIRED INFORMATION” below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.



 
# BEFORE REQUESTING SERVICE

No refrigeration at all	<ul style="list-style-type: none"> <li>● Is the power supply interrupted?</li> <li>● Is the power cord plug disconnected from the wall outlet?</li> <li>● Are the shop's power fuses blown and/or the circuit breaker activated?</li> </ul>
Inadequate refrigeration	<ul style="list-style-type: none"> <li>● Is the temperature setting appropriate?</li> <li>● Are items obstructing the cold air inlet and suction outlet?</li> <li>● Are stored items packed too tight?</li> <li>● Is the door open or is it opened and closed frequently?</li> <li>● Is the condenser clogged?</li> </ul>
Excessive noise	<ul style="list-style-type: none"> <li>● Are all feet in firm contact with the floor?</li> <li>● Is the rear panel of the ice maker contacting the wall or other objects?</li> <li>● Are other objects in contact with the ice maker?</li> </ul>
Condensation on cooler exterior	<ul style="list-style-type: none"> <li>● Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.</li> </ul>

# REQUIRED INFORMATION

- |  |   |
|--|---|
| ① Nature of malfunction<br>(as accurately as possible) | ④ Customer's name, address,<br>phone number |
| ② Product number                                       | ⑤ Year and date of purchase                 |
| ③ Serial number  | ⑥ Desired date for service visit            |
- } (Inscribed on badge)


# PART NAMES AND FUNCTIONS

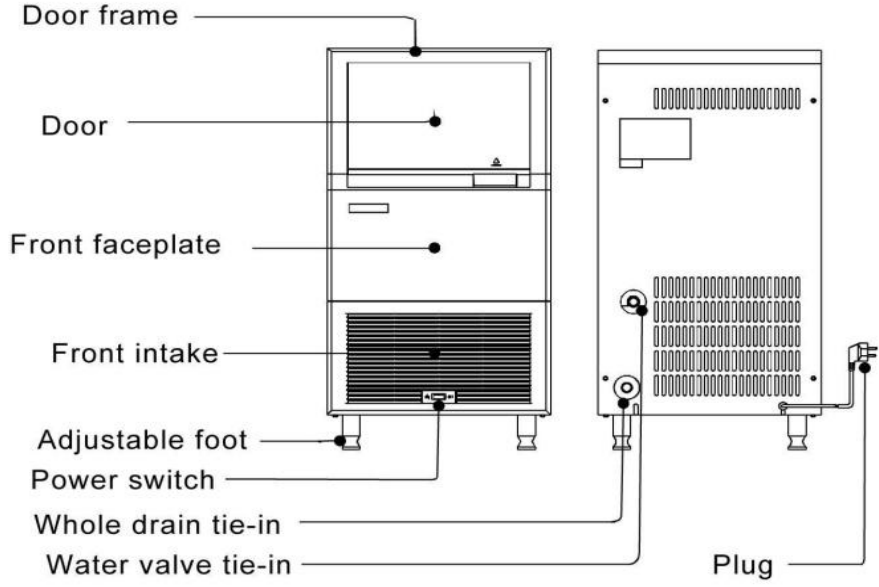

# DISPLAY SCREEN OPERATION MANUAL

**NOTE:**  
All the parameters were setting well, Please don't adjust all the parameters when using.
 
## 1、LCD drawing

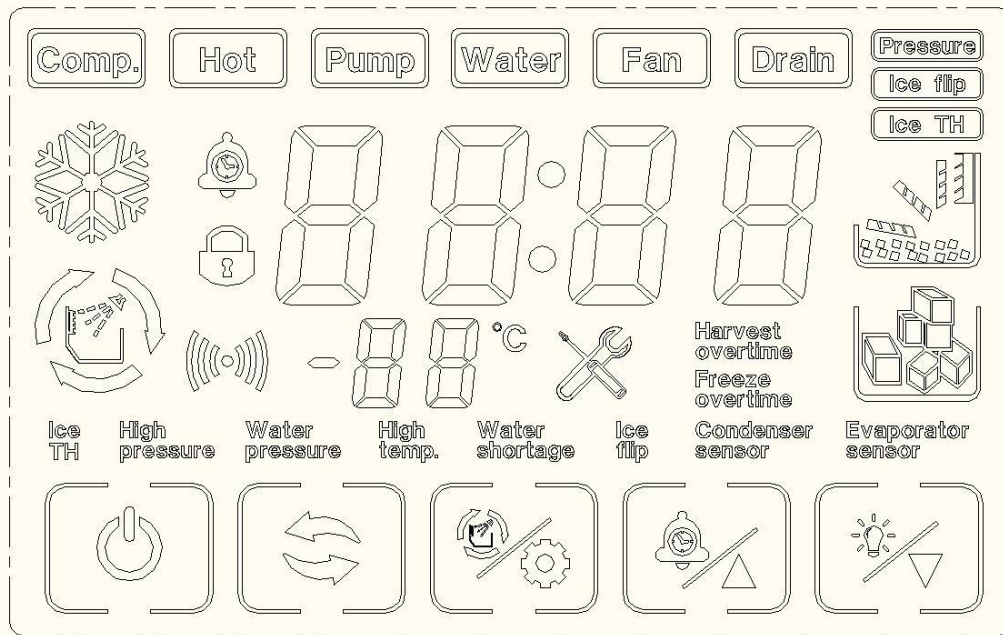

## 2、Display touch key

Key to start:

Control switch on and off.

Cleaning / setting key:

In the off state, click to enter the cleaning state

Mode key:

Switch mode.

Appointment / keying:

1. Enter the appointment mode;
2. Set the status and execute the "+" function;

 
Light / decrease key:

1. In the setting state, execute the "-" function.
2. In non setting state, control the switch of blue light.

### **3、 Display status**

1. Power on: LCD fully on, four digit display version number.
2. Water in: time display C00, ice making, de icing, ice full on.
3. Pressure balance: cleaning, ice making, de icing, ice full bright.
4. Ice making: the ice making icon is on and the time is displayed as the ice making time
5. De icing: the de icing icon is on and the time is displayed as de icing time.
6. Ice full: the ice full Icon lights up to show the ice full time.
7. Fault: the fault icon flashes and the corresponding fault Chinese character is on.
8. Power off: display off.
9. Appointment time setting: the appointment icon is on, and the time is the starting time of the appointment.
10. Reservation status: the reservation icon flashes to show the countdown of the reservation time.
11. Setting status: time display, nixie tube display, the leftmost side is the setting parameter number, long light. The last two or three bits are parameter values, flashing.

### **4、 4、 Main board**

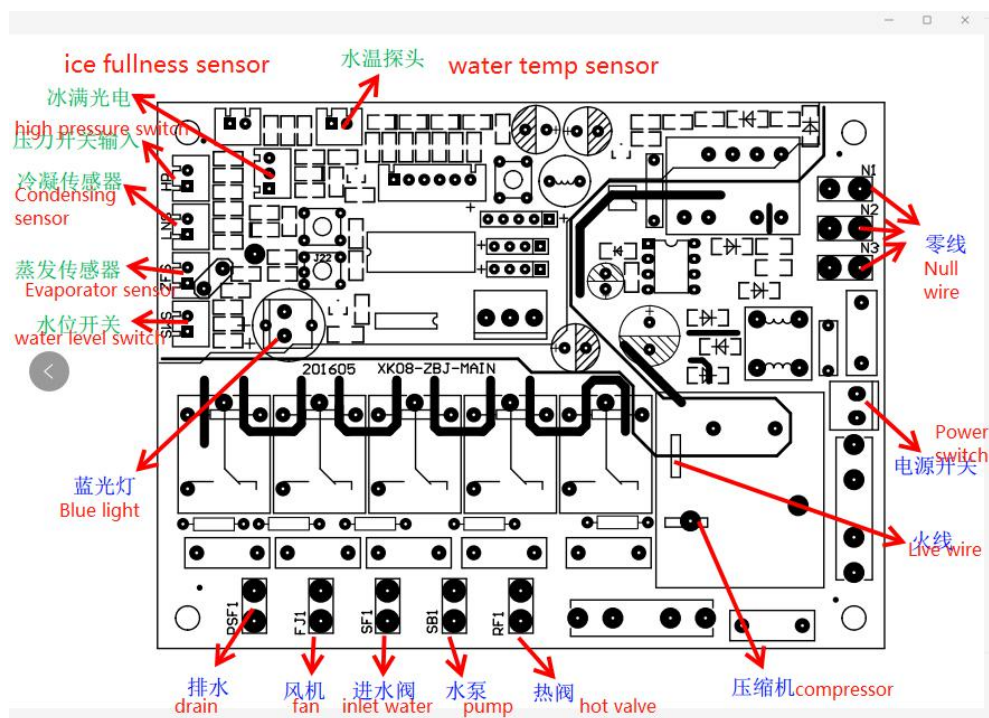

## 5、 Set item

Serial number	Set item	set range	Default value	remarks
1	Ice thickness detection flexibility	1-20	10	
2	Precooling time	10-120s	120s	
3	Water limit time	--	--	
4	Cleaning settings	0/1	1	"0" power on does not clean " 1 "power on cleaning;
5	Drainage setting	0/1	1	"0" has no drainage " 1 "with drainage;
6	Drainage period	0-20	0	"0" is undrained
7	High voltage detection	0/1	1	1 on high voltage detection, 0 off high voltage detection
8	Mode selection	0/1	1	"0" ice thickness model " 1 "time control mode
9	Refrigeration settings	--	--	
10	Set item in case of ice full fault	0-9min	0	"0" de icing time is controlled by ice full switch

## 6、 Ice thickness time adjustment:

In the ice making countdown state, press the "add" key to enter the ice making time setting,

the time flashes on the screen, and the original temperature is displayed

The display changes to ice making compensation time. At this time, press the Add button once, the time increases by 60 seconds, and the ice making compensation time increases

1. Press the decrease key to reduce 60 seconds, the ice making compensation time is reduced by 1, and the operation without key is 10 seconds to exit saving. Time

Effective immediately.

The ice making compensation time value is also saved, and the ice making compensation time is automatically added to the next ice making time.

Ice making compensation time - 9 minutes to 20 minutes, the default value is 0.