

## MARLIN REMAPPED ECU FOR FN2 CIVIC TYPE-R

### *Installation of ECU – (10 mins)*

1. Locate ECU, which is behind battery
2. Disconnect and remove the battery terminals to gain access to the ECU. Remove the ECU's protective cover and then remove the 3 x screws securing it (10mm socket required)
3. Carefully remove the 3 x plugs from the rear of the ECU
4. Install new remapped ECU
5. Replace ECU cover and refit battery
6. Install is then complete.

### *Selecting maps and features (GT model only)*

*(For Non-GT models we can create custom switchable maps but this will require the Bluetooth Connect module from Ecutek: we can supply this on request)*

The ECU uses the cruise control buttons to select and adjust maps. The cruise control still works as normal but you cannot select maps with cruise control enabled.

**MAP 1** – Standard Remap, Adjustable launch control

**MAP 2** – Flat foot shifting, Adjustable launch control

**MAP 3** – Flat foot shifting & Rev matching on downshift, Adjustable launch control

**MAP 4** – As MAP 3 but with added crackle on over-run and downshifts

The “CANCEL” button is used to access the maps and as an “enter” button.

To change maps hold the CANCEL button down for 1 second. The rev counter will move to indicate what map the car is currently in. Select the map you want by pressing ACCEL/DECEL then press CANCEL to select



The ACCEL and DECEL buttons are used to move map selection up and down and also for the adjustable launch control feature.

