 



# Instruction Manual

## PORTABLE CASSETTE RECORDER


**MODEL: LOFI ONE**

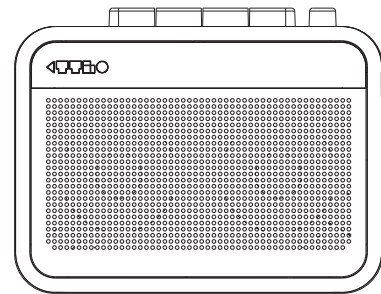
 
### PARTS INTRODUCTION

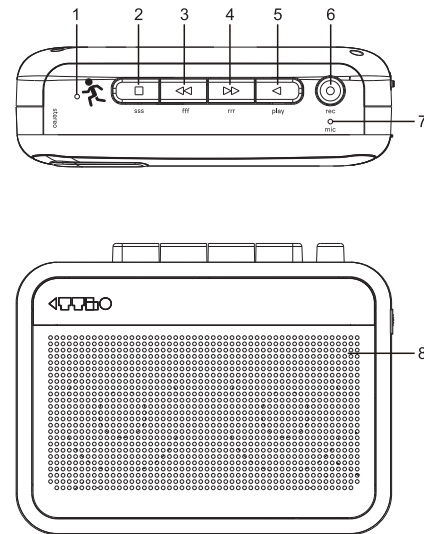

1

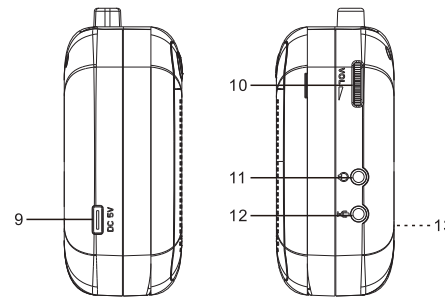

2


1. Power Indicator
2. Stop Button
3. Fast Forward Button
4. Fast Rewind Button
5. Play Button
6. Record Button
7. Built-in Microphone
8. Speaker
9. DC 5V Power Jack
10. Volume Control
11. Earphone Jack
12. Microphone Jack
13. Battery Door

### POWER SUPPLY
 
#### Battery Power

1. Open the Battery Door (13) located on the back of the unit.
2. Put 2 pcs LR06/AA batteries (not included), make sure it is a correct direction based on the "+" or "-" polarity close the battery Door.

**IMPORTANT:** Be sure that the batteries are installed correctly. Wrong polarity could damage the unit or the unit will not work.

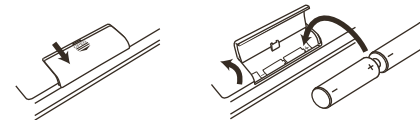

3

#### Notes:

- 1) If you are using an AC Adaptor, please unplug it from the unit before installing the batteries.
- 2) For best performance and longer operating time, we recommend the use of good quality alkaline battery.
- 3) The batteries need to be replaced when the volume level becomes significantly lower, if the sound is distorted during operation or the unit no longer functions properly.

#### 5V USB AC Adapter ( 5V USB AC Adapter is not included)

1. Connect the unit DC 5V Power Jack (9) and the 5V USB AC adapter using the type-C USB cable (not included)
2. Connet the 5V USB AC adapter to household AC power outlet
3. The batteries will automatically disconnect when the AC adaptor is plugged into the unit and the unit will using the AC adaptor power.

4

### ATTENTION

Read and understand this entire manual before using this product. Keep these instructions for future reference.

- (1) Do not use this product near water or expose under the sun.
- (2) Do not mix the old and new batteries or rechargeable and non-chargeable batteries.
- (3) Please remove your AC/DC adaptor or battery when you don't use this product for a long time, avoid battery leakage to damage the unit.
- (4) Do not use the less-power battery.
- (5) Do not use the broken cassette, keep the magnetic head clean, to avoid the cassette twisted, or the sound will be smaller or distorted.
- (6) Do not disassemble or fall down heavily.
- (7) Do not use the batteries or rechargeable batteries to re-charge, avoid battery leakage to damage the unit.

5

### CASSETTE PLAYBACK

1. Open the Cassette Door, insert a cassette tape into the cassette tray, and press the Play Button (5) for tape playback.
2. To fast forward, press the Fast Forward Button (3), press the Play Button (5).
3. To fast rewind, press the Fast Rewind Button (4), press the Play Button (5).
4. To stop the playback, press the Stop Button (2).
  - ◆ When the cassette tape playback to the end, the Play Button will be auto up to stop playing.
  - ◆ When the cassette tape goes fast forward or fast rewind to the end, need to press the Stop Button to stop, and avoid damage the cassette head.

### CASSETTE RECORDING

#### 1. Recording from built-in microphone

- 1) Insert a blank cassette, press the Record (6) and Play (5) button together to start recording by built-in microphone (7).
- 2) Press the Stop Button (2) to end the recording.
- 3) Listen to the recording, press the Fast Rewind Button (4) to rewind, then press the Play Button (5).

#### 2. Recording from external microphone

Plug in external microphone to microphone jack (12), Press Record (6) and Play (5) button together, the tape will start recording via external microphone.

6

#### Notes:

1. The Volume Control (10) does not affect the recording level due to ALC circuit inside unit. When recording from built-in microphone, to obtain the best result and reduce saturation risks, speak at a distance of approximately 2 - 3 inches from microphone.
2. Protection against accidental erasure. When you record on a cassette, the previous recordings are erased automatically. To protect them against any risk of accident erasure, cassettes are provided with protective tabs. For this purpose, remove the protective tab (or both) located at the top of the cassette using a knife or a screw driver. If you subsequently need to re-record on a cassette protected in this way, you can cancel this protection by covering the hole revealed with a piece of adhesive tape. It is not possible to press the RECORD button if the protective tab has been removed and has not been replaced by adhesive tape.




3. Do not force down RECORD BUT TON (6) if the tape's erase protection tabs have been removed, or you will damage the recorder.

7

### CASSETTE TAPE OPERATING TIPS


1. High quality tapes are recommended to obtain maximum quality reproduction from recordings.
2. Tapes with playing time of 120 minutes (C-120) are not recommended because they contain thinner and longer tape that has a greater chance to malfunction and jam, which may damage the cassette mechanism.
3. To obtain good reproduction, the head should be cleaned after every 10 to 20 hours of use. It is also recommended that the cassette be kept away from excessive heat or cold.
4. If there is slack in the tape, remove the slack prior to inserting the cassette. To remove the slack, insert a pencil into the hub and rotate clockwise.

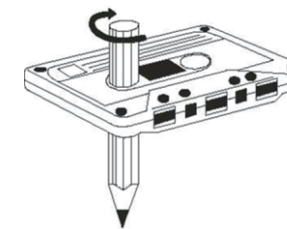

5. A leader tape is provided at the beginning on each cassette. There is no recording on this area, so it is necessary to let the tape run for about five seconds to clear the head.

8

6. Keep the tape head clean since a dirty head can cause distorted sound or improper tape speed. Depress the PLAY BUTTON (5) and use a small cotton swab with tape head cleaner or alcohol to clean the tape head, capstan and pinch roller.

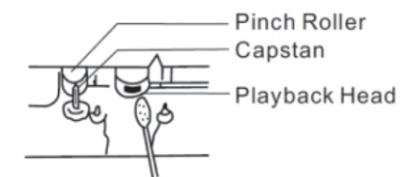

### EARPHONE

When listen to the tape, in case of disturb other people, you can use earphone.

#### CAUTION

- ◆ AVOID EXCESSIVE VOLUME LEVELS FOR LONG PERIODS OF TIME WHEN USING THE HEADPHONES. PROLONGED USE AT HIGH LEVELS MAY IMPAIR YOUR HEARING.
- ◆ Do not use earbuds while operating a motorized vehicle, as it may create a traffic hazard and is illegal in many areas.

9