



YEMA RALLYGRAF ENDURANCE TEAM WATCHES

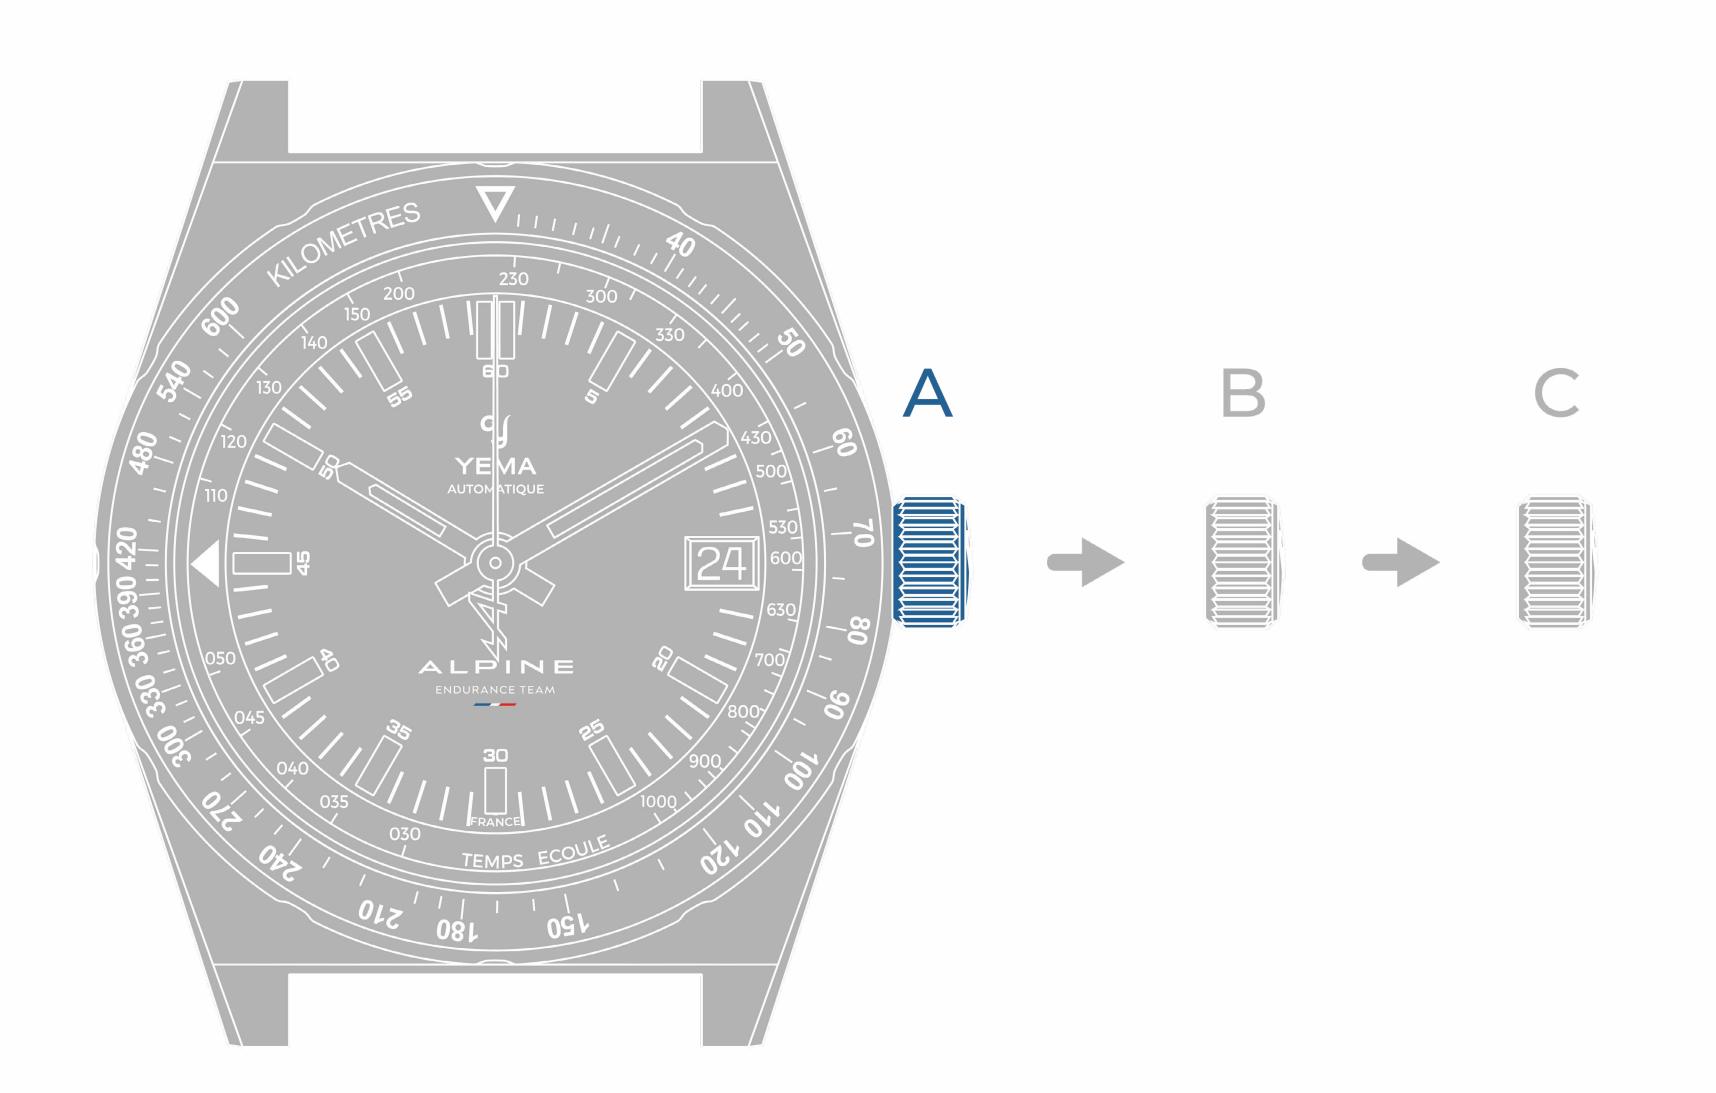

POSITION A MANUAL WINDING

Your Yema watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements alone. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if unworn for a long period of time, you will need to wind it manually by turning it clockwise.

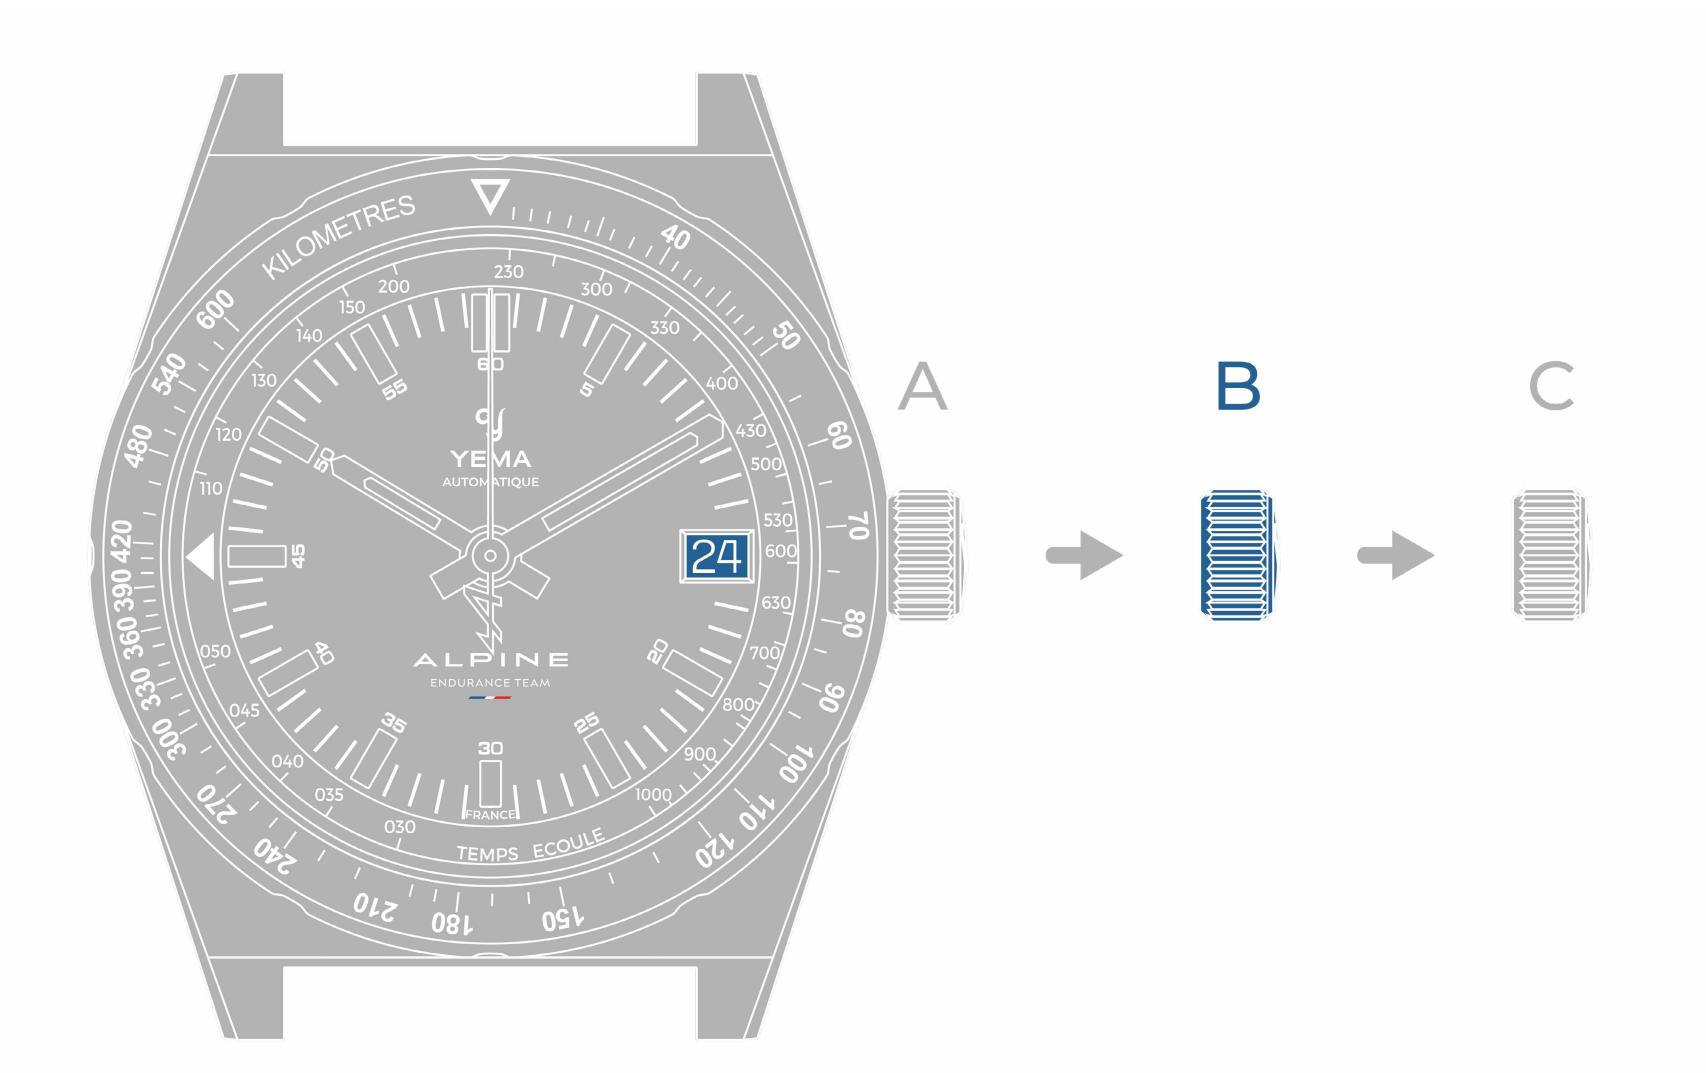

POSITION B RAPID DATE-SETTING

If your YEMA watch is equipped with a date, to adjust the date, pull the crown out to the first notch. Then simply turn it clockwise until the desired date appears in the window. During this operation, your watch will keep running.

IMPORTANT: Do not make date adjustments when the time on the watch reads between the hours of 9:00pm and 3:00am. The reason is that although a date makes its changeover close to midnight, the gears that make that change happen to engage quite a bit earlier. It takes extra time to disengage completely in the aftermath.



POSITION C TIME SETTING

In order to adjust the time, pull the crown out to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation, allowing the time to be set accurately.

BEZEL FUNCTION

The bezel helps calculate the average speed (km/h) over a covered distance (in km). The calculation of the average speed is quickly known by aligning the external rotating bezel indicating your covered distance with the internal bezel indicating the elapsed time needed to cover the said distance. After doing this, use the arrow located on the internal bezel at 9 o'clock to know your average speed. For example, if you align your external bezel at 40 km over 30min, the arrow will indicate 80km/h on your external bezel.



MAINTENANCE OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:

- Ensure that the crown is perfectly screwed down after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down against the case, your YEMA watch is guaranteed waterproof.
- · Avoid activities that may expose your watch movement to shocks.
- · Never use chemicals to clean your YEMA watch. Use a microfibre cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- · Always rinse your watch with fresh water after it's been exposed to salt water.

IN-HOUSE CALIBER: YEMA2000 POWER RESERVE: 42 H

MODELS:

YEMA RALLYGRAF ENDURANCE TEAM | YRAL23ALP-AMS YEMA RALLYGRAF ENDURANCE TEAM | YRAL23ALP-AAS

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.