

Owner's Guide

12-Volt Slow Cooker

RPSL-350

IMPORTANT SAFEGUARDS

- ▶ To protect against electrical hazards, do not immerse power plug or unit in water or other liquid.
- ▶ Slow cooker will get VERY HOT. Do not touch hot surfaces.
- ▶ Close supervision is necessary when used by or near children.
- ▶ Do not use unit for applications other than its intended use.
- ▶ When using the DC function, power with your engine on to avoid draining your battery. (Never leave engine running in an enclosed or poorly ventilated area).
- ▶ This slow cooker is designed for free standing use only.
- ▶ Do not overfill the unit. Lid must close firmly for maximum efficiency.
- ▶ Do not start craft with unit plugged into cigarette lighter socket as a voltage surge may damage unit.
- ▶ Do not place unit in direct sunlight.
- ▶ Do not use cooker if cord is damaged, inspect unit regularly.
- ▶ Do not eat perishable items that may have spoiled without proper temperature control.

ROADPRO®

Using Your Slow Cooker

- ▶ Place food/meal inside crock and place crock into cooker unit.
- ▶ Cover with see-through glass lid.
- ▶ Hook elastic cord loop on one handle, securing in notched grooves and stretch over lid to opposite handle.
- ▶ Plug power cord into cigarette lighter socket or other 12-volt power source.
- ▶ Press switch to ON position.
- ▶ Follow recipe for recommended cooking time. Keep in mind voltages may change during cooking time. Always use your discretion as to degree of preparation. Do not eat perishable items that may have spoiled without proper temperature control.

Cooking Precautions

- ▶ Slow cooker will get VERY HOT. Do not touch hot surfaces.
- ▶ Use oven mitts or pads to remove crock from outer cooker.
- ▶ Avoid sudden temperature changes, like adding cold foods into a heated crock. Frozen foods can be used but add sufficient water to prevent uneven cooking or burning.
- ▶ Do not use crock directly on stove top heating elements.
- ▶ Do not overfill the unit. Lid must close firmly for maximum efficiency.
- ▶ Carefully watch smaller quantities of food in crock as they may burn.

Cleaning Your Slow Cooker

- ▶ Always unplug unit before cleaning.
- ▶ Wipe the outer cooker with a damp cloth and mild soap. Never use harsh abrasive cleaners. A mild baking soda solution works well.
- ▶ Never submerge outer cooker in any liquid.
- ▶ Lid and crock are dishwasher safe, or both may be cleaned with dishwashing detergents and hot water.
- ▶ To wash crock immediately after meal use Warm or Hot water; Cold water may damage crock.

ROADPRO 90 DAY LIMITED WARRANTY

This RoadPro product is guaranteed to be free from defects in workmanship and materials for 90 days from the purchase date. Within 90 days of purchase, the product (along with proof of purchase date) may be returned to RoadPro, 1875 Zeager Road, Elizabethtown, PA 17022, freight prepaid and we will repair it, or at our option, replace it at no additional charge. Limitations of this warranty include: implied warranties, payment for loss of time, inconvenience, loss of use of your product or property damage caused by your product or its failure to work, or any other incidental or consequential damages including personal injury. This warranty does not include defects resulting from accidents, damage while in transit to our location, unauthorized repairs, misuse, fire, flood, or acts of God. When returning products to RoadPro please carefully pack and send along with your name, address, phone number, proof of purchase date (register receipt), and a description of the operating problem.

RoadPro — 1875 Zeager Road — Elizabethtown, PA 17022
Customer Support Toll Free: (866) 622-7979 — Mon~Fri 8:30am~5:00pm (e.s.t.)