

SUB 37 EDITOR

USER'S MANUAL

SUB 37 EDITOR / LIBRARIAN



The Sub 37 Editor/Librarian is a tool for sound design and preset management. Its plug-in version makes it easier to automate Sub 37 parameters from within your DAW software, while the standalone version is ideal for patch management.

UI INTERACTION

KNOB ADJUSTMENT

- Click and drag any knob vertically for coarse adjustment.
- While holding Ctrl, Command or Shift, click and drag any knob for fine adjustment.
- While hovering the cursor over any knob, use your scroll wheel for coarse adjustment.
- While holding Alt or Option, clicking on a knob sets it to its default position.
- Double-click any knob to type in a numeric value for that parameter.

SLIDER ADJUSTMENT

• Click and drag sliders to adjust them; simply clicking a location on the slider does not set it to the desired value.

RESIZING THE UI

- Click the grey triangle in the bottom center tab of the Editor to show/hide the extended Sub 37 parameters window.
- Click and drag the edge of the window to optimize the UI size for your computer.

PRESET BROWSER



The Preset Browser allows you easily navigate the presets on your Sub 37 as well as the presets on your computer.

- Click the **PRESET NAME** box to view and select presets. You can also click on the arrows to scroll through presets in the selected category.
- Set **CATEGORY** to **ALL** to browse all presets, or select a specific category to see only presets of that category on the presets list.

NOTE: You can also right-click on a Preset Name to rename it.

SAVE

Saves all changes to the current preset.

WARNING: This will overwrite the active preset in your library or hardware.

SAVE AS

Allows you to name and save a current preset as a new file in your Preset Library or on your Sub 37.

NOTE: When you complete a "Save As" in the Editor, the new preset name will also appear on your Sub 37's hardware LCD screen, even though it is not saved to the hardware. If you would like to save this preset to hardware, you will need to drag it into the **HARDWARE PRESETS** list on the **LIBRARIAN** page. You can also perform a manual **SAVE** operation on the hardware by pressing the **SAVE** button on your Sub 37.

CAPTURE HARDWARE

Imports your current Sub 37 hardware settings into the Editor. Capture Hardware is useful if you have adjusted a sound prior to opening the Editor, or if you want to import a new unsaved sequence.

NOTE: Current settings will need to be saved or they will be discarded when you load a new preset.

RANDOM PRESET

Generates an almost completely random preset, which may or may not be useful. (Eventually you might stumble onto something cool.)

INIT PRESET

Loads the default Sub 37 "Init Preset" settings.

MOOG ICON

Flashes when MIDI data is sent or received by the Sub 37 Editor.

PAGE SELECTOR



The **PAGE** selector in the top-left corner of the Editor determines which UI page is active in the Extended Parameters section at the bottom of the editor. The **EDITOR**, **SEQUENCER**, **SETUP**, and **MAPPING** pages are only displayed in the bottom (fold-up) UI section, while the **LIBRARIAN** button opens the Preset Library interface.

EDITOR

The lower UI section of the Editor shows the advanced Sub 37 parameters found in the Sub 37's **PRESET EDIT** menu. **NOTE:** All of these parameters are saved per preset.



SEQUENCER

The lower UI section of the editor shows a graphical Editor for the Sub 37 sequencer, as well as the extended **SEQUENCER** parameters found in the Sub 37's **PRESET EDIT** menu.

RATCHET		STE	P SETTI	NGS				_		MOE	DULATIO	N	_								MEMOR	Y					_		SEG	UENCER	PAGE		
] FIRST ST	¢ EP	30 LAST ST	¢ EP		SEQUER	EVEL I CE MOI	D DESTIN	ATION	-	OF M	F I	ф іт ,		11.4			E S	SAVE	E C	DISCARI	o RA S		IZE		1-16		17-32		33-48		49-64
STEP NUMBER		1		2		3		ł	5	5	(5		7		8	9	Ð	1	.0	1	1	1	2		13		14		15	1	6	STEP NUMBER
РІТСН 1	[D0		00	[01	C	0	D	0	D	0		51	[D0	D	0	C	00	C	01	C	00		00	[01		00	C	00	рітсн 1
PITCH 2	C	2-2	C	-2	C	-2	C	-2	C-	-2	C-	-2	C	2-2	C	-2	C	-2	C	-2	С	-2	С	-2	C	-2	C	-2	С	-2	С	-2	РІТСН 2
VELOCITY	1	.12	1	20	1	26	1	16	1()4	1(06	1	.26	1	22	1	10	1	22	1	26	1	26	1	16	1	26	1	26	1	16	VELOCITY
MODULATION		0		0		0	()	()	()	1	0		0	()	(0	1	0		0		0		0		0	(0	MODULATION
REST / TIE	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	REST / TIE
SKIP / RATCHET	sк	RT	ѕк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	ѕк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	ѕк	RT	sк	RT	sк	RT	SKIP/ RATCHET
ŀ																-		1															

NOTE: All Sequencer data is saved per preset. You can also save individual sequences to your computer.

SEQUENCER PAGE



Sequence data is displayed using four 16-step pages; **SEQUENCER PAGE** selectors are located in the upper-right corner of the Sequence editor.

SEQUENCER MEMORY



LOAD SEQUENCE

Loads a previously saved .seq file from your computer to the Editor.

SAVE SEQUENCE

Saves the current sequence to your computer as a .seq file.

DISCARD CHANGES

Loads the sequence data most recently received from the hardware to the Editor.

WARNING: This discards any sequence changes you've made within the editor since loading a preset or capturing from hardware.

RANDOMIZE

Creates an almost completely random sequence.

NOTE: Ratchet Multiple, FIRST/LAST STEP and MODULATION settings are not randomized.

MAIN SEQUENCE

This data window allows you to set all the per-step parameters of a sequence.

1		2	!		3	4	4		5		5		7		8	9)	1	0	1	1	1	2	1	3	1	4	1	5	1	.6	STEP NUMBER
D	0	D	0	C	01	D	0	C	00	C	0	C)1	C	0	D	0	C	0	D	1	D	0	D	0	D	1	D	0	C	0	рітсн 1
C-	2	C-	-2	C	-2	C.	-2	C	-2	С	-2	C	-2	C	-2	C	-2	C	-2	C	-2	C	-2	C.	-2	C-	-2	C-	-2	C	-2	рітсн 2
11	2	12	20	1	26	1	16	1	04	1	06	1	26	1	22	1	10	1	22	17	26	12	26	1	16	12	26	12	26	- 1	16	VELOCITY
0		()	(0	(0	(0		0		0	(0	()	(0	(0	()	()	()	(0	(0	MODULATION
R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	R	т	REST / TIE
sк	PT	sк	RT	sк	RT	sк	RT	sк	PT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	sк	RT	SKIP / RATCHET
	C- 11 0 R		C-2 C- 112 12 0 C (12 12	C-2 C-2 112 120 0 0 R T R T	C-2 C-2 C 112 120 12 0 0 12 R T R T		C-2 C-2 C-2 C-2 C 112 120 126 1 0 0 0 0 R T R T R T				$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	C-2 C-2 C-2 C-2 C-2 C-2 C-2 C-2 C-2 112 120 126 116 104 0 0 0 0 0 0 0 R T R T R T R T R T R T R T	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $		$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	$ \begin{array}{c c c c c c c c c c c c c c c c c c c $		$ \begin{array}{c c c c c c c c c c c c c c c c c c c $			

• STEP NUMBER is indicated across the top of the grid.

NOTE1 : Steps outside of the FIRST STEP, LAST STEP range are greyed out, but you can still edit them.

- Click and drag a value up or down to edit.
- Double-click a value to manually enter a new one. **NOTE 2 :** The per-step MODULATION value is bipolar, meaning the center value (0) causes no modulation. Values -128 to -1 create negative modulation, while values from +1 to +127 create positive modulation.

SETUP

		GLOBAL SETTING	GS		SEQUENCER	OPTIONS	EDITOR SETTINGS			MIDI SETTINGS		
	0.0 C	PRESSURE CAL		LOCAL CONTROL	MID C		M006 SUB 37					UT FILTERS
		¢ 005										 14 BIT 7 BIT
Torrito boate		MIN	TUNE POT EDIT	KEYS						OFF	KEYS	
PER-PRESET LAST NOTE	RELATIVE	8192 🚖	_		REF NOTE	LATCH RESTART	MOOG SUB 37 🛛 🔻	IN CHANNEL	IN PORTS	POLY NUMBER		RESOLUTION
HIGH NOTE	PASS-THROUGH	MAX	LOAD PRESET MW	WHEELS			MIDI OUTPUT		CO USB		WHEELS	NRPN
O LOW NOTE		700			PAGE	DELAY						o cc
		200 ¢			CHASE	PGM CHG	PLERSE CHOOSE -			T E		
KB PRIORITY	POTMODE	SLEW	MENU WRAP	PANEL			KB CONTROLLER	OUT CHANNEL	OUT PORTS	POLYMAX	PANEL	CONTROLLER TYPE
RESTORE			LCD CONTRAST		ARPEGG	IATOR						
DEFAULT	START / STOP	0%	•	100%	KEYS O OSEC	·				PGM CHANGE	O ARP	
			LED BRIGHTNESS		MIDI	PHASE	VERTICAL VIERTICAL VERTICAL	ЕСНО	ECHO		SEND	SEND FOLLOW
GLOBAL SETTINGS	NOTE CALIBRATION	0%		100%	OUT MODE	RESET		DIN IN	USB IN	SEND RECEIVE		ST/STP SPP
							Editor 0.9.39 Sub 37 1.1.0					
						-	1					

The **SETUP** page lower UI section mostly contains items from the Sub 37 **GLOBAL** and **MIDI** menus, as well as the settings for the Editor itself. In the **EDITOR SETTINGS**, you can select the MIDI Input and MIDI Output ports the Editor uses to communicate with the Sub 37, as well as a separate MIDI Input port for a Keyboard (KB) Controller. The KB Controller is primarily useful with the standalone editor, if you want to use a master control keyboard to trigger the Sub 37. For the Editor plug-in, you would generally use your DAW settings to route MIDI from a controller keyboard to the Sub 37, outside the Editor plug-in.

Additional EDITOR SETTINGS include KNOB RESPONSE (vertical or rotary mouse movement to adjust knobs) and ECHO MIDI (routes all MIDI sent into the plug-in directly out to the connected Sub 37).

Additionally, the Editor software version number and connected Sub 37 firmware version number are displayed at the bottom of the **EDITOR SETTINGS** panel.

NOTE: Global settings are not saved per-preset.

CV MAPPING			MIDI CC N	AAPPING	
	1 MOD WHEEL	23 F EG ATTACK		77 OSC2 HARD SYNC	99RESERVED
DEFRULT	2RESERVED	24 F EG DECRY		78 LFO2 RANGE	100RESERVED
EXT VOL MAP	3 LFO1 RATE	25 F EG SUSTRIN		79 F EG KB TRACK	101RESERVED
	4 MOD1 PITCH RMT	26 F EG RELERSE		80 R EG KB TRRCK	102 GLIDE OSC
EXT GATE	5 GLIDE TIME	27 FILTER EG AMT		81 OSC KB RESET	103 F EG DELRY
INVERT	6RESERVED	28 R EG ATTACK		82 F EG RESET	104 R EG DELRY
MAP PER RESTORE PRESET DEFAULTS	7 OUTPUT VOLUME	29 A EG DECAY	•	83 R EG RESET	105 F EG HOLD 🔻

MAPPING

The MAPPING page lower UI section shows settings for CV MAPPING and MIDI CC MAPPING.

CV MAPPING is the same as is found in the hardware GLOBALS menu.

MIDI CC MAPPING allows you to associate any allowed **MIDI CC** with any Sub 37 parameter. Mapping a parameter to a new CC number will clear any mapping of that parameter to a previous CC number.

NOTE: If **MAP PER PRESET** is turned **ON**, then the **PITCH**, **VOL**, and **GATE** mapping will change per preset. **MIDI CC MAPPING** is global for the Sub 37 and cannot change per preset.

RESTORE DEFAULTS

This will set both the CV MAPPING and MIDI CC MAPPING to their factory default settings.

LIBRARIAN

PAGE		Sub 37 Editor	413/4
		alassing transferration and the set of the s	SAVE SAVE AS CAPTURE BANDOM INIT HARDWARE PRESET
	PRESET LIBRA	ARY	HARDWARE PRESETS
IMPORT BANK EXPORT BANK NEW FOLE	FR SHARE PRESETS	SEARCH PRESETS	GET SEND AUTO SEND
RESET FOLDERS	CATEGORY V	PRESETS A	NUMBER PRESETS
Factory Presets		COLD NOISE	B10-P13 Push Up _JM
User	SE SYNC (BRESET HIRANGE	CRAFT LABOR	B10-P14 Robot Anger _JM
	AMT LIERAMT PITCH AM	CYBRASS octave wave	B10-P15 Sascha _JM
		DAILY GRIND	B10-P16 Selection15 JM Cover Book Subtaining Butain
	PADS	DARK MINDS	B11-P01 Shortwave _JM
	PERCUSSION	DIRTY DRUM	B11-P02 SkyFi _JM
	DUO	 Dirty Organ Distortech 2MW is Accent 	B11-P03 Space Slap _JM
	SEQUENCE		B11-P04 Spring _JM
	SEQUENCE	Distortech MW is Accent Dorian Electra	B11-P05 Unstable _JM
	SEQUENCE	Dorian Electra Dr. Press Growl	B11-P06 Wormhole MulJMid RESET SYNC LOOP LATCH
	MISC	Dr. Press Growi Duo Distort Artifacts	B11-P07 Init Preset
	DUO	DUO ORG	B11-P08 Init Preset
	DUO	DUO WAVE MOD	B11-P09 Init Preset
		Duotronic Moogtrons	B11-P10 Init Preset
	DUO	Eastern Alliance	B11-P11 Init Preset
	PERCUSSION	Echo Chirp	B11-P12 Init Preset revelops B11-P13 Init Preset serve constant constant
	1/64 DUO	ELEKTPOHNKA Telekom Net	B11-P13 Init Preset
	SOUND FX	EMO ALIENS	B11-P14 Init Preset
	MISC	EuroSynth- Tastic	B11-P15 Init Preset
	SYNC MISC	FAN+CB A S S	B12-P01 Init Preset
	5.4.7. C	FEEDBACK BEAT PATTERN	B12-P02 Init Preset
	FICI 6 HIUUTPAIIE	FRETTED BASS	B12-P03 Init Preset
	PO SEC POM DEST	funk bass	B12-P04 Init Preset
		Funk Cowboys	B12-P05 Init Preset
		Gamecom 8BitChiptime Fun	B12-P06 Init Preset
	source	Gyro House	B12-P07 Init Preset
		Hard Sync Hijinxx	B12-P08 Init Preset
		HELICCOPPER	B12-P09 Init Preset
		HERE HE COMES	B12-P10 Init Preset

The Librarian page is divided into two sections: **PRESET LIBRARY** and **HARDWARE PRESETS.**

The **PRESET LIBRARY** section shows presets that are saved on your computer.

The HARDWARE PRESETS section shows a local copy of the presets that are saved in your Sub 37's internal memory.

NOTE: These presets are also saved on your computer.

The first time you use the Sub 37 Librarian, you may need to click the **GET** button in the **HARDWARE PRESETS** section in order to download all the presets from your Sub 37 into the Librarian.

NOTE: Downloading all the presets takes about three minutes.

PRESET LIBRARY

		Sub 37 Editor	
PAGE	l	PRESET BROWSE	R
EDITOR SEQUENCER SETUP MAPPING		THE CATEGORY	VE SAVE AS CAPTURE PARDOM INIT HARDWARE PRESET PRESET
	PRESET LIBRAR	Y	HARDWARE PRESETS
	_	×	
IMPORT BANK EXPORT BANK NEW FOLDER	SHARE PRESETS	SEARCH PRESETS	GET SEND AUTO SEND
PRESET FOLDERS		PRESETS A	NUMBER PRESETS DUG-PTI KUDDER GIGSS
Factory Presets		THE INTRO TOTHAT ONE	B08-P12 What Time Is
User	SOUND FX	THE L TRAIN	B08-P13 Funk Cowboys
	MISC	The New Disco	B08-P14 Space Banjo MW is Rate
	SOUND FX	The Triax Paradox	B08-P15 Mushrooms InA Corn Field
	DUO	The Zaxxor Chronicles	B08-P16 ACROSS THE SKY
	MISC	TouchBass	B09-P01 Up in the Sky
	EVOLVING	Trajectory Achieved	B09-P02 Tastes Metallic
	EVOLVING	Trill Pickles at Duo Mode NOISE	B09-P03 TRIPLET 5THS
	CLASSIC BOTH		B09-P04 InterstellarExpress
	SYNC	Underground Transit	B09-P05 IntercranialVoyager
	DUO	Up in the Sky	B09-P06 Sweet Lead
	DUO 121 OEST C	Werkers Unite	B09-P07 3 O'Clock JM
	SEQUENCE	What Time Is	B09-P08 Break Glass _JM
	DUO	Zaxxor's Revenge	B09-P09 Brick JM

Click on any folder in the **PRESET FOLDERS** section (left column) to select it. The presets in that folder will be shown in the center column.

FROM HERE YOU CAN PERFORM THE FOLLOWING ACTIONS:

- Double-click a preset This will load the selected sound to your Sub 37's edit buffer so you can hear it, but it is not written to the Sub 37 at this time. The selected preset is also loaded to the Editor window where you can view and adjust its settings.
- Right-click a preset This will allow you to rename a preset as well as copy, paste, delete, change Category, or reveal the preset file on your hard drive.
- Drag and drop presets This will allow you to move presets between the Sub 37 Editor's Preset Library and the connected Hardware Presets lists. To load a preset from your library into the Sub 37, drag it from the **PRESET LIBRARY** (center column) to the **HARDWARE PRESETS** list (right column), and drop it onto the hardware preset you want to replace. You can also drag a preset from the center column and drop it onto a different folder in the left column to move the preset to that folder.

SEARCH PRESETS

The **SEARCH PRESETS** bar allows you to filter the presets shown in the center column according to any text you type into the Search bar. Click the [X] to clear any search text and show all presets in the selected folder.

PRESET LIBRARY BUTTONS

IMPORT BANK

Loads an entire bank of presets from a saved file on your computer to the Sub 37 hardware. This will replace all 256 presets on your Sub 37 with the contents of the bank file.

NOTE: It takes about three minutes to import the entire preset bank to a Sub 37.

PRESET LIBRARY BUTTONS (continued)

EXPORT BANK

Downloads the entire bank of 256 presets from your Sub 37 hardware and prompts you to save them as a single "preset bank" sysex file on your computer. This bank can be loaded back to the hardware (or to any other Sub 37) using the **IMPORT BANK** button.

NOTE: It takes about three minutes to export the entire preset bank from a Sub 37.

NEW FOLDER

Creates a new subfolder within the **PRESET LIBRARY.**

SHARE PRESETS

Opens an email client with any currently selected presets attached. You can use this feature to email presets to yourself, or share them with other Sub 37 users.

HARDWARE PRESETS

FROM HERE YOU CAN PERFORM THE FOLLOWING ACTIONS:

• Double-click a preset – This action in the **HARDWARE PRESETS** list will cause the Sub 37 to load the selected preset from its internal memory.

NOTE: PGM CHANGE RECEIVE must be enabled in the Sub 37 Global Settings.

• Select one or more presets and drag to a presets folder – This action in the **HARDWARE PRESETS** list will allow you to copy one or more presets from your Sub 37 to any folder in the Sub 37 Editor's **PRESET LIBRARY**.

NOTE: Dragging a preset from the **PRESET LIBRARY** to the **HARDWARE PRESETS** list will load that preset to the Sub 37's hardware memory and overwrite the existing preset.

• Swap hardware-preset locations – Drag and drop a preset within the **HARDWARE PRESETS** list to a new location to swap hardware-preset locations.

Ex: Dragging hardware preset 1 to hardware preset 4 will move hardware preset 1 to hardware preset location 4, and hardware preset 4 will be moved to hardware preset location 1.

GET

Requests that all presets from the Sub 37 be sent to the editor.

NOTE: It takes about three minutes to load the entire preset bank from a Sub 37.

SEND

Outputs the current "hardware presets" list from the Sub 37 Editor to the Sub 37.

AUTO SEND

If AUTO SEND is active, then any changes made to the HARDWARE PRESETS list in the Editor will be automatically sent to the hardware, and written to the hardware preset memory. If AUTO SEND is not active, then changes made to the HARDWARE PRESETS list in the Editor will be shown in italics, and will not actually be sent to the hardware unless the SEND button is pressed.

NOTE: Double-clicking a preset in the **PRESET LIBRARY** automatically sends it to the hardware "edit buffer", but doesn't write anything to permanent memory. Information in the edit buffer is discarded when you change presets, unless you manually save on the hardware first. This is always the behavior when clicking around in the **PRESET LIBRARY** and is not affected by **AUTO SEND**.

SUB-37 EDITOR PLUG-IN OVERVIEW

The Sub 37 Editor / Librarian comes as both a standalone application and a plug-in (VST, AU, AAX and RTAS) for use within a DAW. While both are essentially identical, it should be noted that the editor plug-in is not a virtual instrument and does not process or output audio.

PLUG-IN EDITOR CONFIGURATION

Configure your DAW in the same way you would when using any external hardware instrument - with MIDI connected via USB or DIN, and audio connected from the output of the Sub 37 to your audio interface.

Once configured, you can insert the Sub 37 Editor plug-in on the effects insert of any track.

NOTE: Only one instance of the Sub 37 editor is supported within a project. Because it is only an editor and cannot multiply the number of Sub 37s you own, this is generally not a problem.

The Sub 37 Editor plug-in uses its own MIDI connection to communicate with your Sub 37, independent from the Audio/MIDI settings in your DAW. This MIDI connection is configured in the editor **SETUP** page under the **EDITOR SETTINGS** section. Simply go to the **MIDI INPUT** and **MIDI OUTPUT** tabs and select Sub 37. This is the same page as the standalone editor.

Turning knobs on your Sub 37 will now move the virtual knobs in the plug-in. These tweaks can be recorded and played back as parameter automation. You can also add preset changes to the plug-in on your MIDI tracks.

NOTE: The state of the plug-in (and the associated Sub 37 hardware settings) are saved and restored from your DAW.

WARNING: Before using your Sub 37 with a DAW, go to the **GLOBAL SETTINGS** section of the **SETUP** menu. Under the **LOCAL CONTROL** section – turn Keys, Wheels and Panel **OFF** to prevent MIDI issues. Be sure to turn these back **ON** when not in use with a DAW. If you do not do this, Local Control will be turned off and your Sub 37 will not produce sound.

PLUG-IN USE NOTES

A number of DAW programs offer an "external instrument" device, which handles MIDI and audio on a single track. In this case, you can use the Sub 37 Editor on the same track that is hosting the external instrument device for the Sub 37.

If you prefer to keep your Sub 37 audio on its own audio track, then insert the editor like an effect on an audio track. Since the Sub 37 editor uses its own MIDI connection to the synthesizer, it doesn't matter what track is hosting the editor plug-in.

IMPORTANT NOTE FOR WINDOWS USERS: Windows does not allow more than one program to use a USB MIDI device at a time, which can cause connection issues if you are trying to use the Sub 37 USB port for both your DAW and the editor at the same time. You can use this setup (and in fact it's ideal) but to do so in Windows requires the Moog USB MIDI Driver for Windows to be installed. Look for the Moog USB driver installer located in the Windows installation folder of this release package.

©2016 MOOG MUSIC INC. | 160 Broadway St. Asheville, NC 28801 Moog is a registered trademark of Moog Music Inc. The Moog Wordmark is a registered trademark of Moog Music Inc. The Moog Icon is a registered trademark of Moog Music Inc. All rights reserved to Moog Music Inc. on all text & graphics here within.

Phone: 828.251.0090 Email: info@moogmusic.com Website: www.moogmusic.com