

C800 Display

OWNER'S MANUAL



Our Team is here to help 7 days a week
contact@evelo.com | 877-991-7272
Feel free to reach out!

Display and Keypad



ON/OFF and Lights

Press the ON/OFF button to power on the bike. Press the ON/OFF button again to turn on the lights, and again to turn them off. Hold down the ON/OFF button for three seconds to turn the bike off.

Speedometer

The speed is shown in the middle of the screen. You can choose miles or kilometers in the settings menu.

Pedal Assist Level Selection

Press the + or - button to select your pedal assist level. You can choose from 0 to 5, with 0 being no assistance and 5 the most assistance.

Battery Indicator

The battery frame has five segments, each representing 20% of the battery's capacity. When the battery is full, the five battery segments are all lit. When the outside edge of the battery frame flashes it indicates that the battery is severely low and needs to be recharged immediately.

Riding Mode Selection

There are three modes for riding that can be selected using the SET button, including POWER STD and ECO. The default option is STD. You can adjust this setting on the display, but this function is not used on your bike. All modes will work the same.

Error Code Indicator

If there is something wrong with the electronic control system, the error code and error message will display in the top of screen.

Settings Menu

MENU	<< General Setup	<< General Setup
1.General Setup	1.1.Trip Clear N	⌵
2.Advanced Setup	1.2.Brightness 5	1.6.Battery 36V
3.Infomation	1.3.Speed Limit 99	1.7.Mode ECO
4.Save & Exit	1.4.Wheel Size 20	1.8.Exit
	1.5.Units KMH	
	⌵	

Settings Menu


Hold the **SET** button for 2 seconds to enter the Settings menu, click + or - to select the item, then click **SET** again. When the color of the setting item turns green, then press + or - to select the desired parameter, and after the parameters have been changed, click SET again. The color will turn white to indicate the change to the setting is complete.

Trip Clear

N means NO

Y means YES

Select "Y" and when you return to the main interface, you will find the Trip Odometer has been cleared.

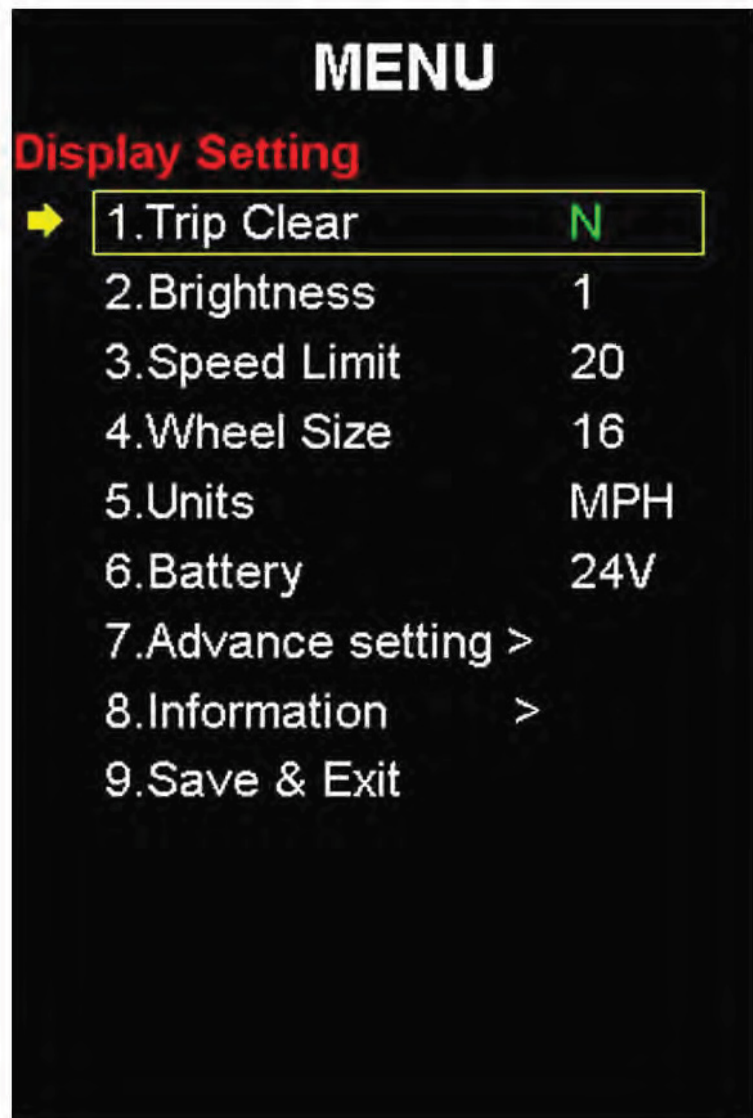

Settings Menu

Speed Limit

The max speed is 20 mph by default. When you reach that specified speed, assistance will be turned off. The limit can be raised as high as 25 mph, but you should check your local laws before doing so.

Wheel Size

Select the correct wheel size for your bike. For Galaxy Models it's 24, the Dash is 20, and Aurora is 26.

Units: KMH and MPH

Select MPH or KMH for the speed and mileage.

Battery

The battery voltage can be set to 24V, 36V or 48V. Galaxy and Dash models are 36V, while Aurora models are 48V. The bike will malfunction and possibly be damaged if you choose an incorrect voltage.

Advance Setting

No changes are available.

Information

Lists the hardware and software version numbers.

Save & Exit

Click SET, the changes will be saved and the setting interface will close.

Auto Sleep After 5 Minutes

When the bike does not move for 5 minutes, the system will power down automatically.