



TWO ROOM POP-UP OBSERVATORY TENT INSTRUCTIONS

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

- **DO NOT** use fuel burning devices inside or near tent materials.
- **DO NOT** permit children to light matches, operate burning appliances, or handle any flame sources in or near the tent.
- **DO NOT** smoke, use matches, candles or open flames of any kind in or near the tent.
- **DO NOT** refuel lanterns, stoves or heaters inside tent.
- **DO NOT** cook inside tent.
- **DO NOT** store flammable liquids inside tent.

BEFORE YOU BEGIN

Read all instructions thoroughly before beginning set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your tent.
- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.

SCAN THE QR CODE TO VISIT OUR PRODUCT PAGE TO VIEW OUR "HOW TO SET UP" VIDEO.



WHAT'S IN THE BOX



60" X 60" TENT



EXTENSION TENT



120" X 180" TOP COVER



12 PARACORDS WITH CORD LOCKS



12 GROUND STAKES



#1. Grab the 60 x 60 tent and extension tent. Carefully expand and set aside.

CAUTION: This structure uses a spring steel loop that will pop open quickly!




#2. Stand the 60 x 60 tent upright, open and pull from the center to form the structure.



NOTE: Some twisting of the steel loops might be necessary to form the correct shape.





#3. Open both entrances and roll the door flaps. Use the attached straps to tie the flaps.

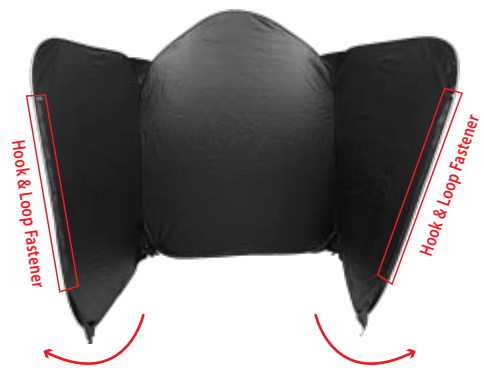

#4. Stand the extension tent upright, open each side and locate the hook and loop fasteners.

#5. Locate the hook and loop fasteners on the 60 x 60 tent.

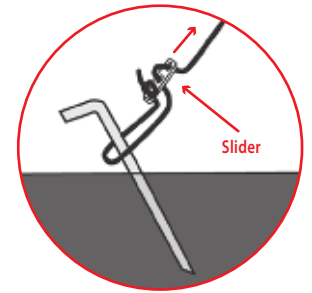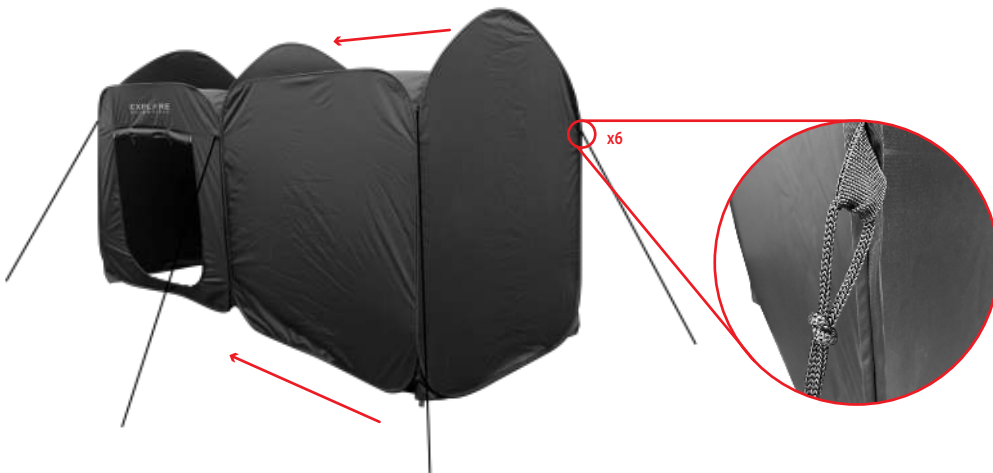

#6. Attach the extension tent to the 60 x 60 tent with the hook and loop fasteners.

#7. Take the paracords and insert one on each top corner loop of the tents. Make a knot of your choice to secure.

#8. Hammer stakes into the ground and extend the paracords out at a 45° angle from the tent.

Optional: For a more secure structure, slide stakes through each bottom loop corner and hammer into the ground.

Tighten the paracords as needed by adjusting the slider up the cord.


NOTE: Tents should be taut when staked properly.

#9. Use the 120 x 180 top cover for temporary protection when not in use. Follow Steps #7 and #8 to secure the top cover.


NOTE: Use the same stakes from Step #8 to attach the paracords. Top cover should be loose and not taut to keep the structure up.




HOW TO FOLD AWAY

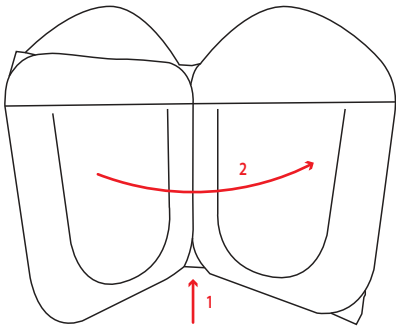


Start with the 60 x 60 tent, push one corner into the opposite corner and fold down the center flat.

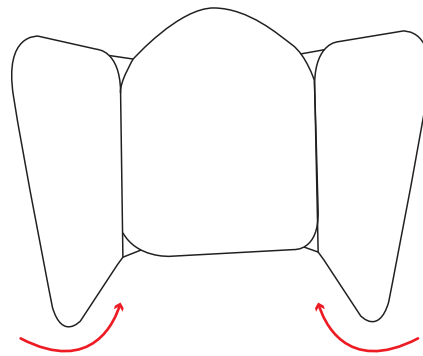


Extension tent, fold each side panel to the inside flat.

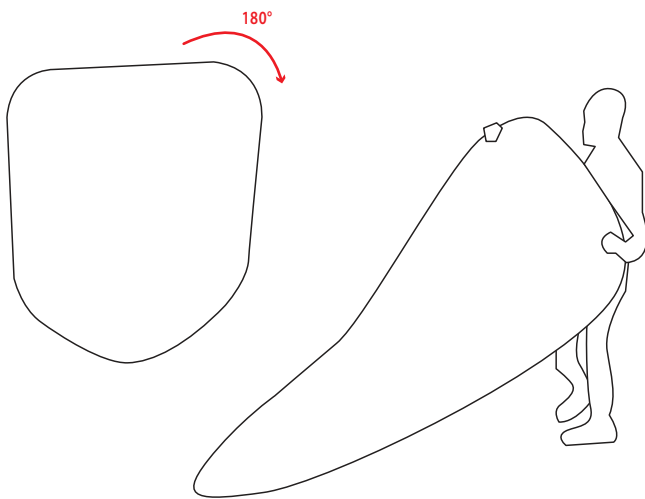


Rotate tent 180° and hold as shown with the peak pointing away from you.

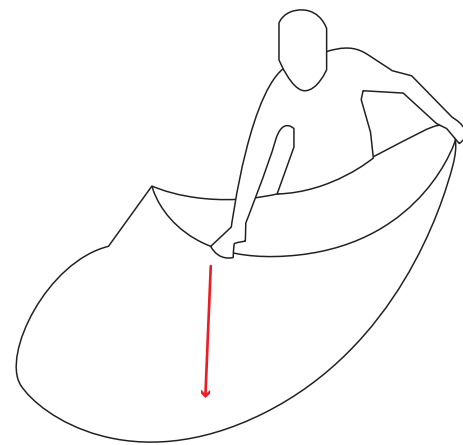

Take one corner and connect it to the opposite corner.

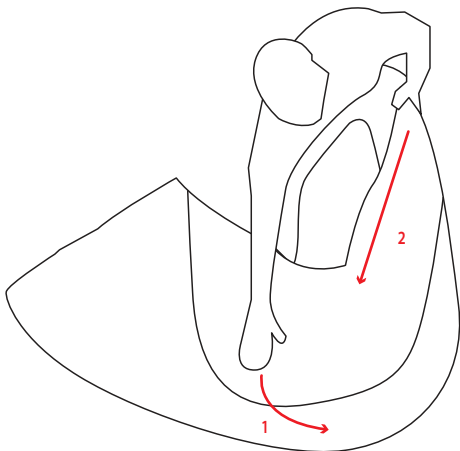

Slide the top corner to the left.

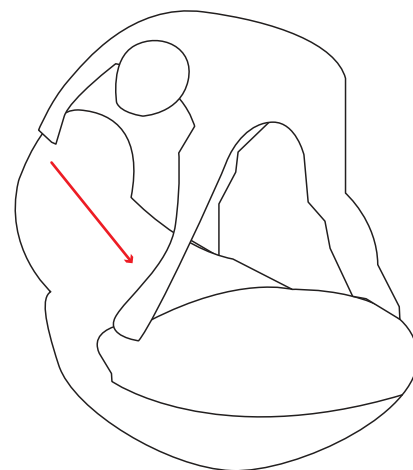

Fold in the circles that are formed on each side.