



***LEUPOLD***<sup>®</sup>

**SENTINEL  
LENS REMOVAL  
AND INSTALLATION**

**⚠ WARNING:** THE REMOVAL AND INSTALLATION INSTRUCTIONS MUST BE FOLLOWED IN ORDER TO AVOID INJURY TO PERSONS AND DAMAGE TO A LENS. NEVER USE OR WEAR ANY LENS INSTALLED IMPROPERLY OR DAMAGED IN ANY WAY. SUCH USE OR WEAR MAY CAUSE SERIOUS INJURY.

## LENS REMOVAL

*Note: The lens must be removed in this order to avoid damage.*

1. Push button to release lens



2. With the button pushed in, pull the center of the lens out of the frame



3. Remove the outer edges of the lens from the frame



## LENS INSTALLATION

*Note: The lens must be installed in this order to avoid damage.*

1. Twist nose bridge out of lens



2. Snap nose bridge into replacement lens



3. Install outer edges of the lens first



4. Snap center of lens into frame



***LEUPOLD***<sup>®</sup>

WWW.LEUPOLD.COM

In no event shall Leupold & Stevens, Inc. be liable for any direct, indirect, incidental, special, consequential, punitive damages, or injuries to persons or property whatsoever that arises out of, relates to, or is connected with any misuse or improper installation or removal of a Sentinel lens.

ARTWORK # 183192