


MULTI-CAMERA DVR 1 to 4 1080P CAMS with 7" LCD QUICK START GUIDE

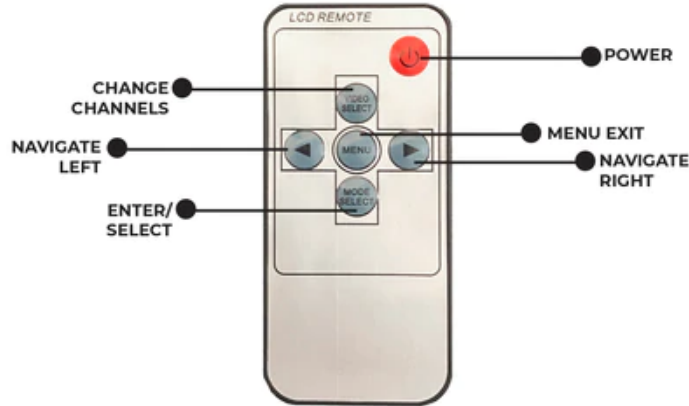

Initial Setup Instructions

Key Notes:

This System will always be recording when powered. To access Menu, DVR must not be recording and in single camera view.


Make sure device is off before inserting SD Card. Format SD Card when using for the 1st time. Recommended to format once a month.

Format SD Process: Use Remote

Press Menu>System>Format> Highlight Format>Select Yes> and Press Mode Select button to Confirm>Automatically Exits to Main Camera View. Press Mode Select to Record

How to Set Time & Date Process:

Press Menu> Date Settings by pressing Mode Select Button> Use arrows to change> Press Mode Select to move to next section. Select Menu to Exit to main camera view. Press Mode Select to Record

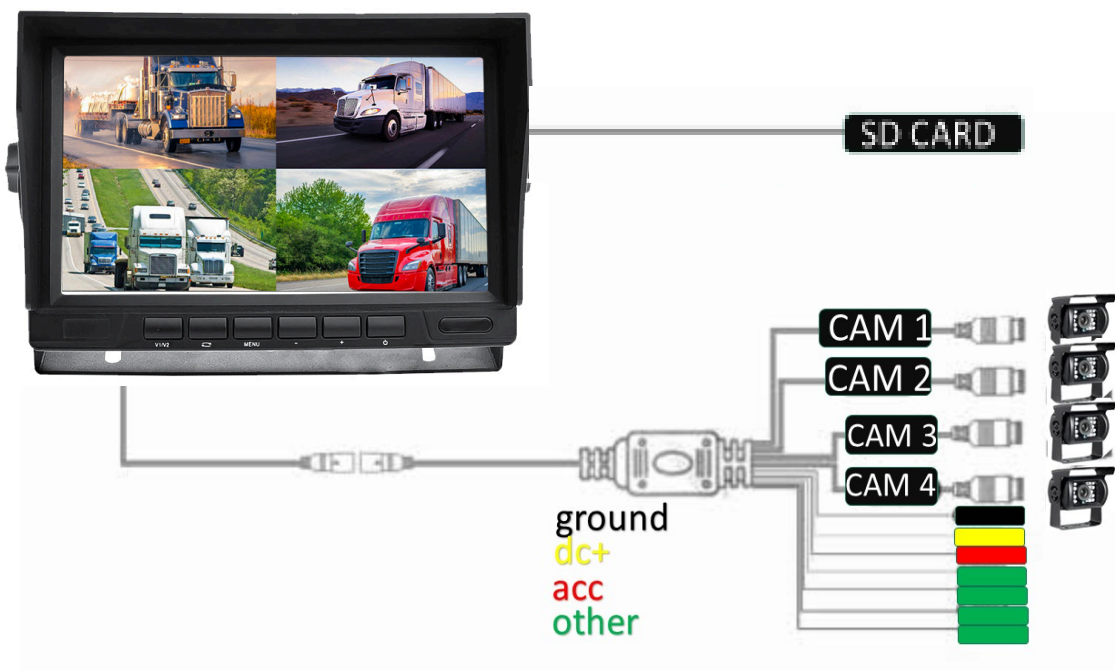

Powering Unit

Black Wire to a ground source

Tie dc+ wire and acc wire together and connect to a power source