
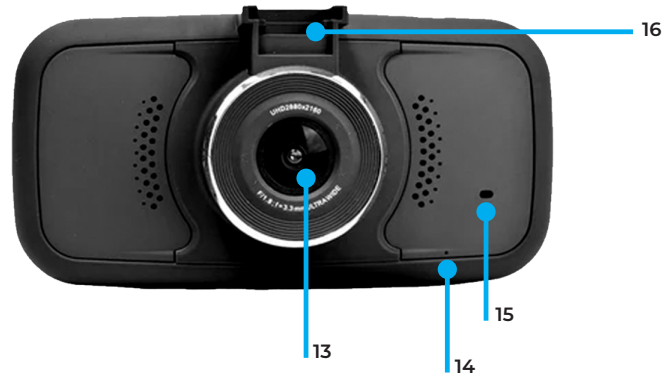


Quick Start Guide

EagleEye 3 2K GPS Dash Cam System

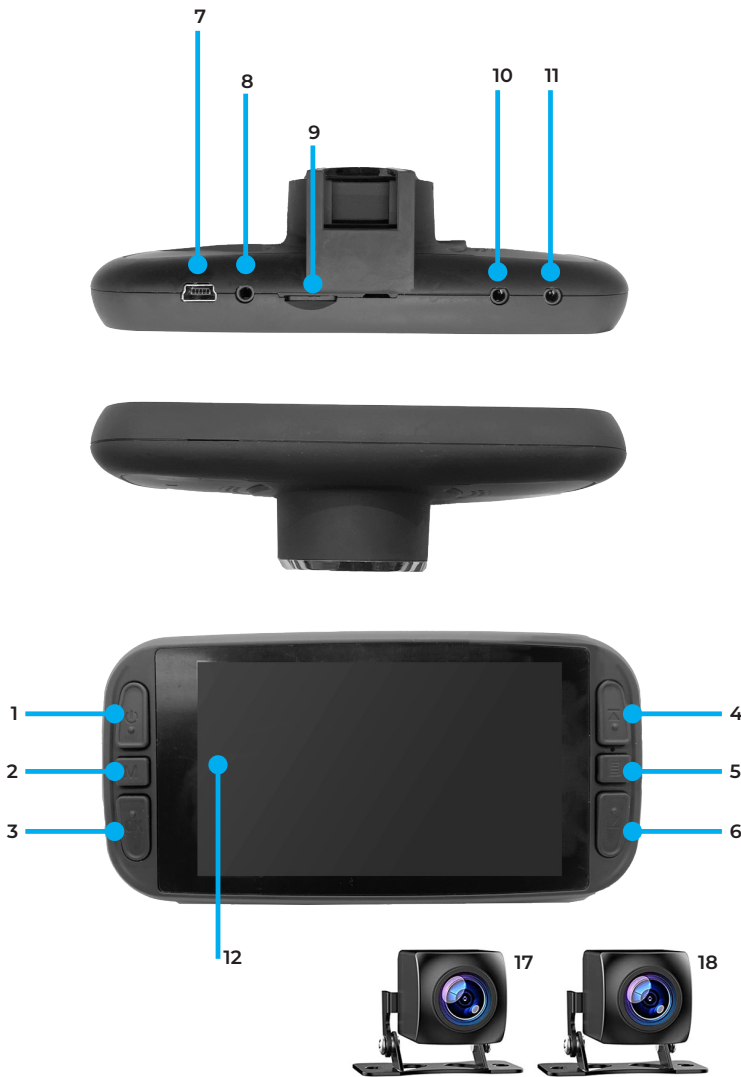

1	Power Button/Turns Screen On and Off
2	Mode Button (M) Middle left button
3	OK Button
4	UP Button
5	Menu Button Middle right button
6	Down Button/Toggle Between Cameras
7	USB Power CLA Port
8	GPS Jack
9	TF Card Slot
10	Rear Camera Jack 1
11	Rear Camera Jack 2
12	Display Screen
13	Lens
14	Mic
15	Reset Button
16	Bracket Mount
17	1080P Outside Camera
18	1080P Outside Camera

It is recommended that you **FORMAT SD card.**

Press bottom LEFT "OK" button to make sure camera is not recording.

- Once camera is not recording, press middle right button 2 times
- On menu screen, using right arrow up button, press 3 times until you highlight "Format"
- Press bottom left "OK" button 2 times press bottom right arrow button 1 time or when OK highlighted.
- Press middle right button to get back to main recording screen
- We recommend formatting card once a month.

Setup instructions to keep dash camera from freezing:

- Press bottom left "OK" button, make sure camera is not recording.
- Once camera is not recording, press middle right button 1 time
- On menu screen, use right down arrow button, press 6 times or until you have "Motion Detection" highlighted, Press Ok
- Verify that Motion Detection is OFF
- Press the bottom right arrow button until "G-Sensor" is highlighted. Press OK and set to LOW
- Press bottom right arrow until Parking Monitor is highlighted. Press OK to set OFF

You are now done with initial setup.

- Press middle right button to get back to your main video mode.
- Press bottom left "OK" button to start recording

MASTER RESET

If the dash camera is abnormal or dead during use, you can press the RESET button (small hole of the housing) by the small needle to reset the dash camera.