

# QUICK START GUIDE

## EagleEye 4: 3 Cam 1080P GPS Dash Cam System w/ Optional 4th Camera



No.	Name
1	Power button
2	Mode Button (M) Middle left button
3	OK button
4	UP button
5	Menu button Middle right button
6	Down button
7	USB Power CLA port
8	VGA rear camera port
9	TF card slot 1
10	GPS jack
11	Rear camera jack1
12	Rear camera jack2

13	TF card slot 2	18	Speaker
14	Display screen	19	Bracket Mount
15	Lens	20	1080P Outside Camera
16	Mic	21	1080P Outside Camera
17	Reset button	*22	Optional 4th VGA Camera

### It is recommended that you FORMATT SD card.

Press bottom LEFT "OK" button to make sure camera is not recording.

- Once camera is not recording, press middle right button 2 times
- On menu screen, using right arrow up button, press 3 times until you highlight "Format"
- Press bottom left "OK" button 2 times press bottom right arrow button 1 time or when OK highlighted.
- Press middle right button to get back to main recording screen
- We recommend formatting card once a month.

### Setup instructions to keep dash camera from freezing:

- Press bottom left "OK" button, make sure camera is not recording.
- Once camera is not recording, press middle right button 1 time
- On menu screen, use right down arrow button, press 6 times or until you have "Motion Detection" highlighted, Press Ok
- Verify that Motion Detection is OFF
- Press the bottom right arrow button until "G-Sensor" is highlighted. Press OK and set to LOW
- Press bottom right arrow until Parking Monitor is highlighted. Press OK to set OFF

### You are now done with initial setup.

- Press middle right button to get back to your main video mode.
- Press bottom left "OK" button to start recording

### MASTER RESET

If the dash camera is abnormal or dead during use, you can press the RESET button (small hole of the housing) by the small needle to reset the dash camera.