

800-550-7230

Directions for 40"x40" Portable Sukkah:

- 1) Remove frame from bag, extend frame to full position until buttons click into place.
- 2) Press 4 side buttons to release legs, and then fully extend legs until buttons pop into place.
- 3) Attach nylon walls to frame with Velcro.
- 4) Place supports for mat on top of Sukkah and unroll out mat.

Directions for 4x6 Portable Sukkah:

Please note Velcro is for setup and dismantling purpose only, for holding sidebars in place.

- 1) Remove frame from bag, remove Velcro from bars, extend frame to full position until buttons lock into place.
- 2) Lock sidebars into the black clip on both sides.
- 3) Press 4 side buttons to release legs and then fully extend legs until buttons pop into place.
- 4) Attach nylon walls to frame with Velcro.
- 5) Insert 2 wooden beams into each gold adaptor (1 piece in each end) Place supports on top of Sukkah frame and roll out mat.

To Deconstruct:

Make sure mat and nylon is completely dry prior to storing.

- 1) Roll up mat, remove supports, and remove nylon.
- 2) Return extended bottom legs into their frame. (4x6) remove sidebars from black clips on both sides, reattached Velcro to sidebars.
- 3) Then fold frame, and place back in bag.

For any question, please call 800-550-7230 or email info@esrogheadquarters.com