


# REPLACING WIND SCULPTURE CWS-01,-02,-03,-01L,&-02L BEARINGS


## STEP 1.

Disassemble the blade with the faulty bearing.

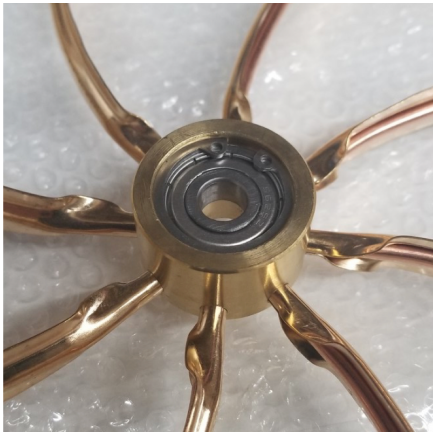


## STEP 2.

Use a retaining ring plier to remove the C-shaped retainer.

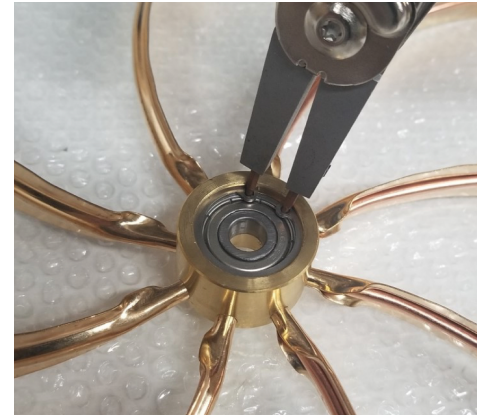


## STEP 3.

Remove retainer.

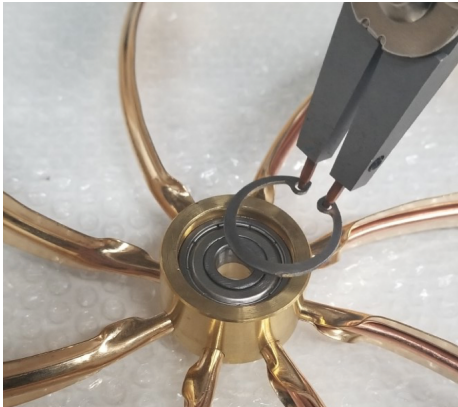


## STEP 4.

Flip the blade over to the other side.

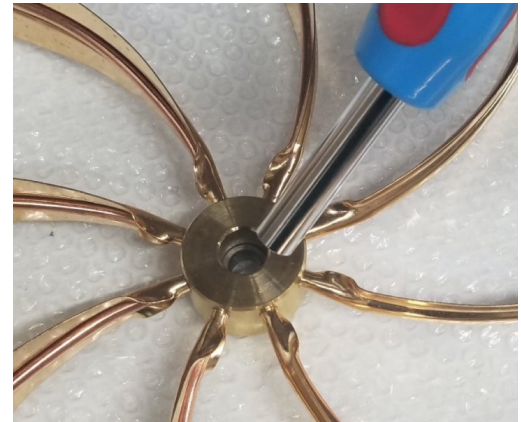

## STEP 5.

**Lightly** tap out the bearing with a screw driver, preferably with the screw bit and a hammer.

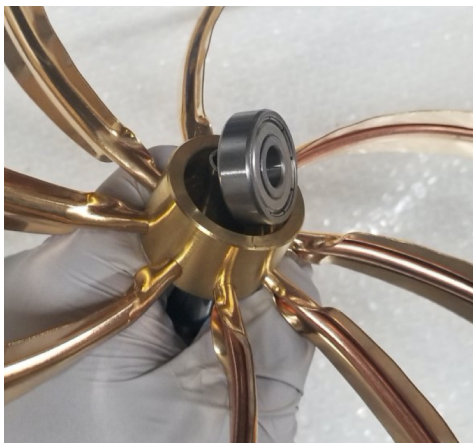

## STEP 6.

Push the new bearing into place using both thumbs on opposite sides. Put the retainer back with **Steps 3 & 2**, respectively.



ANY QUESTIONS PLEASE CONTACT US AT:  
[service@stanwoodimports.com](mailto:service@stanwoodimports.com)  
[sales@orientalhomegarden.com](mailto:sales@orientalhomegarden.com)

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

