

HOW TO USE YOUR UMBRELLA YARN SWIFT

STEP 1.

Attach your swift to the edge of a sturdy table using the clamp on screw. Make sure the attachment is firm so the swift won't fall off during quick spinning.

STEP 2.

Untwist a skein of yarn so it becomes an open circle. Gently loop the yarn around the umbrella section of the swift. Make sure the yarn settles in the middle of the umbrella and hold it at the position with one hand.

STEP 3.

Use your other hand to reach down to the knob at the bottom of the umbrella and slide it up to expand the umbrella until the umbrella goes against the circle of the yarn. Then tighten the knob firmly by twisting the screw at the side of the knob.

STEP 4.

Identify the end of the yarn that points to the outside of the skein. Pulling the outside end won't tangle the yarn. You may knit straight from the swift or wind the yarn into a center-pull ball using our ball winder (sold separately).



If you wish to improve the swift's smoothness, you may apply some beeswax or any household wax to the moving parts. With proper use, it should last for decades. If you have further questions regarding the swift, please do not hesitate to contact us.

ANY QUESTIONS PLEASE CONTACT US AT:

service@stanwoodimports.com

sales@orientalhomegarden.com

Tel: (888) 670-5570

Copyright © Stanwood Imports / Oriental Touch LLC

