


## Pick-A-Book Stand Model# ELR-083-B

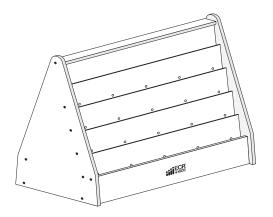

 



# **WARNING:**

### Adult Assembly Required.

Two adults recommended.


- Contains small parts, sharp points and edges.
- Do not stand, sit, kneel, climb, lean or pull on unit for support.
- Never leave children unattended.
- Do not place unit near high heat or moisture.
- Adult supervision recommended.



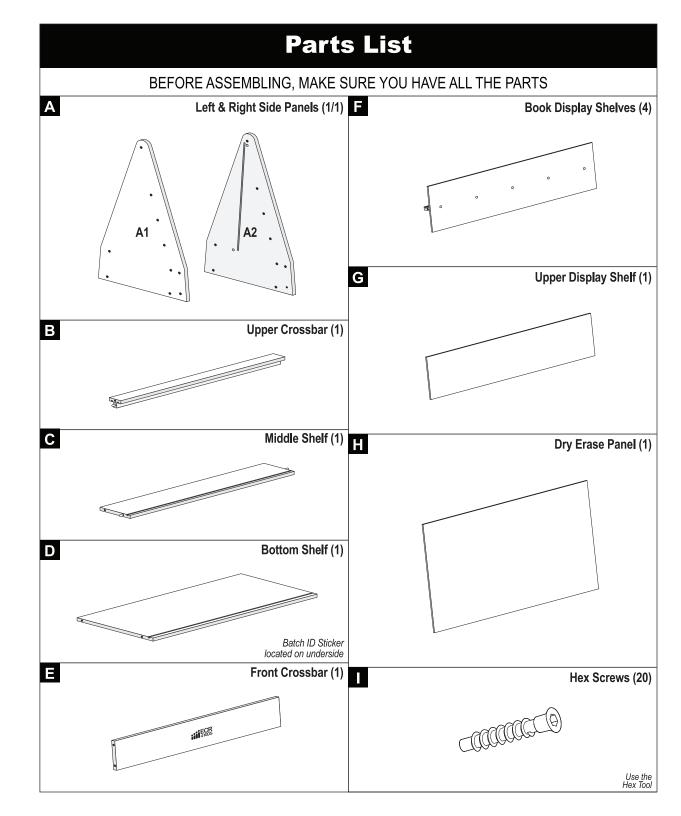

# Install the Bottom Shelf


Install the **Bottom Shelf (D)** onto the **Left Side Panel (A1)** as shown, with two **Hex Screws (I)** using the Hex Tool.

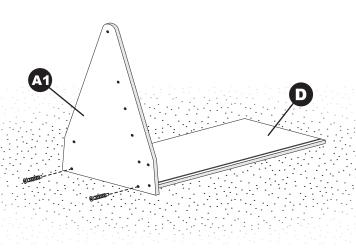

# Install the Middle Shelf


Insert the pre-installed wooden dowel on **Middle Shelf (C)** into the corresponding hole on the inside of **Left Side Panel (A1)**.

Install the Middle Shelf (C) onto the Left Side Panel (A1) with one Hex Screw (I) using the Hex Tool.

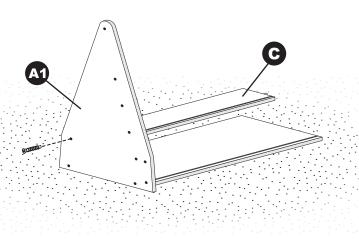

# Install the Front Crossbar

Install the Front Crossbar (E) onto the Left Side Panel (A1) with two Hex Screws (I) using the Hex Tool.

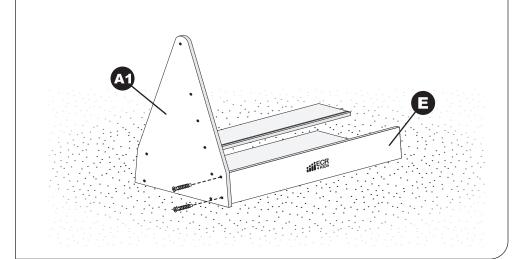


# 4 Install the Book Display Shelves

Slide a **Book Display Shelf (F)** into the groove on the **Bottom Shelf (D)** as shown, until fully seated against the inside of **Left Side Panel (A1)**.

Install the first **Book Display Shelf (F)** onto the **Left Side Panel (A1)** with one **Hex Screw (I)** using the Hex Tool.


Repeat with the remaining **Book Display Shelves (F)**, one shelf at a time.

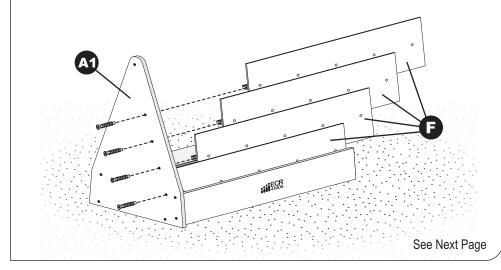

# 5 Install the Upper Crossbar

Insert the pre-installed wooden dowel on **Upper Crossbar (B)** into the corresponding hole on the inside of **Left Side Panel (A1)**.


Install the Upper Crossbar (B) onto the Left Side Panel (A1) with one Hex Screw (I) using the Hex Tool.

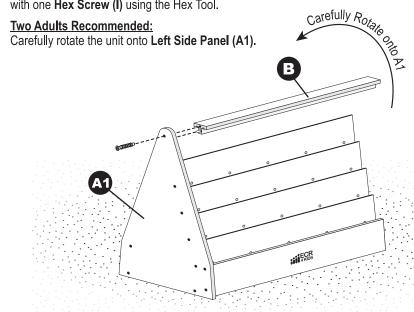


# 6 Slide Upper Display Shelf into Place

Slide the **Upper Display Shelf (G)** into the grooves on the **Upper Crossbar (B)** and uppermost **Book Display Shelf (F)** as shown, until fully seated against the inside of the **Left Side Panel (A1)**.

Tip: If the Upper Display Shelf (G) does not slide in easily, wiggle the panels while pushing into place.

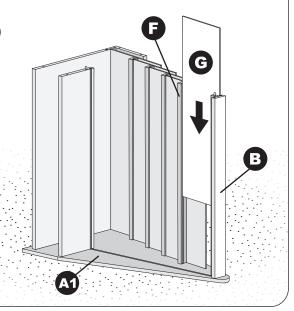

# Slide the Dry Erase Panel (H) into the grooves on the Upper Crossbar (B) and Middle Shelf (C) as shown, until fully seated into the groove on the inside of the Left Side Panel (A1). Tip: If the Dry Erase Panel (H) does not slide in easily, wiggle the panels while pushing into place.

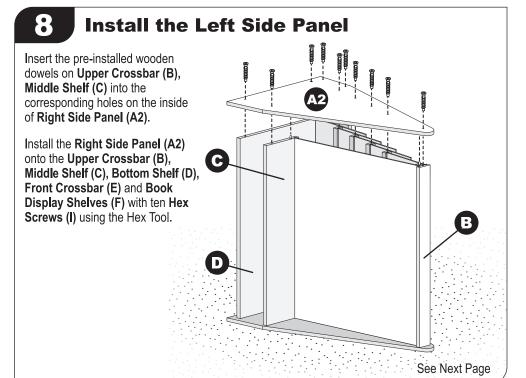



We appreciate your purchase of the Pick-A-Book Stand. ECR4KIDS has made every effort to supply a quality product that with proper use and care, will provide many years of trouble-free use.

If you experience any difficulties with this product, please email us at ecrcs@ecr4kids.com or call toll-free at (855) ECR-4KIDS (Monday - Friday, 7:00am - 4:00pm Pacific Standard Time)

**Please do not return** to place of purchase as ECR4KIDS will replace defective part(s) and/or product.

**Warranty:** Visit our website for product specific warranty information at: www.ecr4kids.com

### **Care and Cleaning**

Clean wood with a damp cloth or sponge using warm water and mild soap. Wipe dry.

Do not place near heat, moisture or vaporizer which may cause wood to warp and peel.

Check for loose or worn parts periodically and tighten or replace as necessary.

Record the manufacture date here. Information is located on the Batch ID sticker and on the shipping carton. Save this sheet in an accessible place.

Model Number: ELR-083-B

Factory Code: EP

Manufacture Date:

Batch ID Number: \_\_\_\_\_(Located on Part D)

©2013 ECR4KIDS, LP

Version: ELR-083-B EP 2013.05.13