



YouTube Playlist [buytesmart.com/DM1](https://www.youtube.com/playlist?list=PLbuYtesmart.com/DM1)

BASIC INFO


Keyboard must be plugged into dedicated Keyboard/Mouse port for hotkeys to be recognized.

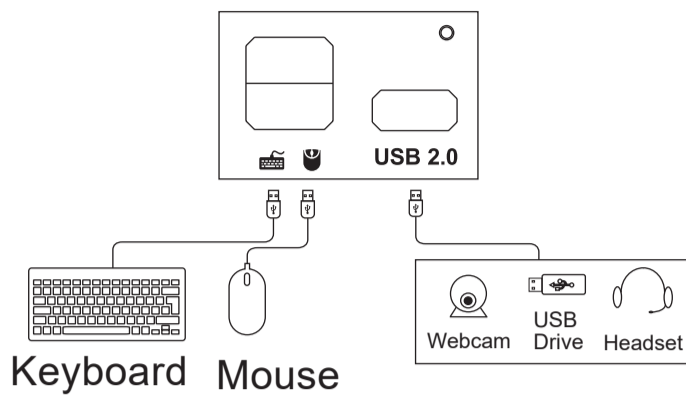

KVM Mode 1: Extended Desktop


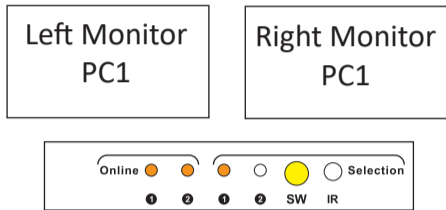


or

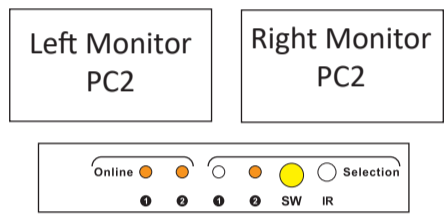

PC1 or PC2 displays on both left and right monitors.


KVM Mode 2: Split Desktop

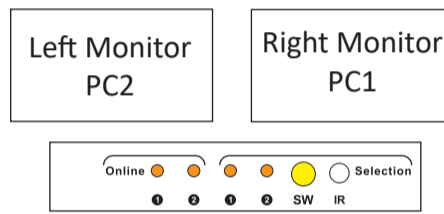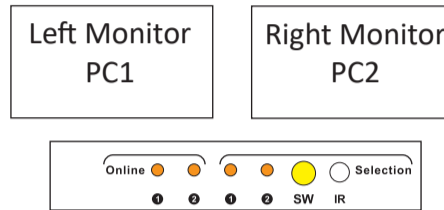

PC1 displays on 1 monitor and PC2 displays on other monitor, simultaneously.

HOTKEY COMMANDS

 Switch Inputs (Mode 1)



PC1 left monitor, PC2 right monitor (Mode 2)



PC2 left monitor, PC1 right monitor (Mode 2)



Change PC that controls Mouse/Keyboard



Enable or disable beep (Silent mode)



Change hotkey trigger between Scroll Lock to Right-CTRL



Enable/Disable Passthrough Mode



Confirm Passthrough Mode on (1 beep off, 2 beep on)



TROUBLESHOOTING / FAQ

My hotkey commands don't work or stopped working.

- 1- Make sure keyboard is plugged into dedicated mouse/keyboard ports.
- 2- Try using Scroll Lock as hotkey trigger, if not, then Right-CTRL.

My keyboard does not have a Scroll Lock button.

- 1- Use Right-CTRL, Right-CTRL, 1 or 2 to confirm trigger isn't already set to Scroll Lock.
- 2- Press and hold yellow switch button for 15 seconds. If KVM beeps, turn off and back on. Hotkey trigger will now be set to Right-CTRL.

I accidentally turned Passthrough Mode off and keyboard no longer functions.

- 1- Use a basic 104-Key keyboard to turn Passthrough Mode back on.
- 2- We recommend keeping Passthrough Mode on at all times unless using Linux.