


Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

baby trend[®]

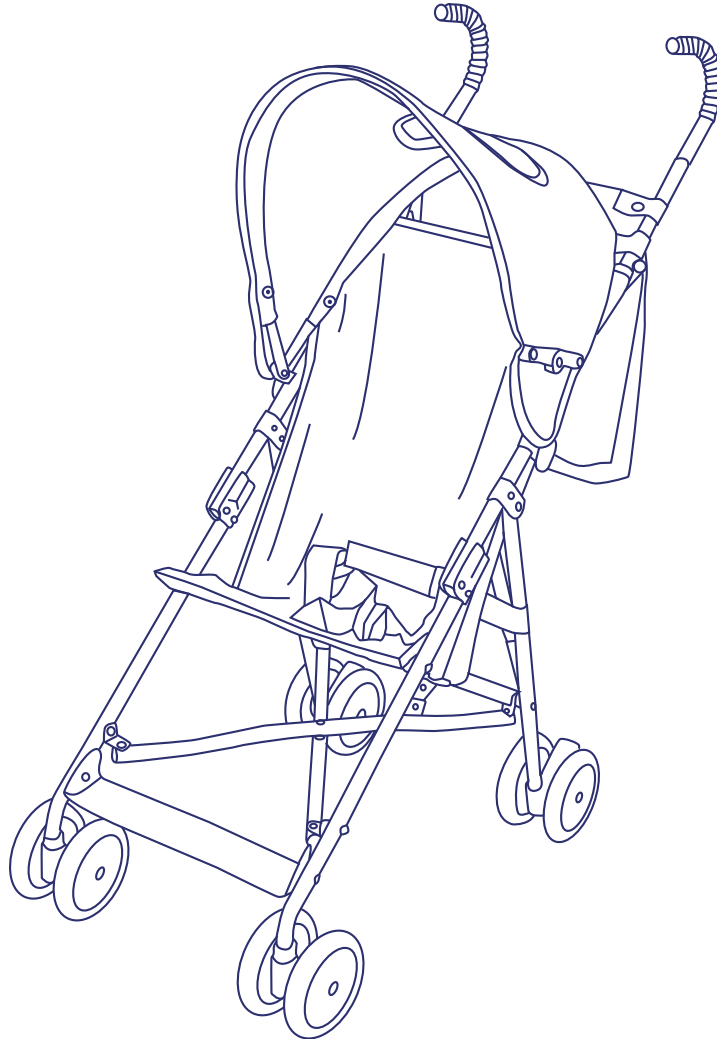

Model # 1140RC

Umbrella Stroller with Canopy

Instruction Manual



Umbrella Stroller with Canopy

01.05

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the seat belt and insure that the child is properly positioned according to these instructions.

⚠️ WARNING: Never leave child unattended.

- * Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- * The maximum weight that can be carried in the storage bag is 3 pounds. Excessive weight may cause a hazardous unstable condition to exist.
- * Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- * The stroller is designed to be used with a child who can sit up unassisted, approximately 6 months of age. Use of the stroller with a child weighing more than 35 pounds or over 40 inches tall will cause excessive wear and stress on the stroller and may cause hazardous unstable conditions to exist.
- * DO NOT use the stroller on stairways or escalators.
- * Never allow your stroller to be used as a toy
- * To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- * Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- * Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00a.m. and 4:30p.m. Pacific Coast Time. Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

To contact us:

BABY TREND, INC.
1567 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
(800) 328-7363
8:00am to 4:30pm Pacific Coast Time



TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

TO ASSEMBLE STROLLER

Remove stroller from box.

- Unfold stroller as described in the section following. See figure 10.
- To attach the canopy, clip the canopy brackets over the handle tubes just above the joint, as shown in figure 1.
- To open the canopy, push forward on the front of the canopy. Secure in the open position by pushing downward on the canopy stretchers on each side of the canopy. Please see figure 2.
- The canopy must be in the closed position prior to folding the stroller. To close canopy, pull upward on the canopy stretchers to unlock. Pull rearward on the front of the canopy. Please see figure 3.

Your stroller is now ready to use.

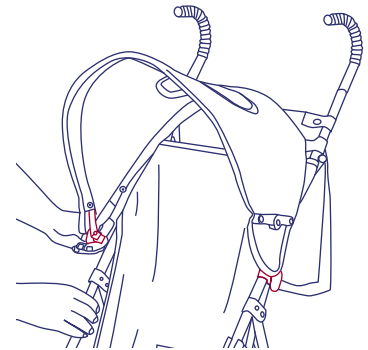


Figure 1

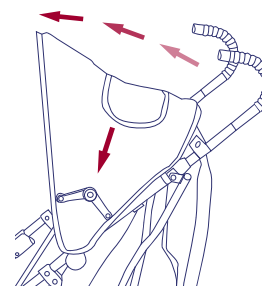


Figure 2

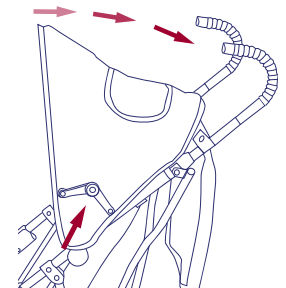


Figure 3

TO SECURE THE CHILD

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the seat belt.

1. Carefully place the child in the stroller seat and bring the seat belt around the child's waist. Place the crotch strap between the child's legs. See figure 4.
2. Insert the male end of each seat belt into the crotch strap buckles until snapped into place. See figure 5. and 5A.
3. Tighten the seat belt to be snug around the child's waist.
4. To release, apply pressure to both sides of each male clip until the clips are released. See figure 6. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

THIS UPRIGHT SEATING POSITION SHOULD BE USED ONLY FOR A CHILD THAT CAN SIT UP UNASSISTED, APPROXIMATELY 6 MONTHS OLD.

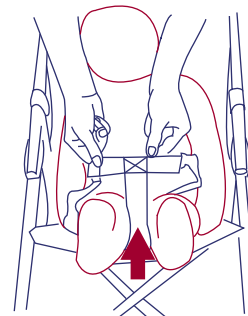


Figure 4

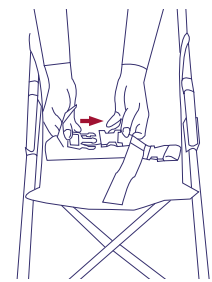


Figure 5



Figure 5A

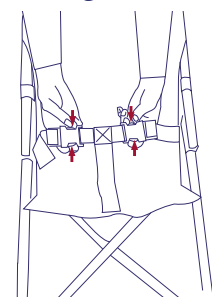


Figure 6

BRAKES

⚠️ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

1. To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. See figure 7.
2. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever. See figure 8.

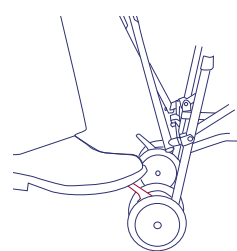


Figure 7

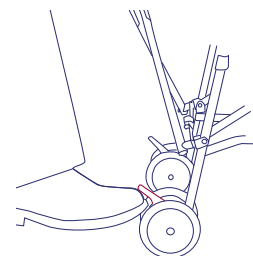


Figure 8

TO UNFOLD AND FOLD STROLLER

TO UNFOLD

1. Release the folding latch, which is located on the right side. See figure 9.
2. Lift up on the stroller handle with both hands and pull apart until the stroller frame is erect. See figure 10.
3. Press down on the folding bar to lock the stroller open. See figure 11.

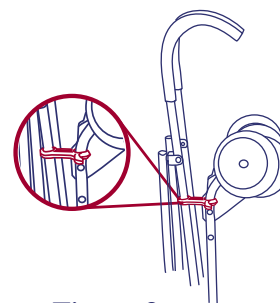


Figure 9

TO FOLD

1. Push red lever to the left and lift up. See figure 12.
2. Push handlebars forward and squeeze stroller together. See figure 13.
3. Secure the stroller in the folded position by locking the latch on the side of the stroller. See figure 9.

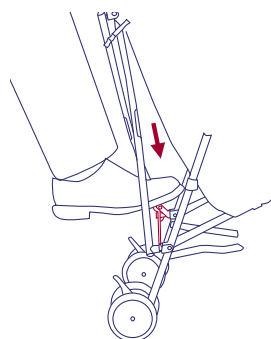


Figure 11

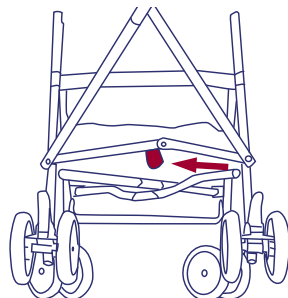


Figure 12

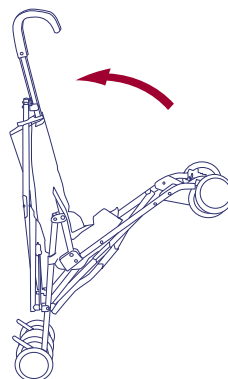


Figure 13

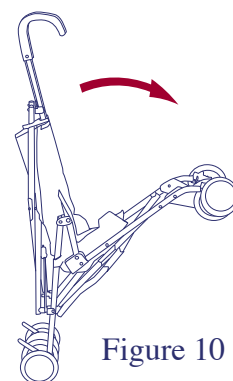


Figure 10



IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363
BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC COAST TIME FOR ASSISTANCE.