


Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

baby trend[®]

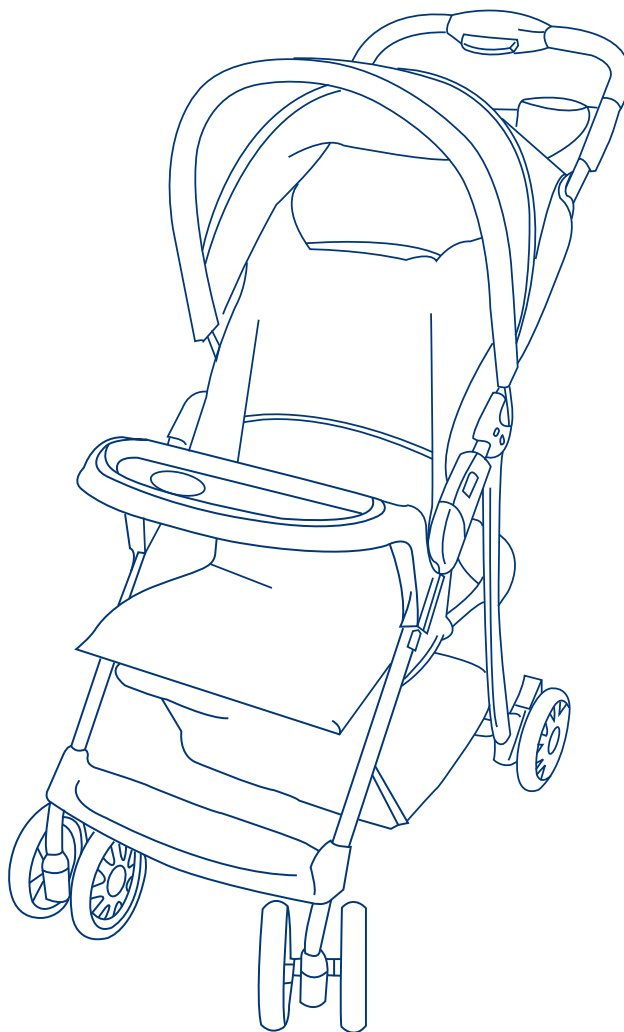

Model # 1510, 1511

TRENDSPORT LITE

Instruction Manual

Convenience through innovation and thoughtful design

03.08

baby trend[®]

TRENDSPORT LITE

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety harness and insure that the child is properly positioned according to these instructions.

⚠️ WARNING: Never leave child unattended.

- * Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- * The maximum weight that can be carried in the basket is 5 lbs and in the parent tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- * Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- * Use of the stroller with a child weighing more than 35 pounds will cause excessive wear and stress on the stroller., and may cause a hazardous unstable condition to exist.
- * DO NOT use the stroller on stairways or escalators.
- * DO NOT use the stroller with roller skates or in-line skates.
- * Never allow your stroller to be used as a toy
- * **To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.**
- * Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- * Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.


Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at 1-800-328-7363 between the hours of 8:00a.m. and 4:30p.m. Pacific Standard Time. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.

To Contact us:

Baby Trend, Inc.
1607 S. Campus Ave.
Ontario, CA. 91761

Parts Hotline:
1-800-328-7363
8:00 a.m. and 4:30 p.m. Pacific Standard Time

PARTS




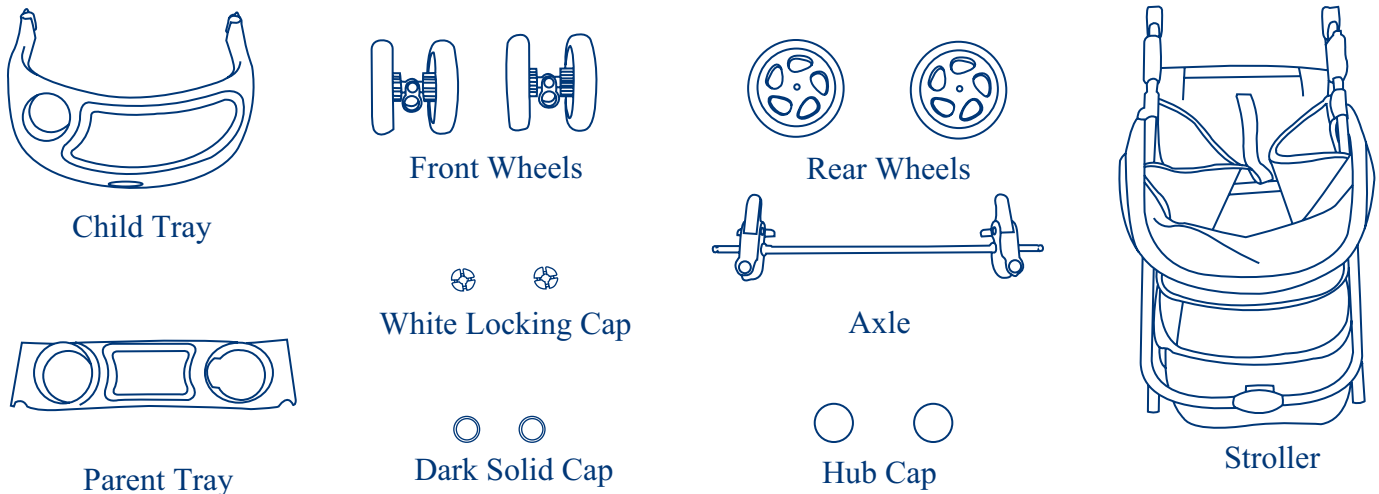


ASSEMBLING

TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY:

- * Remove stroller from box. The front wheels, rear wheels, child tray and parent tray need to be installed prior to use.
- * To attach the front wheels, unfold stroller as described in the section following. See figure 1.
- * Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel bayonets are pointing upward.
- * Push each front wheel onto the front wheel bayonet until snapped into place. Pull on the wheel to ensure that it is securely attached to the stroller. Please see figure 2.
- * Assemble the rear axle as follows. Insert the axle through each wheel, with axle going through the brake cluster on the wheel first. Snap the small lock washer onto the groove at the end of the axle to lock the wheel on. Snap the locking cap over the lock washer. Lastly, snap the hub cap into place. Pull on each wheel to ensure that each is securely locked onto the rear axle. Please see figure 3.
- * Lean the stroller forward to rest on the front wheels. To attach the rear axle, line up the rear frame tubes with the rear axle housing with the brake pedals facing toward the rear of the stroller. Push both housings onto the rear frame tubes at the same time until they snap into place. Check that the push button shows through the small hole near the bottom of the inside of the housing. Make sure that the axle is firmly attached to the stroller. Please see figure 4.

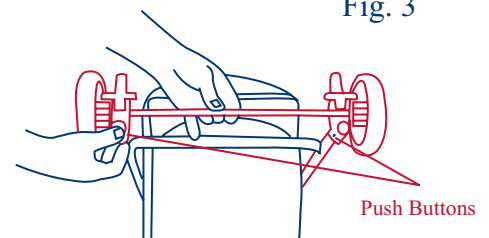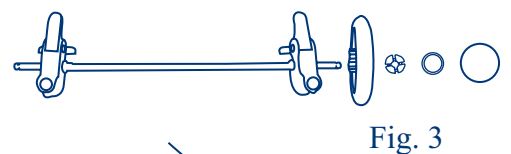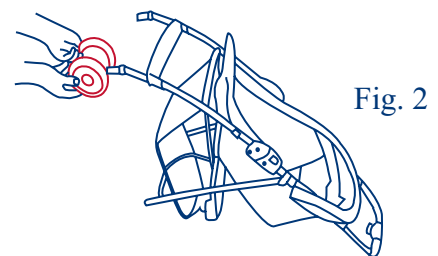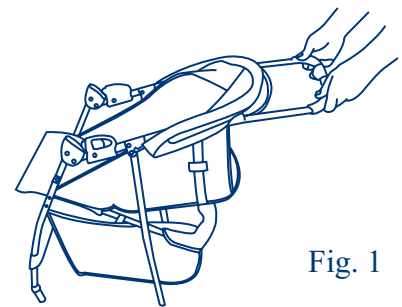

- * Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at 1-800-328-7363, between the hours of 8:00am and 4:30pm PST, for assistance.
- * To attach the front child tray, snap each side latch onto the front frame tube just below the fold joint. To remove the front child tray, pull outward on the side latch on the tray. Please see figure 13.
- * To attach the parent tray, place one side of the tray on the stroller handle such that the button engages into the hole on the tray. Snap opposite side onto handle checking that the button engages into the hole on the tray. Please see figure 6.

⚠ Warning: Do Not lift the stroller by the front tray.

TO SECURE THE CHILD

- * Carefully place the child in the stroller seat and bring the seat belt around the child's waist. Place the crotch strap between the child's legs. Insert the male end of each seat belt into the female buckle until snapped into place. Tighten the seat belt to be snug around the child's waist. Please see figure 7.

⚠ Warning: Avoid serious injury from falling or sliding out. Always use the seat belt.

- * To release, apply pressure to both sides of each male clip until the clip is released. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

SEATBACK POSITIONING

- * The seat has a multiple position recline that is controlled by a strap and spring loaded slider behind the seat. See figure 8. To recline the seat, press the round button on the slider and adjust to the required recline position. Please see figure 9. The strap will lock automatically. **The upright position should be used only for a child that is at least 6 months old.**

BRAKES

⚠ Warning: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

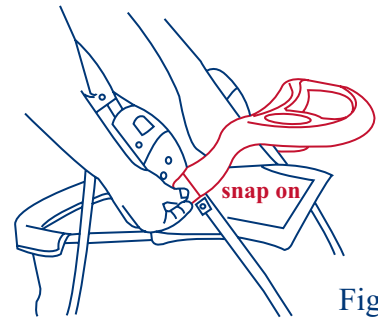


Fig. 5

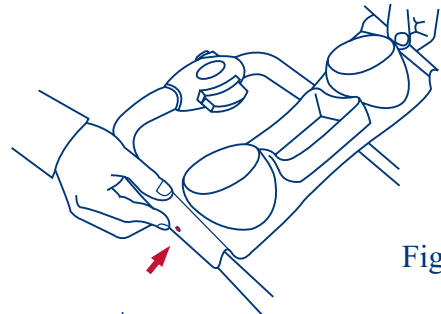


Fig. 6

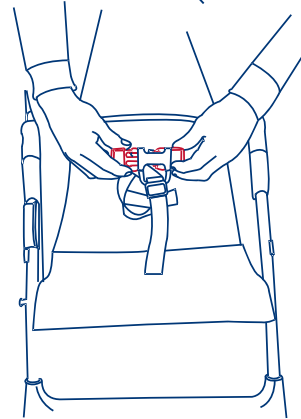


Fig. 7

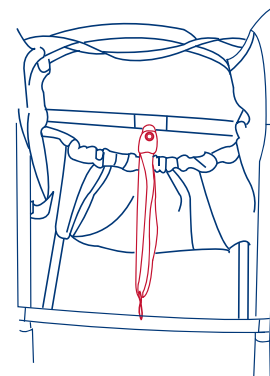


Fig. 8

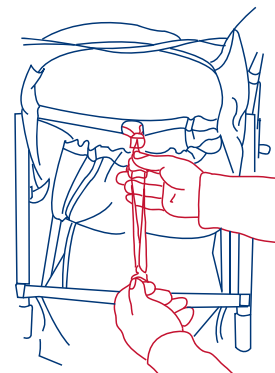


Fig. 9

* To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. See figure 10. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever. See figure 11.

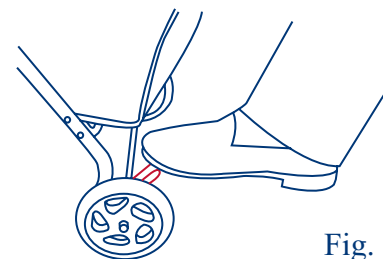


Fig. 10

CANOPY

* To open the canopy, push forward on the front frame of the canopy. Pull backwards on the canopy frame to fold completely. Always fold the canopy prior to folding the stroller frame. Please see figure 12.

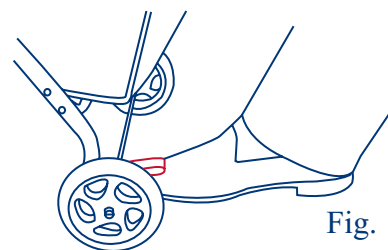


Fig. 11

TO REMOVE FRONT CHILD TRAY:

* Pull outward on the tray latches to release. Please see figure 13.

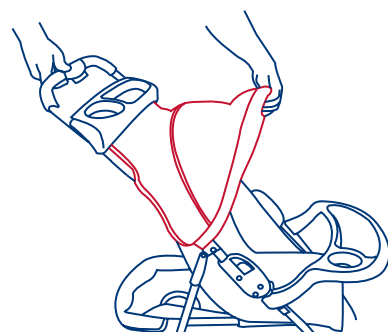


Fig. 12

TO FOLD STROLLER:

* Close the canopy as described in the Canopy section above. To fold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push downward on the handle. Once the stroller begins to fold, release the red handle and pull rearward on the child tray until the stroller is folded. Secure the stroller in the folded position by fastening the fold locking latch, located on the right side of the stroller at the intersection of the handle and the rear leg tube, over the extended rivet on the lower frame tube. Please see figure 14 and 15. NOTE: before folding firstly to recline seat by releasing buckle as described in seat back position section above.

TO UNFOLD STROLLER:

* Release the folding latch, which is located on the right side. See figure 15.
* Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. See figure 16. The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller.

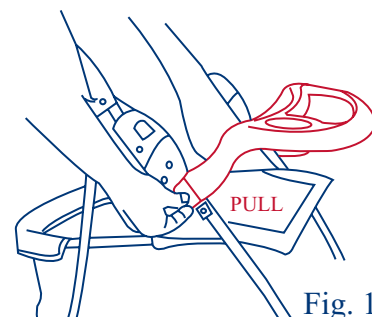


Fig. 13

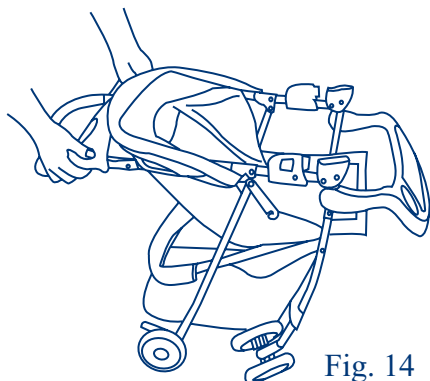


Fig. 14

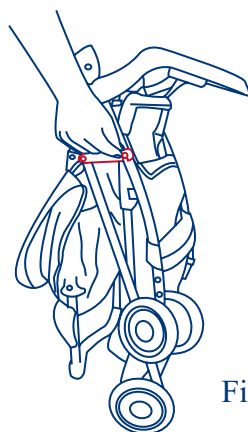


Fig. 15

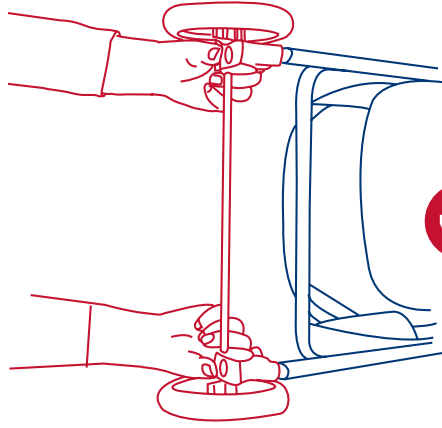


Fig. 16

IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-328-7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC STANDARD TIME FOR ASSISTANCE.


ATTENTION

PLEASE FOLLOW THESE INSTRUCTIONS FOR THE PROPER INSTALLATION OF YOUR REAR AXLE ASSEMBLY.




1

Line up the frame tubes with the axle assembly

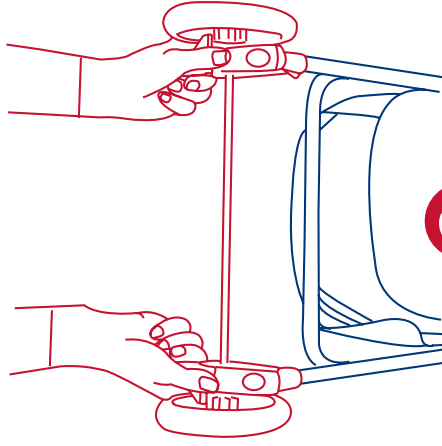


2

Slide onto frame tubes at the same time

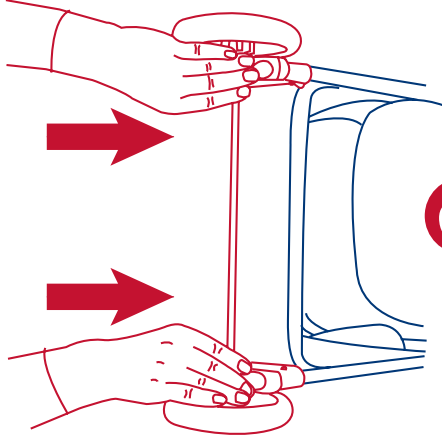

3


Push down until axle housing snaps into place

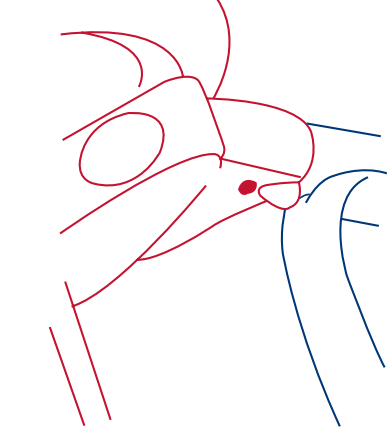

4

Axle housing is secure when the metal tab locks axle housing into place

TO ATTACH THE REAR WHEELS

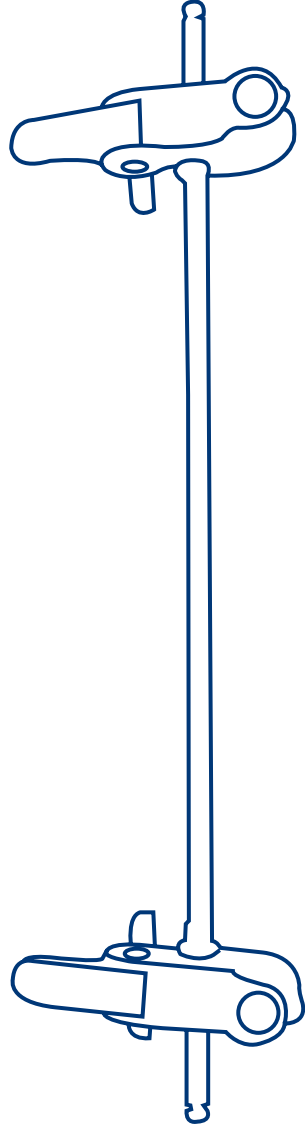

Follow this order



1

2

3

4