


**baby trend**<sup>®</sup>

Convenience through innovation and thoughtful design

Read all instructions **BEFORE** assembly and **USE** of product.  
**KEEP INSTRUCTIONS FOR FUTURE USE.**

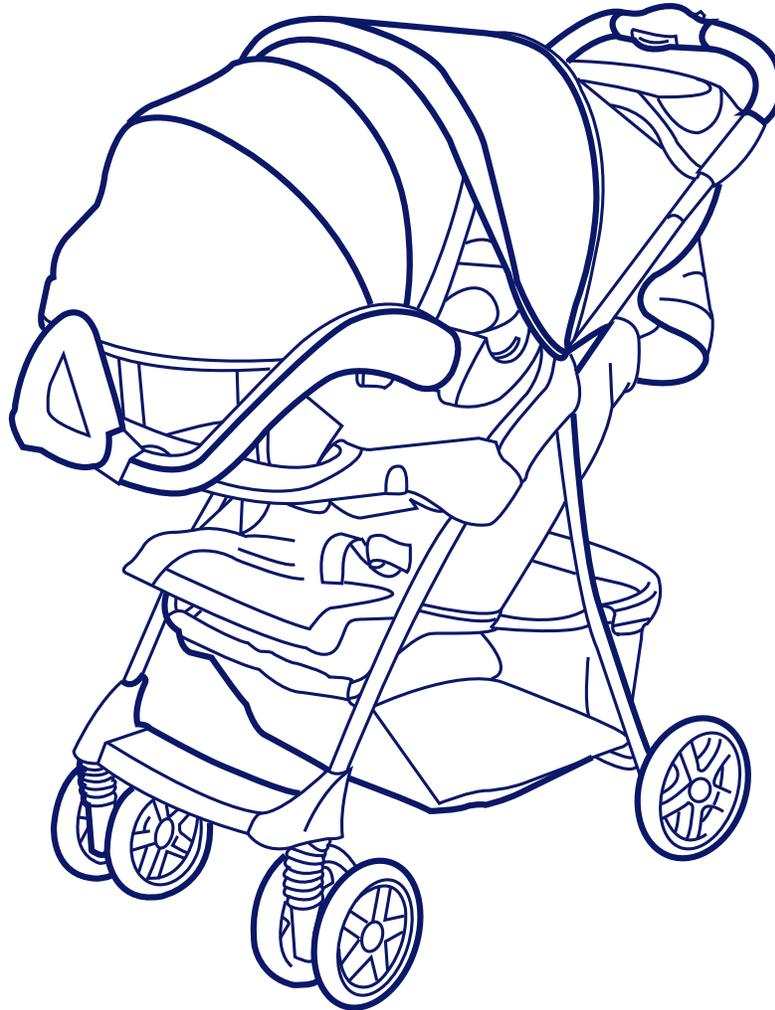

**TrendSPORT Traveler** *laurel oak*

***Instruction Manual***

## WARNINGS

**⚠️ WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

**⚠️ WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the infant car seat harness or the stroller seat belt and insure that the child is properly positioned according to these instructions.

**⚠️ WARNING:** Never leave child unattended.

**⚠️ WARNING:** Care must be taken when folding and unfolding the product to prevent finger entrapment.

- \* Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- \* The maximum weight that can be carried in the basket is 5 lbs. The maximum weight that can be carried in the Parent Tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- \* Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- \* Use of the stroller with a child weighing more than 45 pounds will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- \* DO NOT use the stroller on stairways or escalators.
- \* Never allow your stroller to be used as a toy
- \* To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- \* Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- \* Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.


**Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 am and 4:30 pm Pacific Coast Time. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.**

To Contact Us:

**Baby Trend, Inc.**  
1567 S. Campus Ave.  
Ontario, CA 91761

**Customer Service Hot Line**  
(800) 328-7363  
8:00 a.m. to 4:30 p.m. Pacific Standard Time

## PARTS

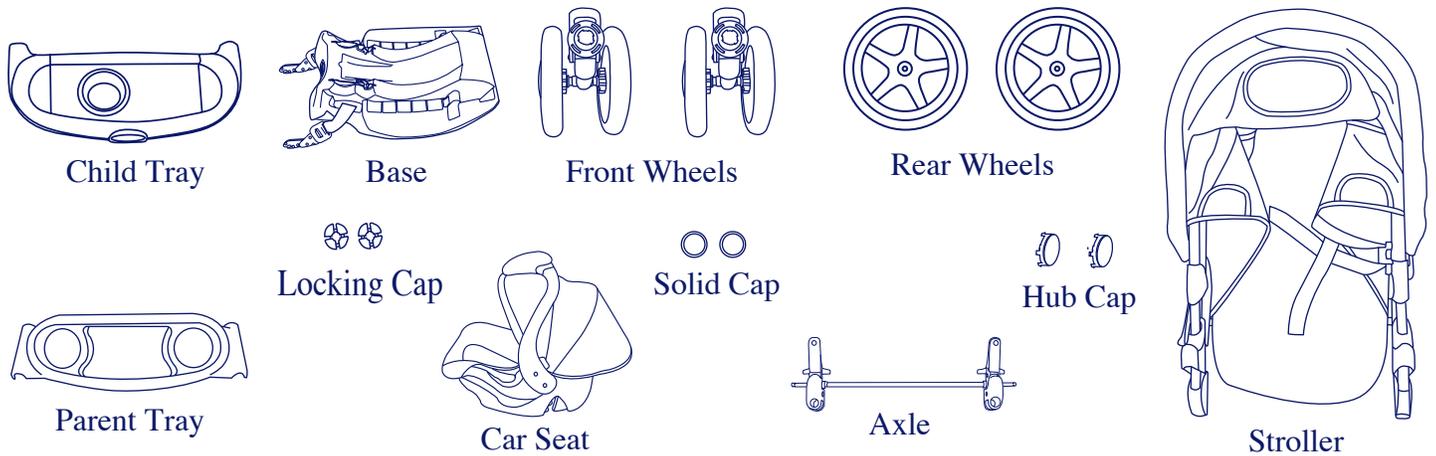

## ASSEMBLY

**TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE**

### ASSEMBLY:

- \* Remove stroller from box. The front wheels, rear wheels, child tray, and parent tray need to be installed prior to use.
- \* Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel tubes are pointing upward. Position the front wheel assembly at the front tube such that the hole in the swivel assembly will slide onto the front tube. Please see figure 2. Push each front wheel assembly onto the front tube being careful that wheel assembly locks onto the front leg. Pull on the wheel assembly to ensure that it is securely attached to the stroller. Please see figure 2.
- \* Assemble the rear axle as follows: Slide each wheel onto the rear axle and secure in place with the Locking Cap. Snap the solid cap over the Locking Cap. Snap the Hub Cap onto the wheel. Please see figure 3a. Please see figure 3b for order assembly. Pull on each wheel to ensure that it is securely attached.
- \* Lean the stroller forward to rest on the front wheels. To attach the rear wheels, position the rear axle and wheel assembly such that the brake levers are facing to the rear of the stroller. Press the rear wheel assembly onto the rear frame tubes being careful that the buttons on the inside of each rear axle housing engages the holes on the trailing edge of each rear frame tube. Pull on the rear wheel assembly to ensure that it is securely attached to the stroller. Please see figure 4. Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PCT, for assistance

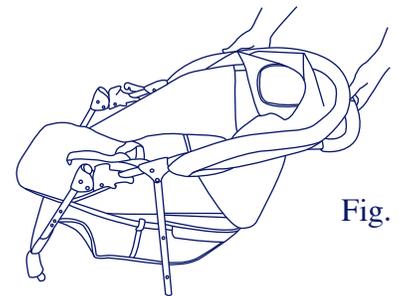


Fig. 1

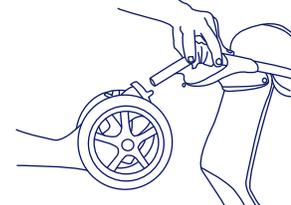


Fig. 2

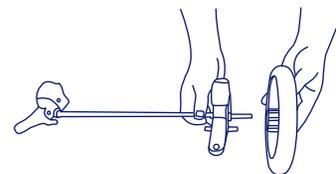


Fig. 3a

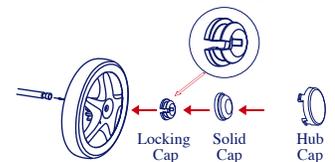


Fig. 3b

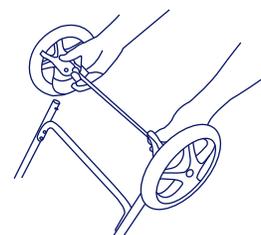


Fig. 4

- \* To attach the front child tray, push the angled tray onto the post at the end of right armrest, while pressing downward on the snap button, until locked into place. Please see figure 5. Rotate the tray downward until latched onto the left armrest. Please check that the snap button comes through and securely latches the tray in place. Please see figure 6.
- \* To remove front child tray, press inward on the left side tray release button and rotate upward on the tray. Please see figure 7. Please note that you may remove the tray completely by depressing the snap button on the right side as shown in figure 8 while pulling forward on the tray.

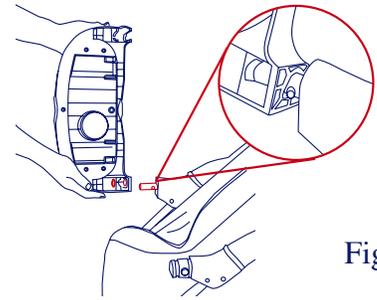


Fig. 5

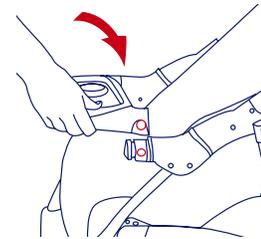


Fig. 6

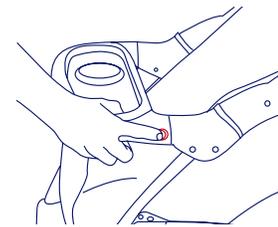


Fig. 7

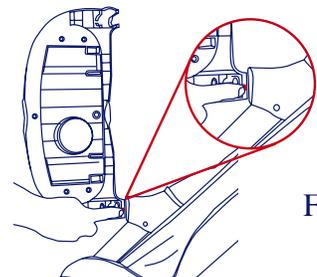


Fig. 8

**⚠ WARNING:** The child's tray is not a restraint device: always secure your child with the seat belt. DO NOT lift the stroller by the child's tray. Use care when attaching the child's tray on the stroller with a child in the stroller.

- \* To attach the parent tray, align the fittings on the ends of the parent tray with the fittings on the outsides of the handle. Hook one end of the tray on so that the fitting on the handle protrudes from the hole in the parent tray. Pull outward on the opposite end while pushing down on the tray until locked onto the stroller handle. Please be careful not to pinch your finger when installing the parent tray. Please see figure 9. To remove the parent tray, pull outward on one end of the tray while lifting upward.

**Do not place hot liquids or more than 3 pounds in the parent tray. Serious burns or unstable conditions could result.**

- \* To open the canopy push forward on the front edge of the canopy. Please see figure 10.

**Your stroller is now ready to use.**

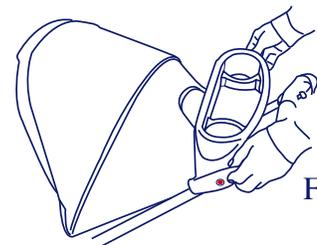


Fig. 9

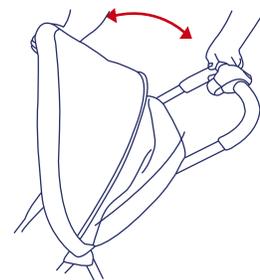


Fig. 10

## TO SECURE THE CHILD

- The shoulder straps of the 5-point harness have 3 attachment positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder. To access the harness pull apart seat pad. Please see figure 11.
- Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 12.

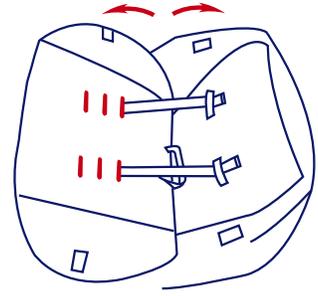


Figure 11.

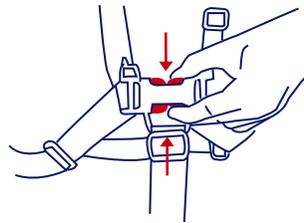


Figure 13.

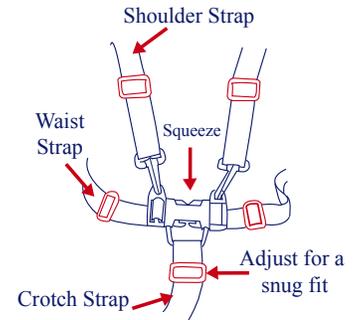


Figure 12.

- To release, apply pressure to both sides of each male clip until the clip is released. See figure 13. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

**⚠ WARNING:** Avoid serious injury from falling or sliding out. Always use the safety harness.

**⚠ STRANGULATION HAZARD:** Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

## ATTACHMENT OF THE BABY TREND INFANT CAR SEAT

- \* To attach the Baby Trend Infant Car Seat, place the seat back in the reclined position. Please see section entitled Seatback Positioning.
- \* **Check that the front child tray is firmly attached to the stroller armrests.** Pull rearward on the rear edge of the front child tray cover while lifting upward on the tray cover. Please see figure 14 and 15. Remove the tray cover and store in the basket of the stroller.
- \* Position the Infant Car Seat, facing toward the rear of the stroller, so that the seat shell goes into the front tray and latches into place. Please see figure 16. **Check that the Infant Car Seat is firmly locked onto the front tray before using.** The sides of the car seat will rest on the fold joints.
- \* To remove the Infant Car Seat, squeeze the release handle located at the foot-end of the seat and carefully lift upward on the seat. Please see figure 17.
- \* The cover of the child/car seat tray may be fastened in the closed position after your child outgrows the infant car seat. This will prevent an older child from opening the child tray. To secure the tray cover, remove the tray from the stroller as shown in figure 8. Install the tray cover. Place the tray with the lid side down on a soft flat surface. Remove the screw stored under the tray as shown in figure 18. Insert the screw into the hole in the bottom of the tray and into the matching hole in the cover. Tighten until snug. Do not over tighten. If you wish to use the car seat tray function at a later date (for a second child) remove the screw and store in the tray bottom as before. Please see figure 18.

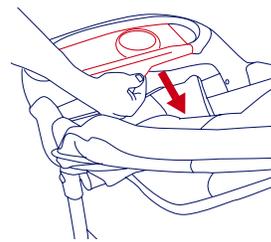


Fig. 14

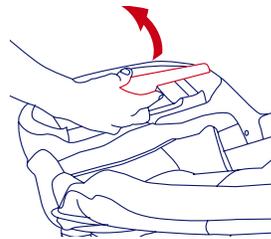


Fig. 15

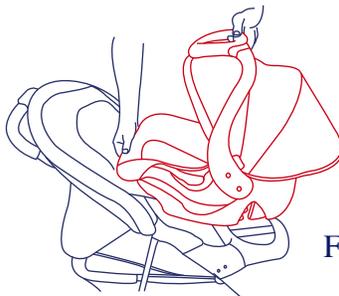


Fig. 16


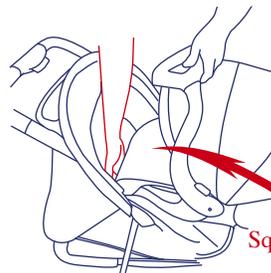


Fig. 17

Squeeze release handle and lift upward

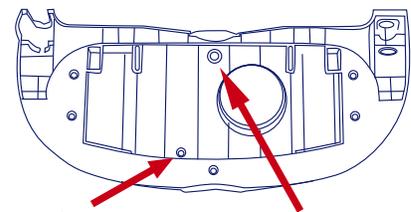

Screw storage bosses-factory installed screws for later use

Hole in tray to lock down lid after car seat use

Fig. 18

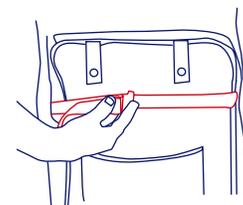


Fig. 19

**⚠ WARNING:** The upright position should be used only for a child that is at least 6 months old.

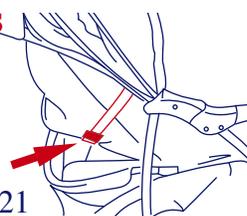


Fig. 21

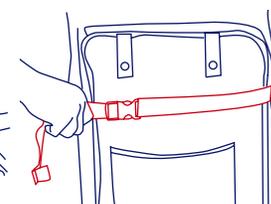


Fig. 20

## BRAKES

**⚠️ WARNING:** Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with the each wheel brake cluster. See figure 22. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever.

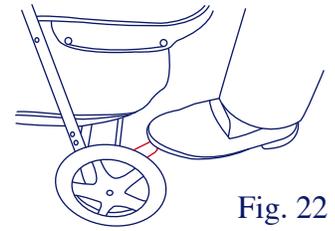


Fig. 22

## CANOPY

To open the canopy, push forward on the front frame of the canopy. To close canopy, pull the front edge toward the rear of the stroller until folded. Always fold the canopy prior to folding the stroller frame. Please see figure 23.

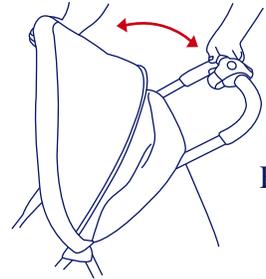


Fig. 23

## TO REMOVE FRONT CHILD TRAY:

To remove front child tray, press inward on the tray release button on the left armrest and pull up on the tray. Please see figure 7. Also, the tray may be completely removed by depressing the snap button on the right side as shown in Figure 8 while pulling forward on the tray

## TO FOLD STROLLER:

Close the canopy as described in the Canopy section above. Place seat back in fully reclined position by unbuckling recline strap. To fold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push downward on the handle. Please see figure 24. Once the stroller begins to fold, release the red handle and pull rearward on the child tray until the stroller is folded. Please see figure 25. Secure the stroller in the folded position by fastening the fold locking latch, located on the right side of the stroller on the handle, over the extended rivet on the lower frame tube. The latch should easily reach the rivet. If not, check for interference-DO NOT force the stroller. Please see figure 25.

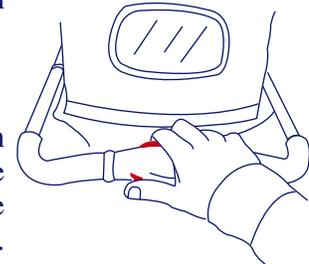


Fig. 24

## TO UNFOLD STROLLER:

Release the folding latch, which is located on the right side. See figure 25. Lift up on the stroller handle with both hands until the stroller frame is erect and locked in the open position. The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing your child in the stroller by pushing down on the stroller handle.

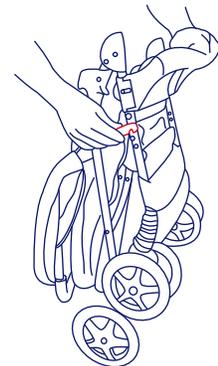


Fig. 25

**IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,  
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT  
AT (800) 328-7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC  
COAST TIME FOR ASSISTANCE.**