


Read all instructions **BEFORE** assembly and **USE** of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

baby trend[®]

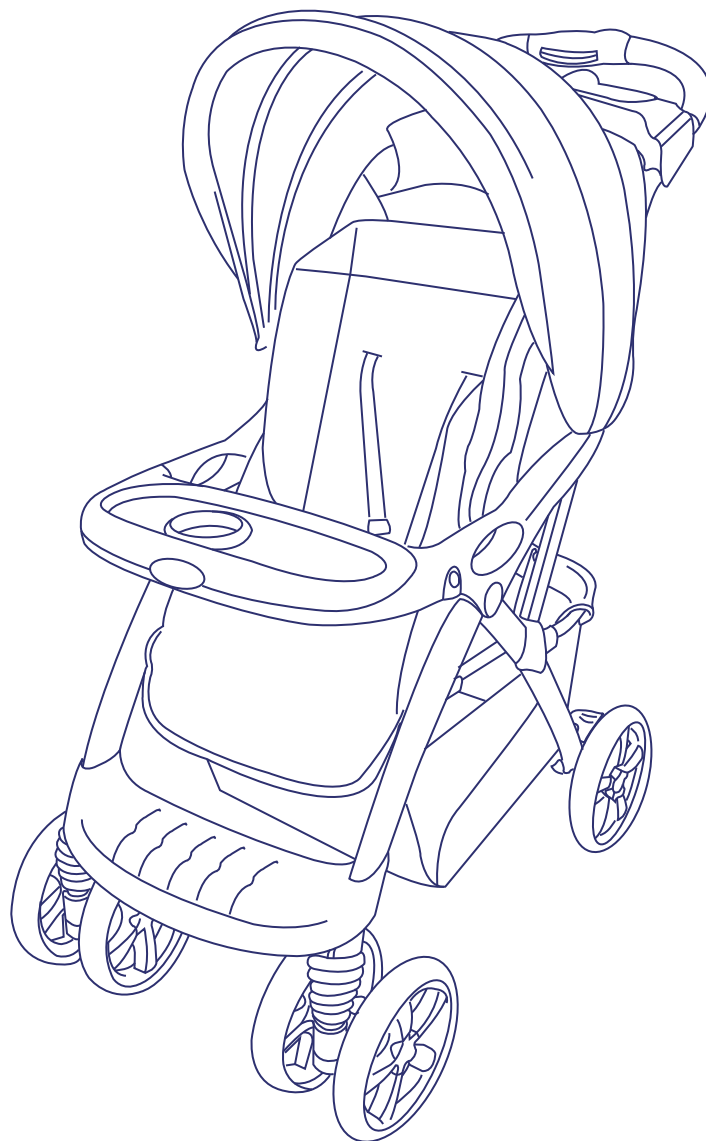


MODEL # 1963CT

StrideZ Travel System

Instruction Manual

WARNINGS

 **WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

 **WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the seat belt and insure that the child is properly positioned according to these instructions.

 **WARNING:** Never leave child unattended.

- * Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- * The maximum weight that can be carried in the basket is 5 lbs. The maximum weight that can be carried in the Parent Tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- * Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- * The maximum weight capacity of this stroller is up to 45 pounds additional weight will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- * DO NOT use the stroller on stairways or escalators.
- * Never allow your stroller to be used as a toy
- * To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- * Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- * Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.


Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 am and 4:30 pm Pacific Coast Time. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.

To Contact Us:

Baby Trend, Inc.
1567 S. Campus Ave.
Ontario, CA 91761

Customer Service Hot Line
(800) 328-7363
8:00 a.m. to 4:30 p.m. Pacific Standard Time

PARTS

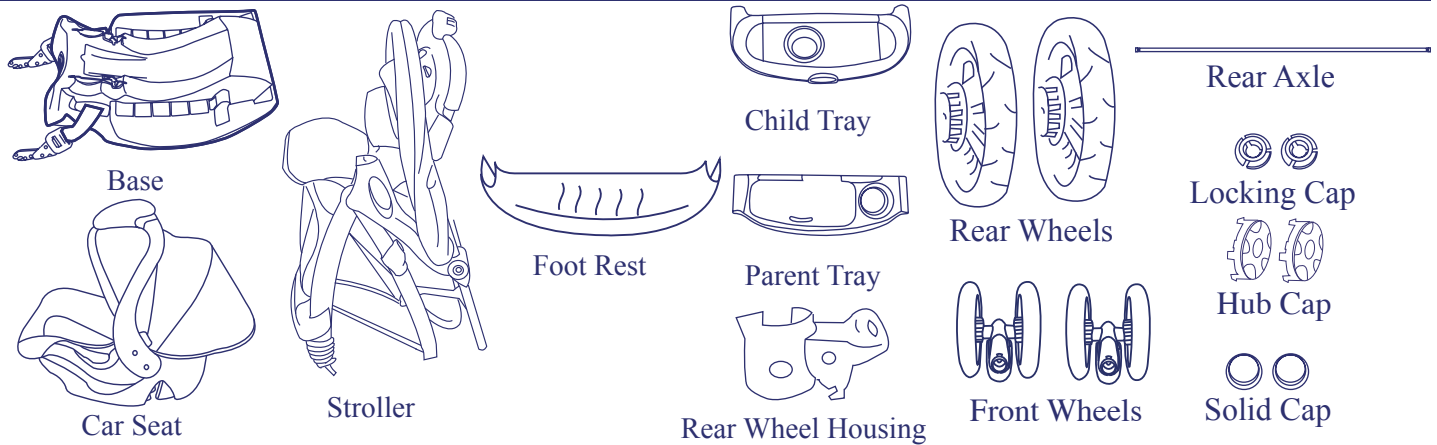

TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

TO ASSEMBLE STROLLER

- * Remove stroller from box. The front wheels, rear wheels, child tray, parent tray, foot rest need to be installed prior to use.
 - * To attach the front wheels, unfold stroller as described in the section following. See figure 1.
 - * Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel tubes are pointing upward. Position the front wheel assembly at the front tube such that the hole in the swivel assembly will slide onto the front tube. Please see figure 2. Push each front wheel assembly onto the front tube being careful that wheel assembly locks onto the front leg. Pull on the wheel assembly to ensure that it is securely attached to the stroller. Please see figure 2.
 - * Lean the stroller forward to rest on the front wheels. Assemble the rear wheels as follows:
 1. Slide the rear wheel housings onto each rear stroller leg until locked into place. The push button on the forward edge of the leg should snap into the hole in the housing. Please see figure 3.
 2. Slide the rear axle through the housings as shown in figure 4.
 3. Slide each wheel onto the rear axle and secure in place with the Locking Cap. Snap the solid cap over the Locking Cap. Snap the Hub Cap onto the wheel. Please see figure 5. Please see figure 6 for order assembly.
- Pull on each wheel to ensure that each is firmly attached to the axle.
- * Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PCT, for assistance.

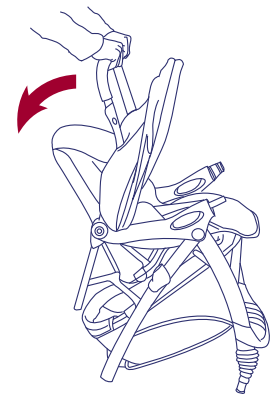


Figure 1.

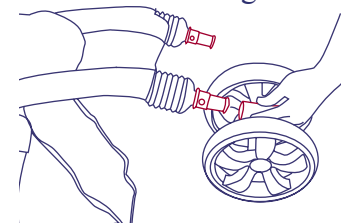


Figure 2.

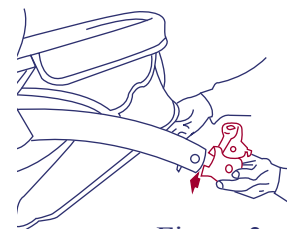


Figure 3.

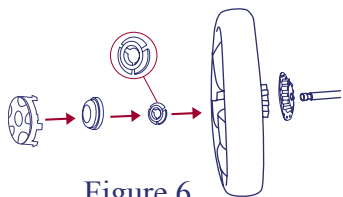


Figure 6.


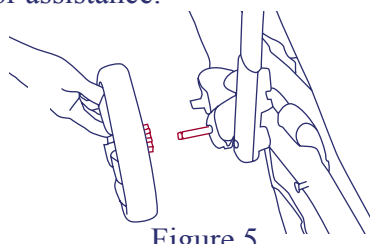


Figure 5.

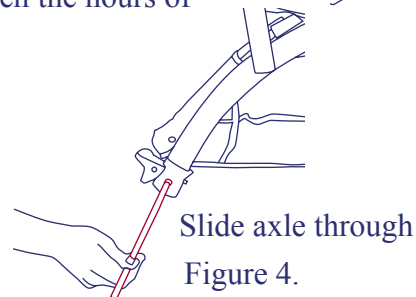

Slide axle through
Figure 4.

- * To attach the front child tray, push the angled tray onto the post at the end of right armrest, while pressing downward on the snap button, until locked into place. Please see figure 7. Rotate the tray downward until latched onto the left armrest. Please check that the snap button comes through and securely latches the tray in place. Please see figure 8.
- * To remove front child tray, press inward on the left side tray release button and rotate upward on the tray. Please see figure 9. Please note that you may remove the tray completely by depressing the snap button on the right side as shown in figure 10 while pulling forward on the tray. Please see figure 7.
- * To attach the parent tray, align the fittings on the ends of the parent tray with the fittings on the outsides of the handle. Push downward on the tray until locked into place. Please see figure 11. To remove the parent tray, pull outward on the bottom edges of the tray and lift upward. Please see figure 12.
- * To install foot rest, line up the foot rest with the stroller frame and push onto the frame. Please see figure 12A.
- * Next, slide the foot rest down onto the protruding rivets until snaps into place. Please see figure 12B.
- * The storage basket swings downward to allow easy access to the basket contents. Lift upward on the rear tube of the basket to lock in the up position. Please see figure 13. To lower the basket, pull rearward on the center of the basket tube and press downward. Please see figure 14.
- * Push forward on the front frame of the canopy to open. Please see figure 15.

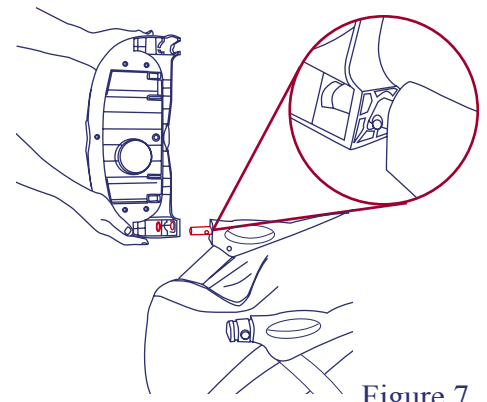


Figure 7.

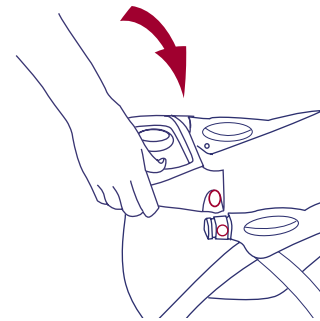


Figure 8.

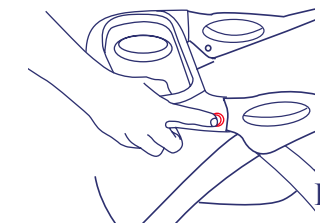


Figure 9.

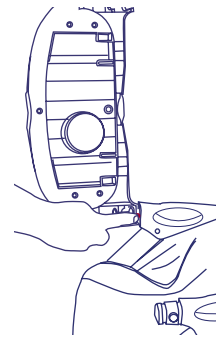


Figure 10.

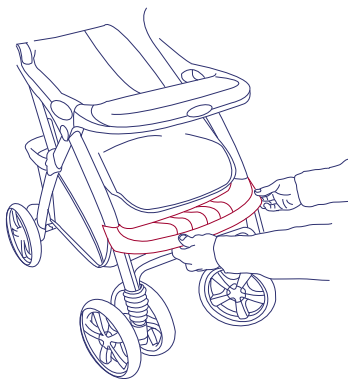


Figure 12A.

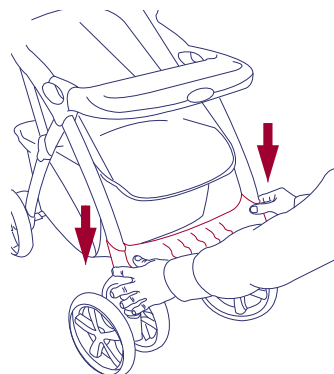


Figure 12B.

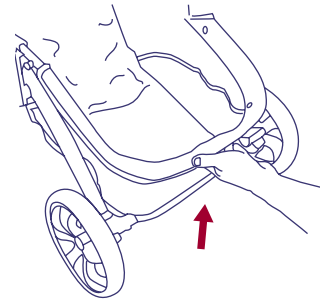


Figure 13.

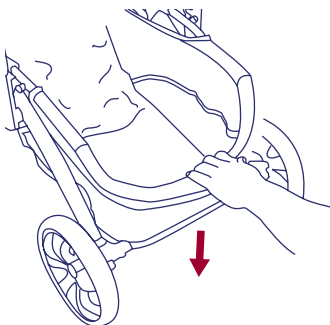


Figure 14.

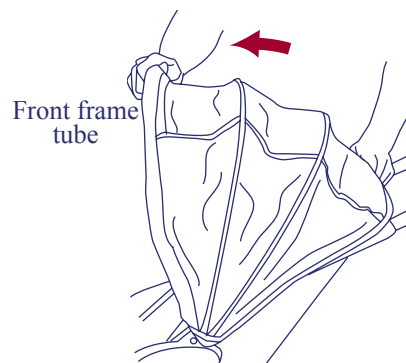


Figure 15.

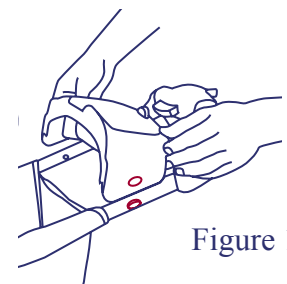


Figure 11.

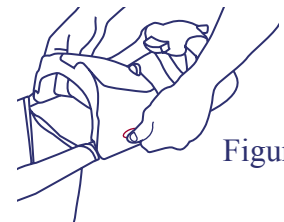


Figure 12.

TO SECURE THE CHILD

- The shoulder straps of the 5-point harness have 2 attachment positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder. To access the harness pull apart seat pad. Please see figure 16.
- Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 17.

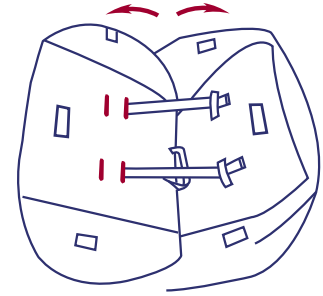


Figure 16.

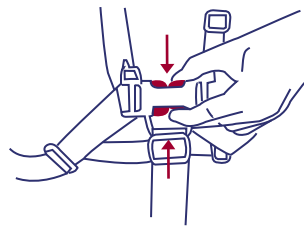


Figure 18.

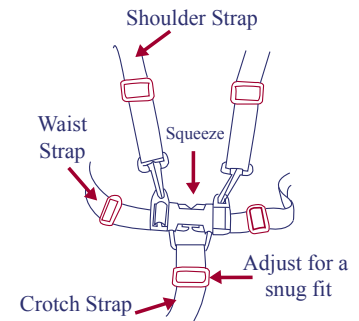


Figure 17.

- To release, apply pressure to both sides of each male clip until the clip is released. See figure 18. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

⚠ STRANGULATION HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

ATTACHMENT OF THE BABY TREND INFANT CAR SEAT

- * To attach the Baby Trend Infant Car Seat, recline the seat all the way back. Please see figure 19
- * **Check that the front child tray is firmly attached to the stroller armrests.** Pull rearward on the rear edge of the front child tray cover while lifting upward on the tray cover. Please see figure 20 and 21. Remove the tray cover and store in the stroller basket.
- * Position the Infant Car Seat, facing toward the rear of the stroller, so that the seat shell goes into the front tray and latches into place. Please see figure 22. **Check that the Infant Car Seat is firmly locked onto the front tray before using.**
- * To remove the Infant Car Seat, squeeze the release handle located at the foot-end of the seat and carefully lift upward on the seat. Please see figure 23.

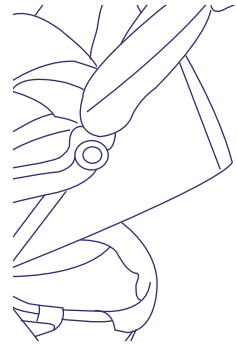


Figure 19.

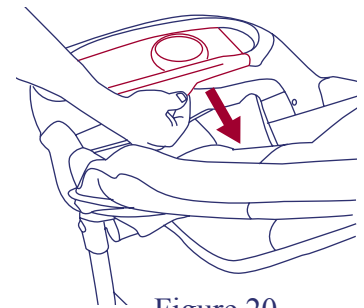


Figure 20.

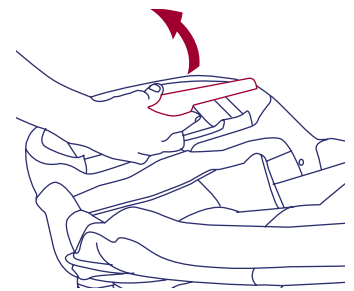


Figure 21.

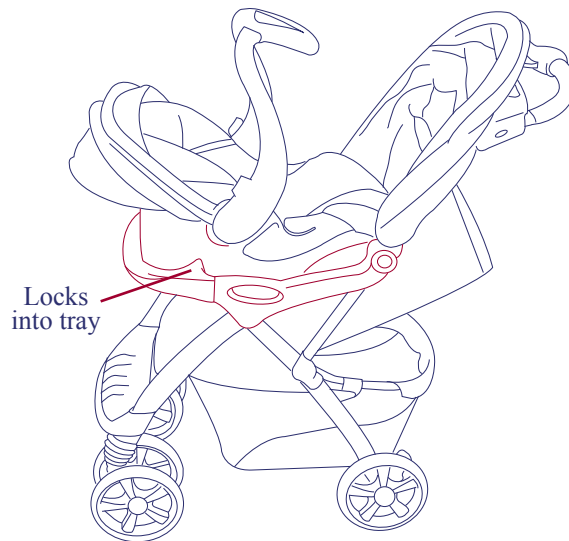


Figure 22.

⚠ WARNING: Failure to follow these car seat attachment instructions could result in serious injury or death.

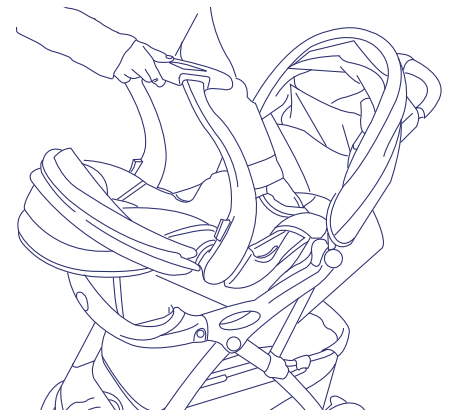


Figure 23.

FRONT CHILD / CAR SEAT TRAY COVER

- * The cover of the child/car seat tray may be fastened in the closed position after your child outgrows the infant car seat. This will prevent an older child from opening the child tray. To secure the tray cover, remove the tray from the stroller as shown in the to remove front child tray section. Install the tray cover. Place the tray with the lid side down on a soft flat surface. Remove the screw stored under the tray as shown in figure 24. Insert the screw into the hole in the bottom of the tray and into the matching hole in the cover. Tighten until snug. Do not over tighten. If you wish to use the car seat tray function at a later date (for a second child) remove the screw and store in the tray bottom as before. Please see figure 24.

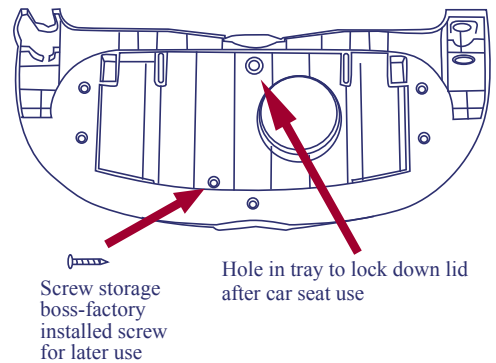


Figure 24.

SEAT BACK POSITIONING

⚠ WARNING: The upright position should be used only for a child that is at least 6 months old.

- * The seat has a multiple position recline that is controlled by a cord and spring loaded adjuster behind the seat. To recline the seat, pull back on the loop of the adjuster. Please see figure 25. To place the seat back in a more upright position, grab the adjuster with one hand and pull the cord to the desired position with the other hand. See figure 26. The cord will lock automatically.

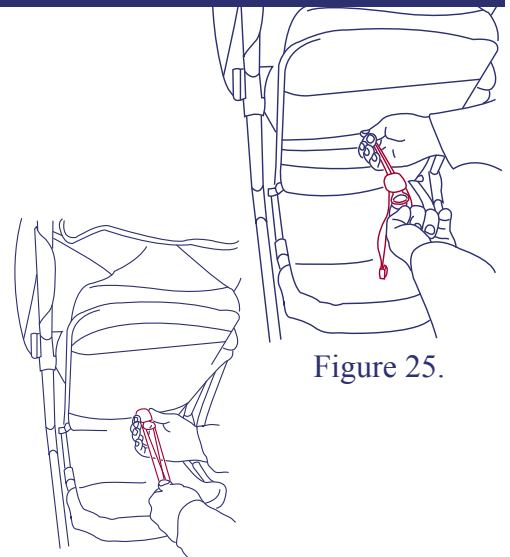


Figure 25.

Figure 26.

BRAKES

⚠ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

- * To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. See figure 27. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever.

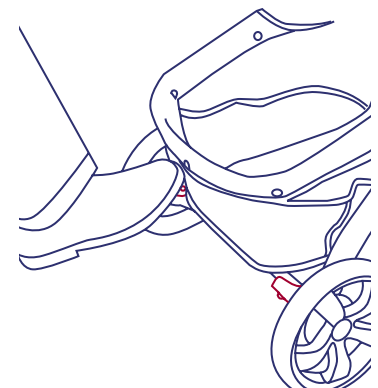


Figure 27.

CANOPY

- * To open the canopy, push forward on the front frame of the canopy. To close canopy, pull the front edge toward the rear of the stroller until folded. Always fold the canopy prior to folding the stroller frame. Please see figure 28. The canopy may be moved forward to block the sun or wind.

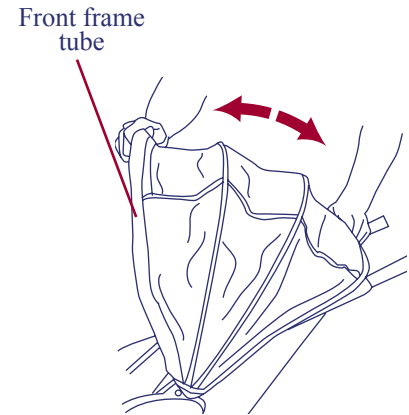


Figure 28.

TO REMOVE FRONT CHILD TRAY

- * To remove front child tray, press inward on the tray release button on the left armrest and pull up on the tray. Please see figure 9. Also, the tray may be completely removed by depressing the snap button on the right side as shown in Figure 10 while pulling forward on the tray

BASKET

- * The storage basket swings downward to allow easy access to the basket contents. Lift upward on the rear tube of the basket to lock in the up position. Please see figure 29. To lower the basket, pull rearward on the center of the basket tube and press downward. Please see figure 30.

The maximum weight that can be carried in the basket is 5 lbs.

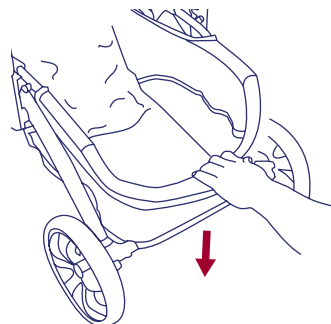


Figure 30.

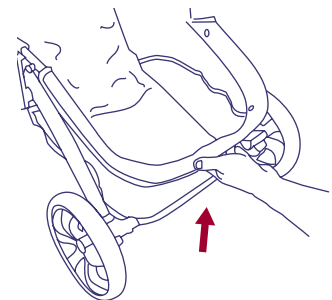


Figure 29.

CAUTION: Read the following section completely before folding your stroller!

TO FOLD STROLLER

- * Close the canopy as described in the canopy section. **NOTE: For an easier fold place the seat in the furthest recline position.** To fold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push downward on the handle. Please see figure 31. Once the stroller begins to fold, release the red handle and push forward on the handle until the stroller is folded. Please see figure 32. The stroller will automatically lock when folded correctly, and will stand freely in the folded position.

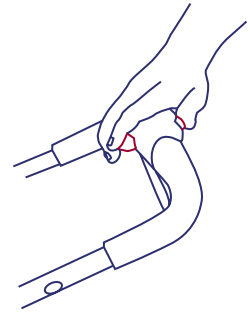


Figure 31.

⚠ WARNING: Failure to follow these folding instructions could result in serious injury or death.

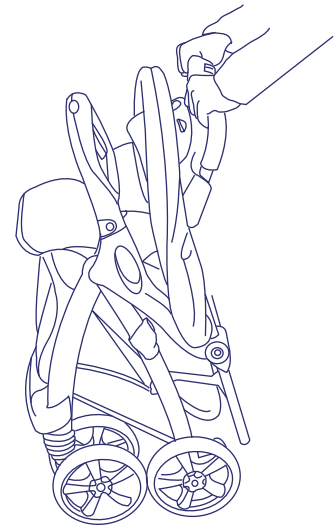


Figure 32.

TO UNFOLD STROLLER

- * To unfold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and lift up and back on the stroller handle with both hands until the stroller frame is erect and locked in the open position. See figure 33. The stroller has spring-loaded latches on both sides of the frame. **Test that both latches are fully engaged prior to placing your child in the stroller.**

⚠ WARNING: Failure to follow these folding instructions could result in serious injury or death.

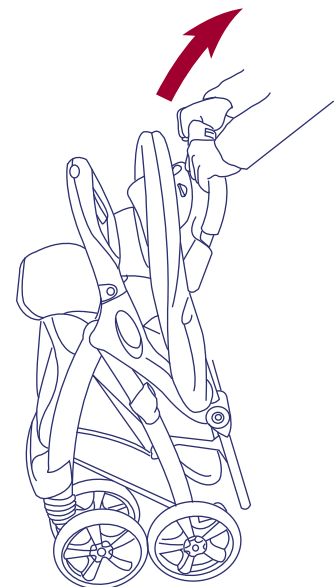


Figure 33.

CLEANING SEAT PAD

* To clean the seat pad. use warm water, soap and a sponge, and let air dry.



**IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363
BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC COAST TIME FOR ASSISTANCE.**