


EURO BUGGY



If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 am and 4:30 pm Pacific Coast Time or visit us online at www.babytrend.com. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.

To contact us:
Baby Trend, Inc.
1567 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
(800) 328-7363
8:00 am and 4:30 pm Pacific Coast Time

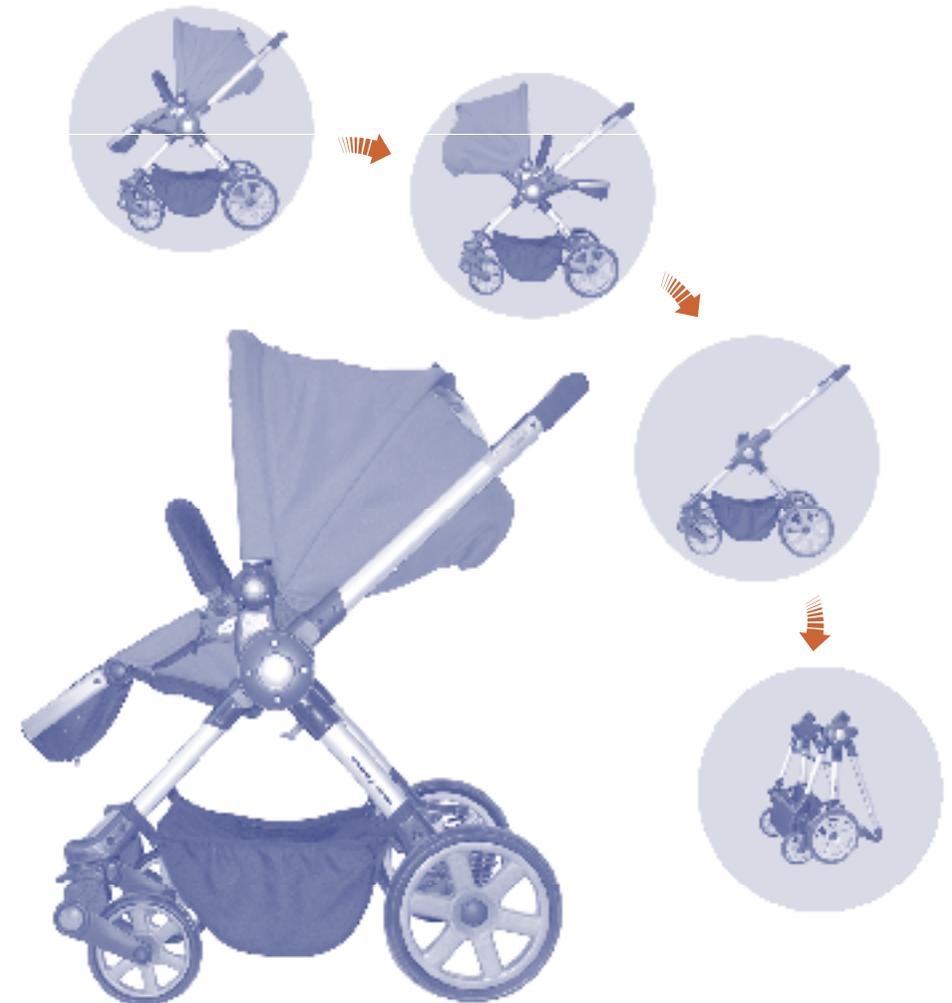

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your children. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the infant car seat harness and insure that the child and infant car seat are properly positioned according to these instructions.

⚠️ WARNING: Never leave child unattended.

⚠️ WARNING: Care must be taken when folding and unfolding the product to prevent finger entrapment.

CAUTION:

- It may be dangerous to leave a child unattended.
 - Check that all the fastening devices fit together before using them.
 - Accessories that have not been approved by the manufacturer should not be used.
 - Any load attached to the handlebars will affect the stability of the stroller.
 - Do not use the crotch strap without the waist belt.
 - Check that the fastening systems of the carrycot and stroller are in place before using them.
 - This stroller may only be used by a child.
 - This stroller is not designed to go down stairs or cross areas with obstacles that might upset its stability, so we advise you to take the baby out of the chair for such operations.
- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
 - The maximum weight that can be carried in the basket is 5 lbs. The maximum weight for the parent tray is 3 lbs.
 - Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
 - Excessive weight may cause a hazardous unstable condition to exist.
 - Use of the stroller with a child weighing more than 45 pounds will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
 - **DO NOT** use the stroller on stairways or escalators.
 - Never allow your stroller to be used as a toy.
 - To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
 - Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
 - Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.




Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 and 4:30 Pacific Coast Time or visit us online at www.babytrend.com. Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 800.328.7363 BETWEEN THE HOURS OF 8:00AM AND 4:30PM (PST) FOR ASSISTANCE.

To Contact us:

Baby Trend, Inc.
1567 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
(800) 328-7363
8:00 a.m. and 4:30 p.m. (PST)

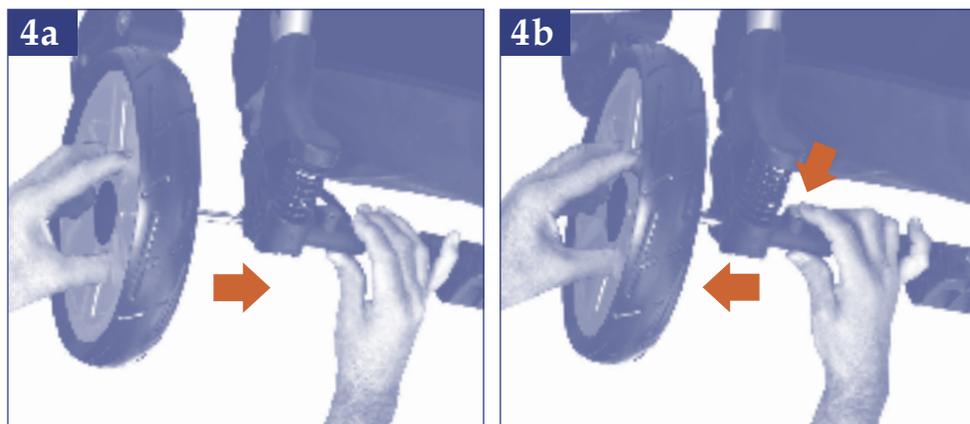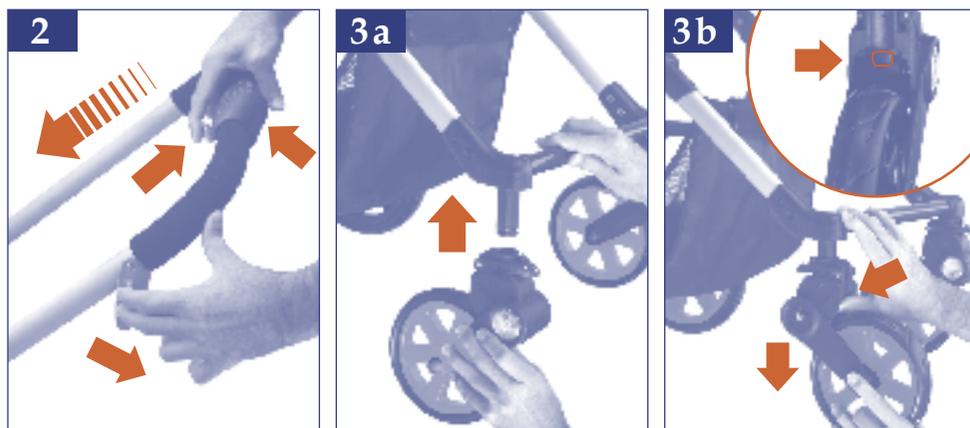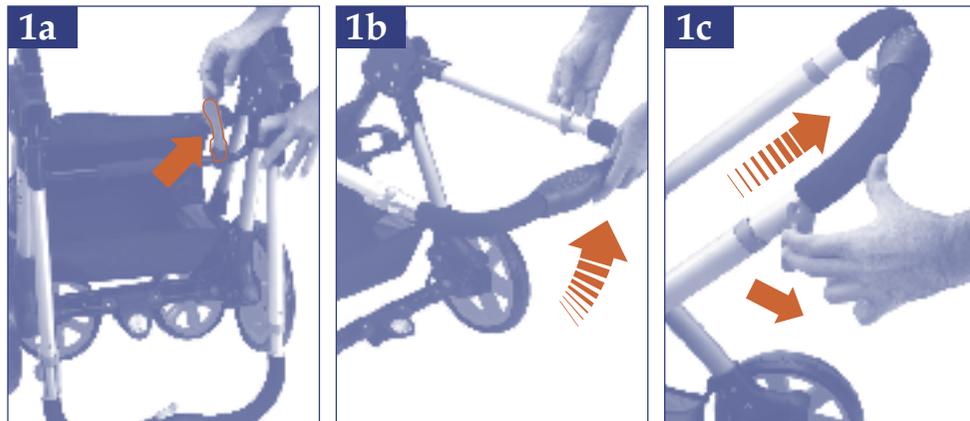

THE 5-POINT HARNESS

The shoulder straps of the 5-point harness have 3 attachment positions. See figure 1. To access the end of the shoulder straps, unzip the back pocket zipper and another inside zipper. See figure 2. Reach inside and feed the buckle through the backing and the vinyl loop. Select the loop position that places the shoulder strap level with, or below the top of the child's shoulder and feed the shoulder harness under the correct loop. See figure 3

Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 4.

To release, apply pressure to both sides of each male clip until the clip is released. See figure 5. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

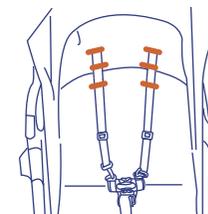


Figure 1

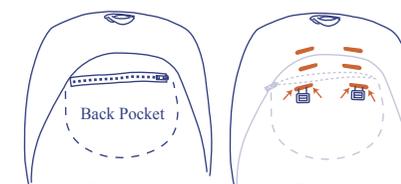


Figure 2

Figure 3

⚠️ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

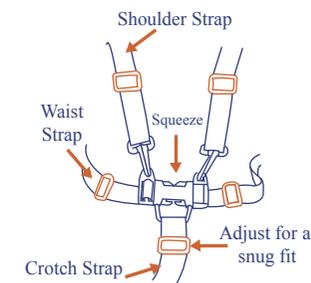


Figure 4

⚠️ STRANGULATION HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.



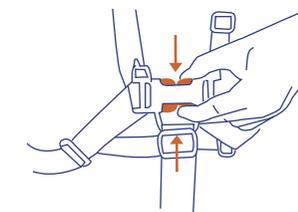


Figure 5

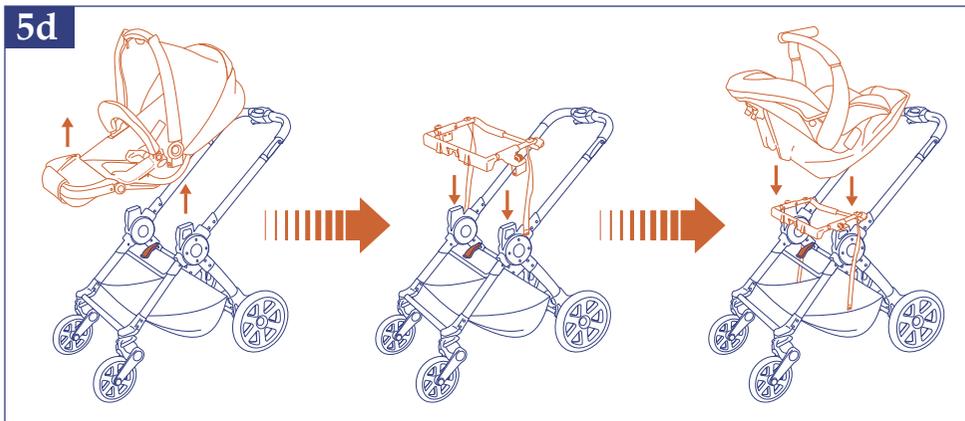

! WARNING: Please follow the steps to attach the car set onto the stroller. always make sure the car seat is fully engaged and locked onto the bar before moving the stroller.



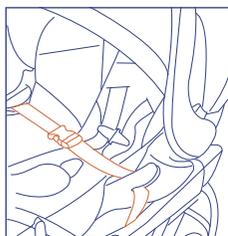


It is mandatory to fasten the safety harness on the car seat to avoid any serious injury.

This car seat bar can be fit into most major brands of car seats which have the function to adapt onto a shopping cart.

- 1 TO UNFOLD THE CHASSIS**
 Lift the safety lock in the center / right of the two cross tubes. (1a)
 Raise the handlebar until you hear the final safety click. The chassis is now completely unfolded and fixed in place. (1b)
 Release the lock located on the left of the handlebar to position it at the right height. Every time you raise or lower it, you should hear the locking click for each position. (1c)
- 2 TO FOLD THE CHASSIS**
 Press the button located above the folding mechanism in the center of the handlebar. Press the trigger located below the folding mechanism in the center of the handlebar. Raise the trigger located on the tube to your left to allow you to move the whole handlebar downwards. Push the handlebar firmly downwards until you hear the sound at the end of its run to unlock the safety lock located inside the bottom tube. Keep pushing the handlebar downwards until it is completely folded.
- 3 POSITIONING AND REMOVING THE FRONT WHEELS**
 To position them, line up the stud on the wheel block with the hole in the axle. Insert one into the other until you hear the final fastening click. (3a)
 To remove them, press the tab that is inside the axle block and pull on it. (3b)
- 4 POSITIONING AND REMOVING THE REAR WHEELS**
 To position them, line up the metal lug incorporated on the wheel with the hole in the axle. Press until you hear the fastening click. (4a)
 To remove them, press the inner button and pull it out. (4b)
- 5 POSITIONING THE SEAT/CHAIR OR INFANT CAR SEAT**
MANY OF THESE ACCESSORIES ARE REVERSIBLE, I.E. THEY CAN BE POSITIONED FACING FORWARDS OR BACKWARDS.
 Once the chassis is completely open and fixed in place, you can then add on the accessory you want. You will see that the round central mechanism on the top has a guide with a central hole where all of the above accessories fit.
 Hold the Seat/Chair by the center of the handle of the hood and enter the end of it into the central guide directly without the car seat bar and gently press down until you hear the final safety click. It is now completely fixed in place and secure. (5a/ 5abis)
 To fix in place an infant car seat, you must first position the car seat bar, following these steps as those to position the seat.

 - 1.) Place car seat bar onto both side, and press down until you hear the click, pull up the bar to ensure it is fully engaged. (5b)
 - 2.) Place the infant car seat onto the bar. Make sure the latch is fully clicked on and engaged. Note: Some brands of infant car seats will lock onto the front bar, and other may simply rest on top of the bar. (5c)
 - 3.) Strap the safety harness over the infant car seat and connect buckles together. Tighten the harness so the car seat is snug and can't move. (5d)

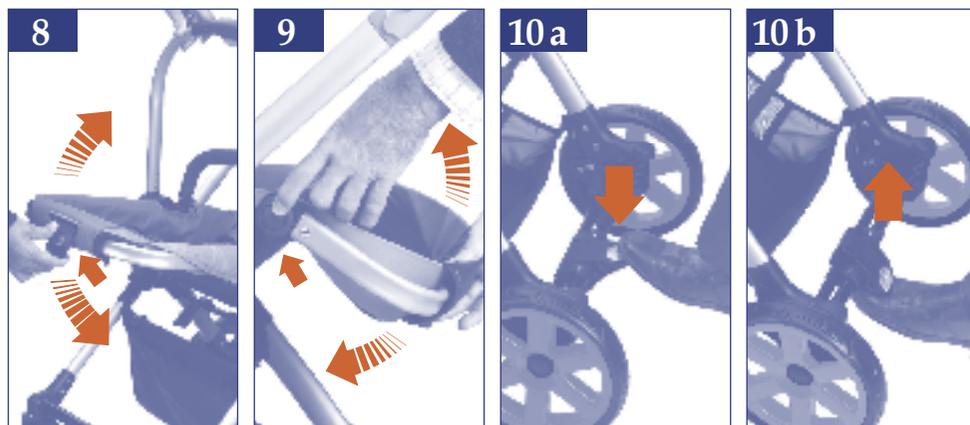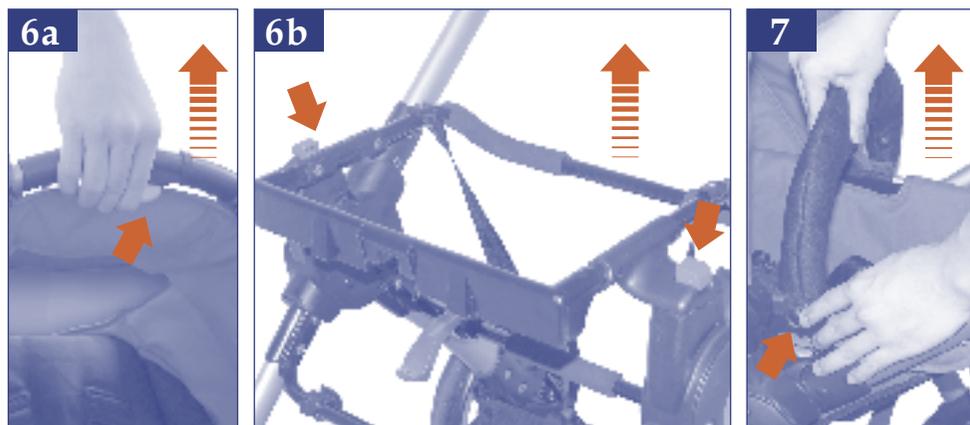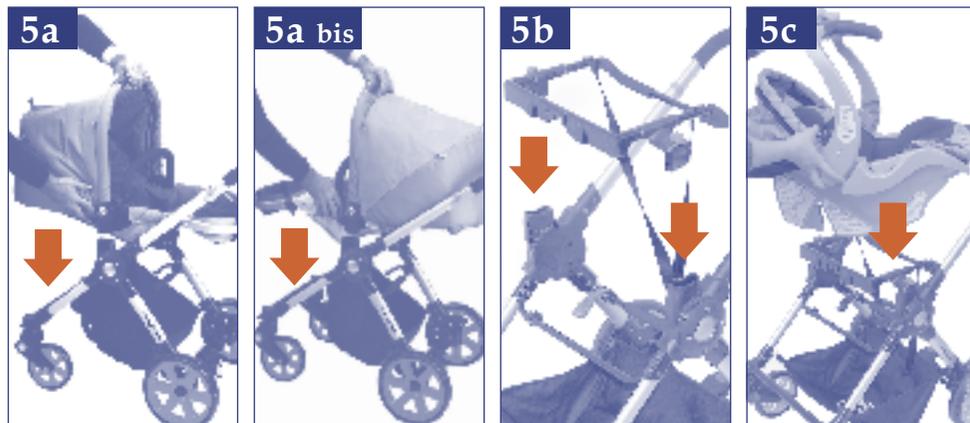

- 6** **RELEASING THE SEAT/CHAIR**
To release the Seat/Chair, press the button underneath the central part of the handle and pull the whole unit upwards. (6a)
To release the infant car seat, unlock it from the bar and pull the whole unit upwards. (On how to unlock the car seat, please refer to your infant car seat instruction manual)
To remove the car seat bar, press the red button on both sides and pull it upwards. (6b)
- 7** **POSITIONING OR REMOVING THE FRONT PROTECTOR**
When you use your unit as a Seat/Chair, you can equip it with the front protector included with it. To fix it in place, enter the final tab in the corresponding housing. To remove it, press the button and pull the protector out.
- 8** **RECLINING THE SEAT/CHAIR BACKREST**
Raise the lever located just behind the top of the seat to release it. Holding the lever up, position the backrest in the desired position. When you have done this, release the lever until you hear the fastening click.
- 9** **FOOTREST POSITIONS**
To both raise and lower it, press both side buttons at the same time and position it at the desired height.
- 10** **TO KEEP IT BRAKED**
Press the lever located in the centre of the rear axle as far as it will go. (10a)
To release it, raise this lever. (10b)

⚠ WARNING: Failure to follow these car seat attachment instructions could result in serious injury or death.

⚠ WARNING: The upright position should be used only for a child that is at least 6 months old.

⚠ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.