



File Name:	Tire Pump Instruction
Creator:	Adobe Illustrator CS2
Trim Size:	A5:5.8465"W x 8.2677"H
Print Color:	Pantone 2758 C
Date:	12/11/07

Size: A5



# Tire Pump Instruction

 


Fig. 1



Fig. 2

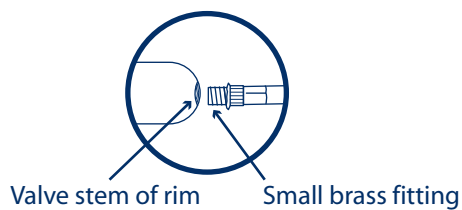


Fig. 3



Fig. 4

1. Remove Tire Pump from storage location, remove flexible air hose (*Fig. 1*) from end of pump (*Fig. 2*), thread small brass fitting into opposite end of pump (*Fig. 3*), thread air nozzle tip onto valve stem of rim (*Fig. 4*), now you're ready to pump up your tires.

2. Hold the body of Tire Pump and pull back on the handle, press down on handle pushing air into tire. Repeat until tire is at 20 pounds.

If you experience any difficulty in using this product, please contact our customer service department at 1-800-328-7363 between the hours of 8:00 am and 4:30 pm (PST) for assistance.

**baby trend®**