

INSTALLATION TIP 1: Ideally, the front of the hoist should point away from the walls. If you must install with the front of the hoist pointed towards a wall, please follow the clearance requirement, as shown. If you do not follow the clearance requirement, you will not have enough room to stand and comfortably operate the hoist.

Note: If a protruding object, such as a shelf, is against the wall, measure from the protruding object instead of from the wall.

