



# IndestrucTable® Classic Picnic Folding Table 72inch

## Assembly Instructions

 
### 65925

US: 1-800-843-2900






US: 1-800-843-2900

Canada: 800-843-2900


Model 65925




Required Tools

CONTENTS		
Ref.	Qty.	Description
1	1	Table 
2	1	Bench 
H1	4	Wrench 
H2	3	Screw 
H3	6	Nut 


**1** Open table and benches upside down on protected surface.

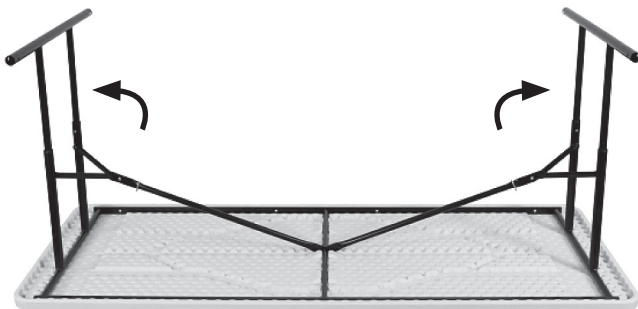

**2** Ensure that the diagonal braces are in locked position.

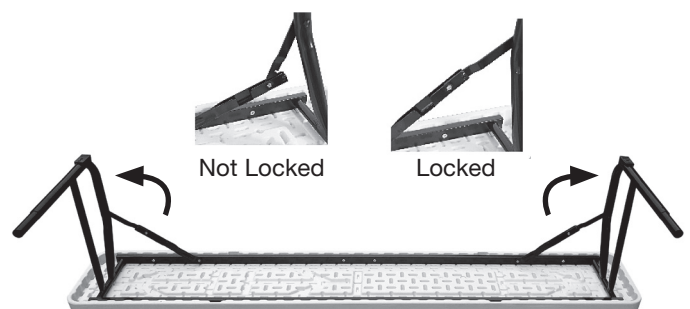

**3** Attach benches to table with leg screws and washers at highlighted positions. Do not tighten screws until all are in place.

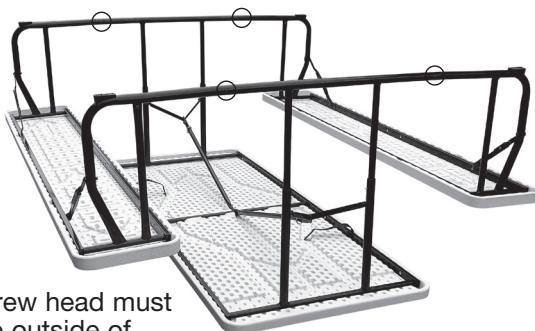


Note: Screw head must be on the outside of the frame.

**4** Ensure that the diagonal braces are in locked position.



# Folding Plastic Picnic Table

**To Fold Table:** Press buttons and push table top downward. Push down on the table and bench braces. Fold leg frames inward.

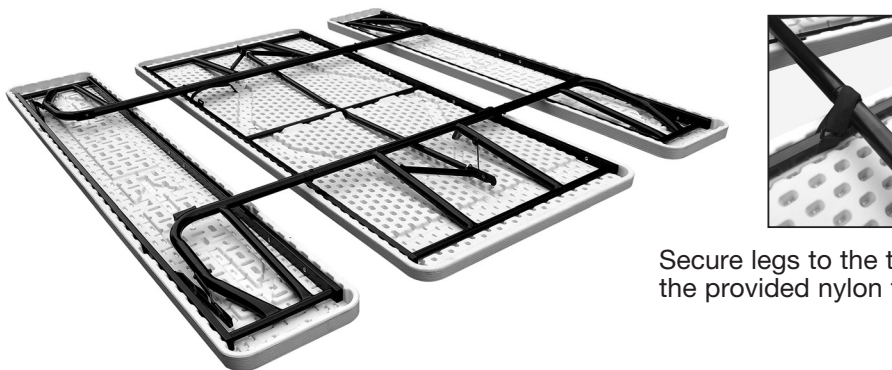

Secure legs to the table using the provided nylon fasteners.

**To Open Table After Assembly:** Unfold leg frames. Push table and leg braces into lock position. Flip table over. Press buttons to raise table.

