

GemiBook X

User Manual

取扱説明書

用戶手冊

Guide dell'utente

Guía del usuario

Руководство пользователя

Bedienungsanleitung

Guide d'utilisation

Made in China

CHUWI



Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.



Introduction

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem


- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD Card up to 128G, SO-DIMM
Other interface	3.5mm headphone jack, DC/Power interface, RJ-45 SD card slot, USB-A 3.0*, USB-A 2.0*, USB-C 3.0*1
Camera	1.0MP
Battery capacity	38Wh (7.6V/5000mAh)
Charger	Input: AC100-240V, 50-60Hz Output: 12V~3A
Size	359.4mm*241.5mm*17.9mm
Play format	Voice format: OGG, ACC, MA4, FLAC, AMR etc. Video format: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4 etc.



CHUWI

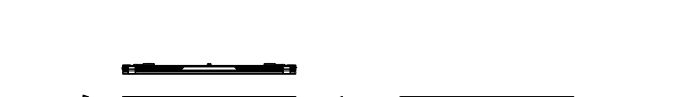

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD Card up to 128G, SO-DIMM
Other interface	3.5mm headphone jack, DC/Power interface, RJ-45 SD card slot, USB-A 3.0*, USB-A 2.0*, USB-C 3.0*1
Camera	1.0MP
Battery capacity	38Wh (7.6V/5000mAh)
Charger	Input: AC100-240V, 50-60Hz Output: 12V~3A
Size	359.4mm*241.5mm*17.9mm
Play format	Voice format: OGG, ACC, MA4, FLAC, AMR etc. Video format: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4 etc.



Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080P
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD card最大128Gまで拡張、SO-DIMM
Other interface	3.5mm ヘッドホンジャック、DC (電源)、RJ-45 SDカードスロット、USB-C 3.0*1、USB3.0*2
カメラ	1.0MP
バッテリー容量	38Wh (7.6V/5000mAh)
電源	入力: AC100-240V, 50-60Hz 出力: 12V~3A
サイズ	359.4mm*241.5mm*17.9mm
音声フォーマット	音声フォーマット形式: OGG, ACC, MA4, FLAC, \ AMR など
動画ファイル形式	動画ファイル形式: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4など

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080P
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD card最大128Gまで拡張、SO-DIMM
Other interface	3.5mm ヘッドホンジャック、DC (電源)、RJ-45 SDカードスロット、USB-C 3.0*1、USB3.0*2
カメラ	1.0MP
バッテリー容量	38Wh (7.6V/5000mAh)
電源	入力: AC100-240V, 50-60Hz 出力: 12V~3A
サイズ	359.4mm*241.5mm*17.9mm
音声フォーマット	音声フォーマット形式: OGG, ACC, MA4, FLAC, \ AMR など
動画ファイル形式	動画ファイル形式: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4など

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080P
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD card最大128Gまで拡張、SO-DIMM
Other interface	3.5mm ヘッドホンジャック、DC (電源)、RJ-45 SDカードスロット、USB-C 3.0*1、USB3.0*2
カメラ	1.0MP
バッテリー容量	38Wh (7.6V/5000mAh)
電源	入力: AC100-240V, 50-60Hz 出力: 12V~3A
サイズ	359.4mm*241.5mm*17.9mm
音声フォーマット	音声フォーマット形式: OGG, ACC, MA4, FLAC, \ AMR など
動画ファイル形式	動画ファイル形式: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4など

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD Card fino a 128GB, SO-DIMM
Altre interfacce	RJ-45, USB-A 3.0*, USB-A 2.0*, USB-C 3.0*1
Fotocamera	1.0 MP
Capacità Batteria	38Wh (7.6V/5000mAh)
Caricabatterie	Ingresso AC100-240V, 50-60Hz Uscita: 12V~3A
Dimensioni	359.4mm*241.5mm*17.9mm
Formati Supportati	Audio: OGG, ACC, MA4, FLAC, AMR etc. Video: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4 etc.

Introduction

Caro cliente, grazie per aver scelto un prodotto CHUWI. Questo Tablet/PC è stato pensato e prodotto da CHUWI per accompagnarvi nella vita quotidiana e darvi la migliore esperienza d' uso per Internet, Video, Giochi ed Applicazioni a casa o in ufficio. Per favore leggere il manuale d' uso per avere tutte le informazioni necessarie prima dell' utilizzo!

Avvertenze

- Per favore, usare solo il carica batteria originale fornito. Per qualsiasi malfunction causato da alimentatori diversi da quello fornito a corredo, la azienda non si prende responsabilità e non fornisce garanzia.
- Questo Tablet / PC è un prodotto high-tech, che include software e hardware. È possibile utilizzare musica, video, immagini o software forniti da terze parti, ma non ci assumiamo alcuna responsabilità per eventuali problemi di copyright o malfunction del prodotto.
- Se il prodotto si guasta, lo ripareremo secondo i nostri termini di garanzia. Non ci assumiamo alcuna responsabilità per eventuali danni causato da incuria o utilizzo improprio del prodotto, senza nessuna considerazione delle conseguenze.
- Ci continua a non accendersi, contattare il servizio assistenza.
- Il dispositivo ha un software integrato, che può essere normalmente utilizzato dopo aver superato i test qualitativi di fabbrica. Tuttavia, se si riscontrano problemi di compatibilità o altri problemi del software, è possibile ripristinarlo allo stato di origine, senza avere alcun impatto sulla macchina o di qualità del prodotto.
- La società si riserva il diritto di migliorare o aggiornare i prodotti, modificare le specifiche o i design! Si prega di considerare il prodotto che vi arriva, come il modello più aggiornato disponibile.
- 1)Per favore sequite queste indicazioni nel caso servissero:
 - computer sono strumenti elettronici di precisione, non smontare da soli.
 - Evitare di lanciare una collisione.
 - Evitare l' uso di dispositivi ad alta temperatura, bassa temperatura, umidità, polvere, forte campo magnetico ed esposizione prolungata alla luce solare.
 - Pulire delicatamente il dispositivo con un panno di cotone bagnato strizzato, evitare il contatto con altri prodotti chimici.
 - Questo dispositivo non può sopravvivere a cadute e spruzzi d'acqua e non può posizionarlo accanto a un bicchiere pieno di liquido.
 - Utilizzare un volume appropriato per evitare danni all'udito.
 - Utilizzare batterie, caricabatterie e altri accessori originali. L'uso di qualsiasi altro tipo di accessori viola la garanzia e può causare malfunzionamenti dell'apparecchiatura.
 - Non scollegare il dispositivo durante la formattazione o i caricamenti e i download in corso, altrimenti si potrebbero causare errori dell'applicazione.
 - Smartline i macchinari e gli accessori di scarico in conformità con le normative ambientali locali.
 - In caso di domande durante l'uso dell'apparecchiatura, contattare il proprio distributore locale o contattare direttamente il nostro centro di assistenza clienti.
 - L'azienda si riserva il diritto di migliorare il prodotto, le specifiche e il design del prodotto sono soggetti a modifiche senza preavvisi! Si prega di fare riferimento al prodotto reale.

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI
Model	GemBook X
OS	Windows 10
CPU Brand	Intel Celeron N5100
Screen size	15.6"
Screen scale	16:9
Resolution	1920*1080
Display Connection	WiFi (2.4G/5G 802.11a/ac/b/g/n)
Hot function	Bluetooth4.2
Expansion slot	1T M.2 2280*2, SD Card fino a 128GB, SO-DIMM
Altre interfacce	RJ-45, USB-A 3.0*, USB-A 2.0*, USB-C 3.0*1
Fotocamera	1.0MP
Capacità Batteria	38Wh (7.6V/5000mAh)
Caricabatterie	Ingresso AC100-240V, 50-60Hz Uscita: 12V~3A
Dimensioni	359.4mm*241.5mm*17.9mm
Formati Supportati	Audio: OGG, ACC, MA4, FLAC, AMR etc. Video: AVI, MKV, MP4, M4V, WEBM, 3GP, MPEG4 etc.

Introduction

Dear users, Thank you for choosing CHUWI. This is a product elaborately developed by CHUWI for freely surfing on the internet. Please read this user manual carefully before using the machine, so as to correctly use the function of the machine!

Disclaimer

- Please make sure to use the original power brick for charging. For problems or faults caused by any third-party adapter, the company does not undertake responsibility.
- Users can use the music video, pictures and software which provide by third part, but we don't take any responsibility for the copyright issue or software fault.
- If the product fails, we will strictly comply with the warranty terms, but in the process of use may cause property losses or economic losses, we will not be responsible.
- The device comes with factory - built software that can be used after actual testing.However, if you delete or do not delete yourself while looking for compatibility or other issues, there will be no impact on the machine.Please note that it is not a product quality problem.

The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(1)The attentions

- Computers are precision electronic instruments, please do not disassemble by yourself.
- Avoid throwing collision.
- Avoid using device in high temperature, low temperature, humidity, dust, strong magnetic field and long time exposure to sunlight.
- Wipe gently the device by wrung-out wet cotton cloth. Avoid contact with other chemicals.
- This device can't survive drip and splash water, and can't place it beside such as a full glass of liquid.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- Please use appropriate volume to avoid damaging your hearing.
- Please use original battery, charger and other accessories.The use of any other type of accessories will violate the warranty and may cause the equipment to malfunction.
- Do not disconnect the device during formatting or ongoing uploads and downloads or any other application errors.
- If you have any questions during the use of the equipment, please contact your local distributor or contact our customer service center directly.
- The company reserves the right to improve the product, product specifications and design are subject to change without prior notice! Please refer to the real product.

(2) Instructions

The way to turn on the laptop is to press the button, please press the power button to turn on it. Please click "power off" in the OS to turn off the laptop. Pressing the power button for several seconds by force to turn off the laptop can be used in special circumstances. What customer need to pay attention to is that frequent power-off by force may cause system files missing or crash of the laptop.

(3)The solution of common problem

- laptop can't boot
 - a.Check if the battery is fully charged.
 - Check the power adapter before starting the machine again.
 - c.If it is still unable to boot after charging, please contact with our distributors.
 - WIFI can't work
 - a.Please confirm whether there is a WIFI hotspot.
 - b.Make sure that it is connected to the WIFI (enter the settings to check).
- Please confirm the WIFI signal strength and link permission.

(4)Technical specification

Brand	CHUWI</
-------	---------