 
 


Checklist steps for Maintenance on the Twice as Sharp®


1. Turn on machine and check for worn bearings.
It should run quietly at full speed and while slowing down.
2. Check for eye shields, finger guards, and covers.

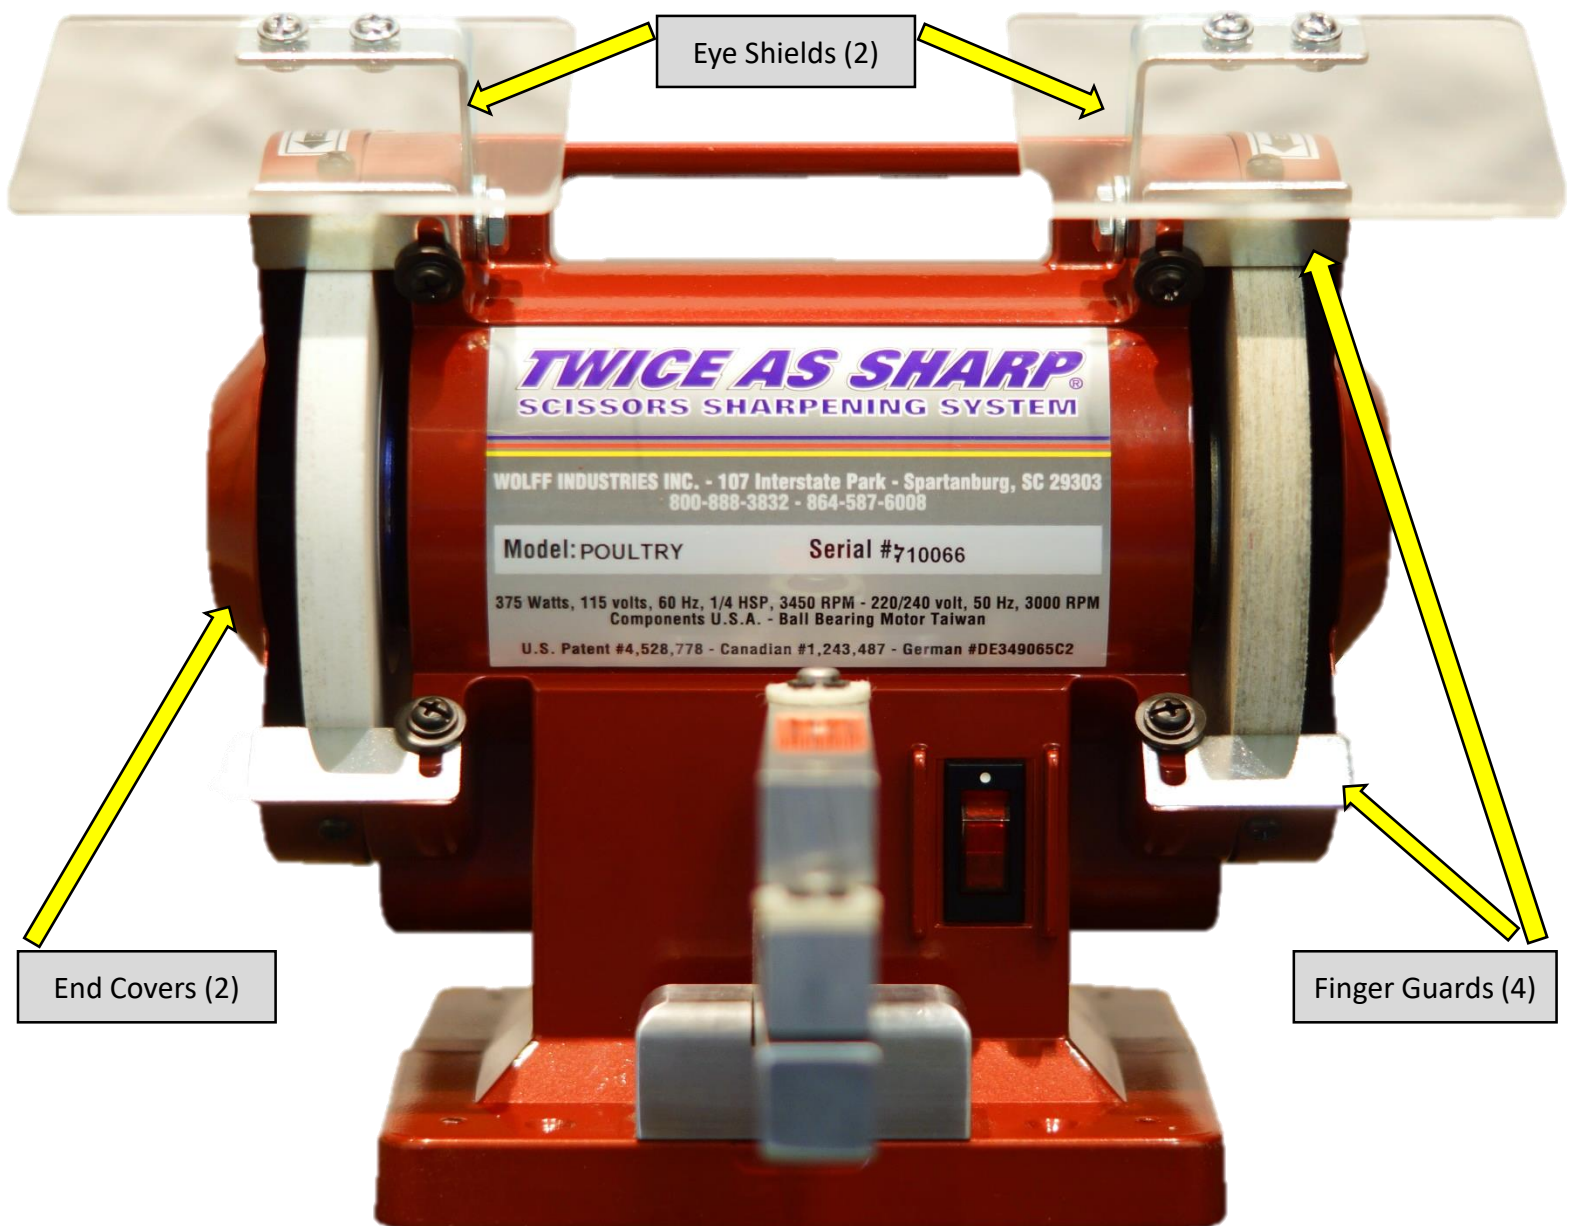

3. Check that the clamp is set at 35°.

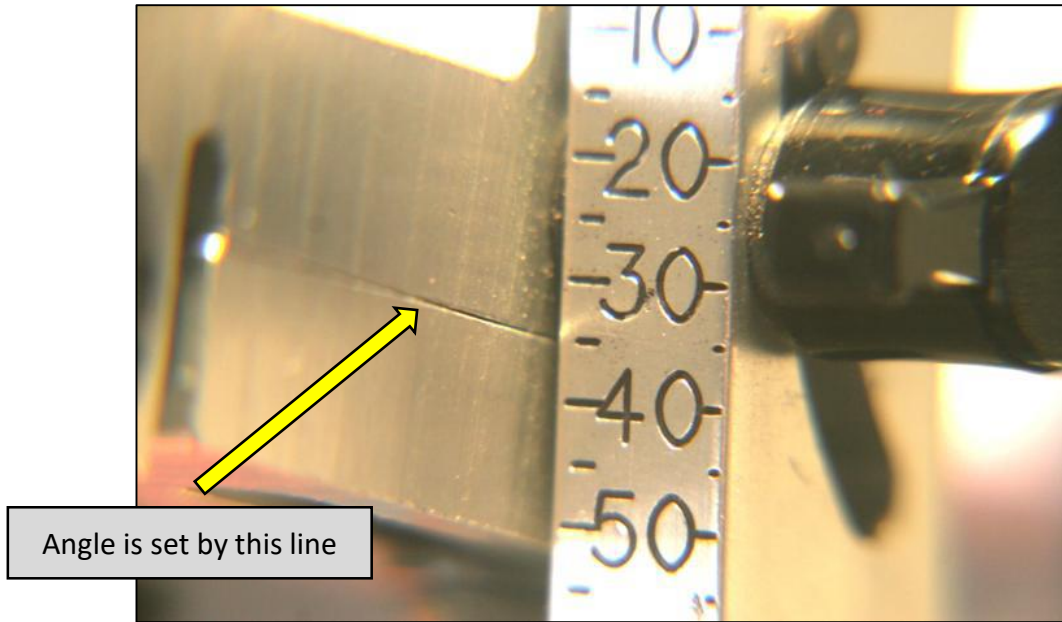


4. Check clamp for lower jaw wear and ease of operation.

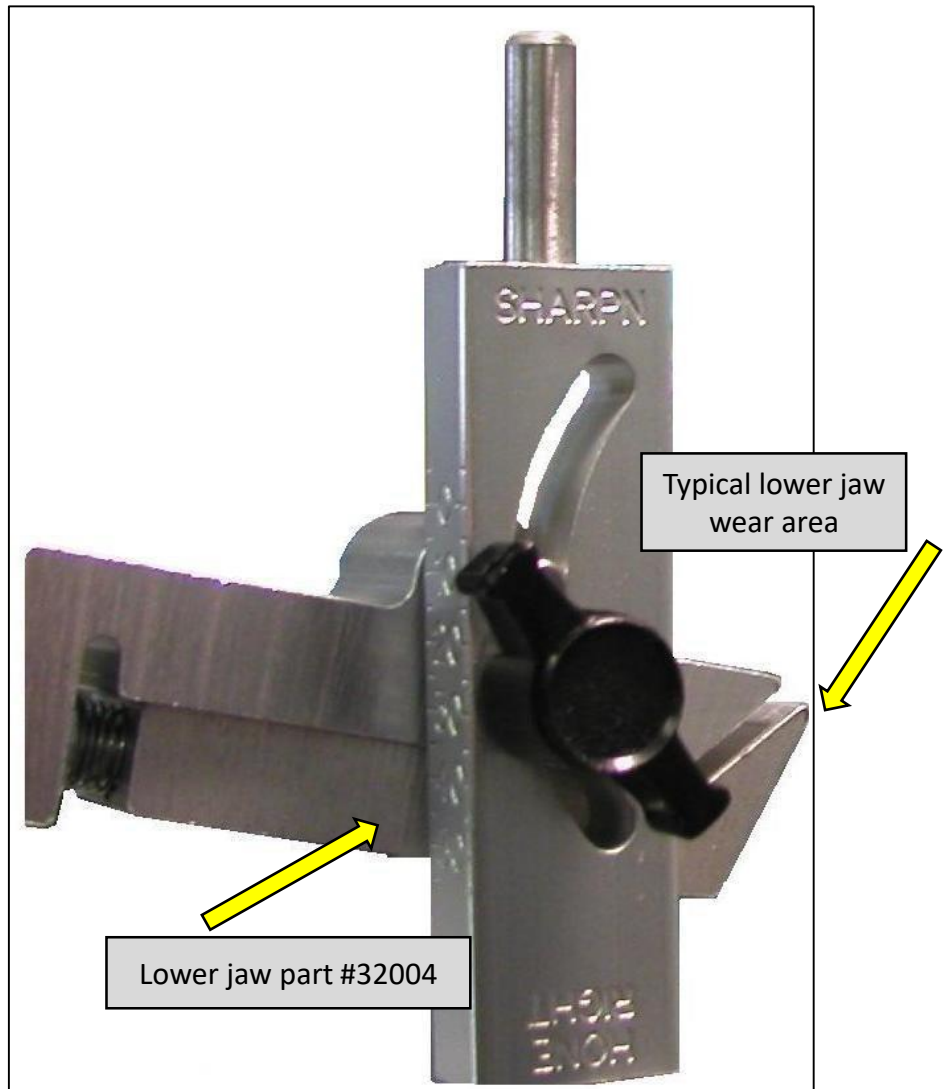


5. Check arm for wear.

- Does it move up and down at the machine body?
- Does it move up and down at the joints?
- Is the clamp hole wallowed out?

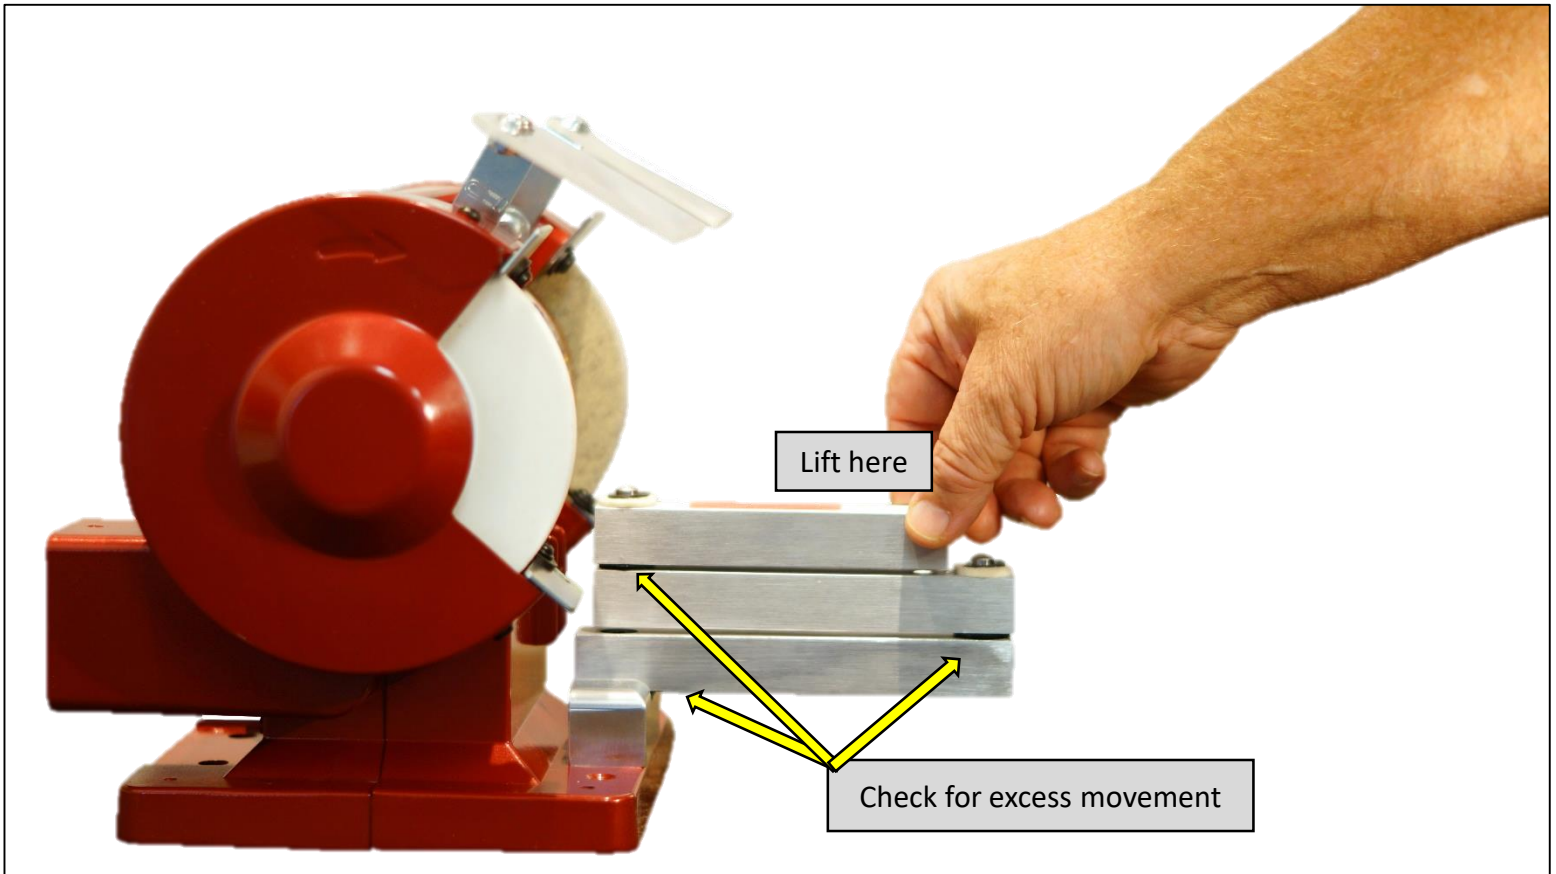

6. Is the machine balanced from sharpening side to honing side? The hone should cover the entire width of the bevel.

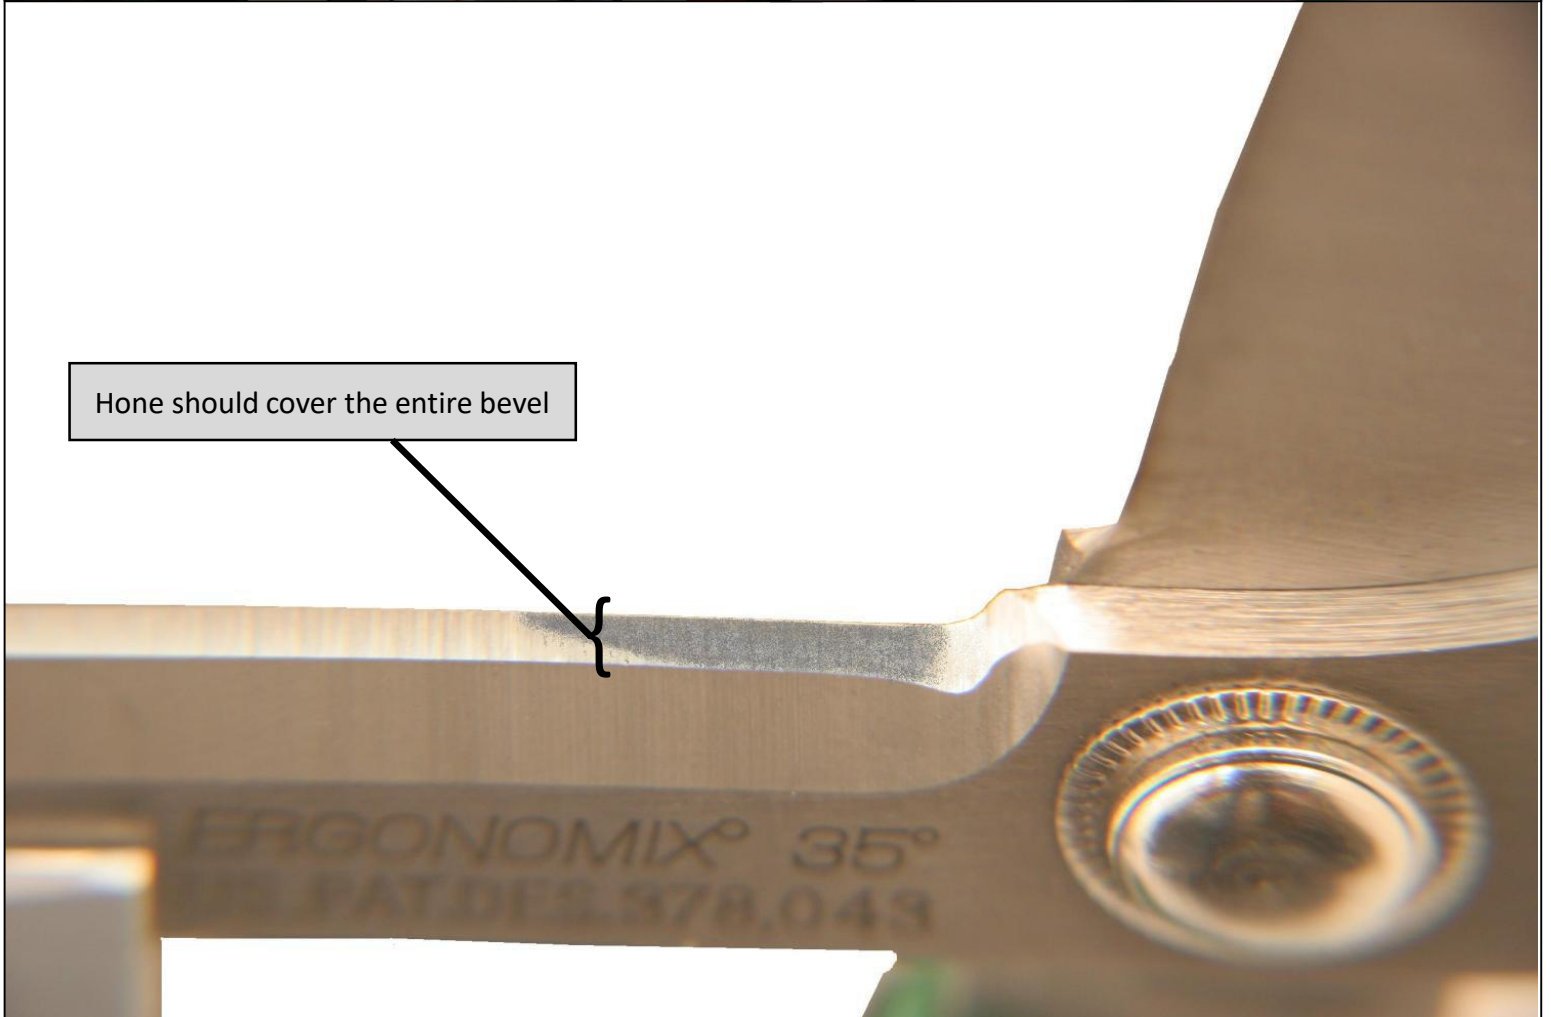


7. Check the power switch.


- Power On/Off?
- Is the switch loose?

8. Check the wheels.

- Proper type installed?
- Is there excessive or uneven wear?
- Have proper facing? (smoothness)

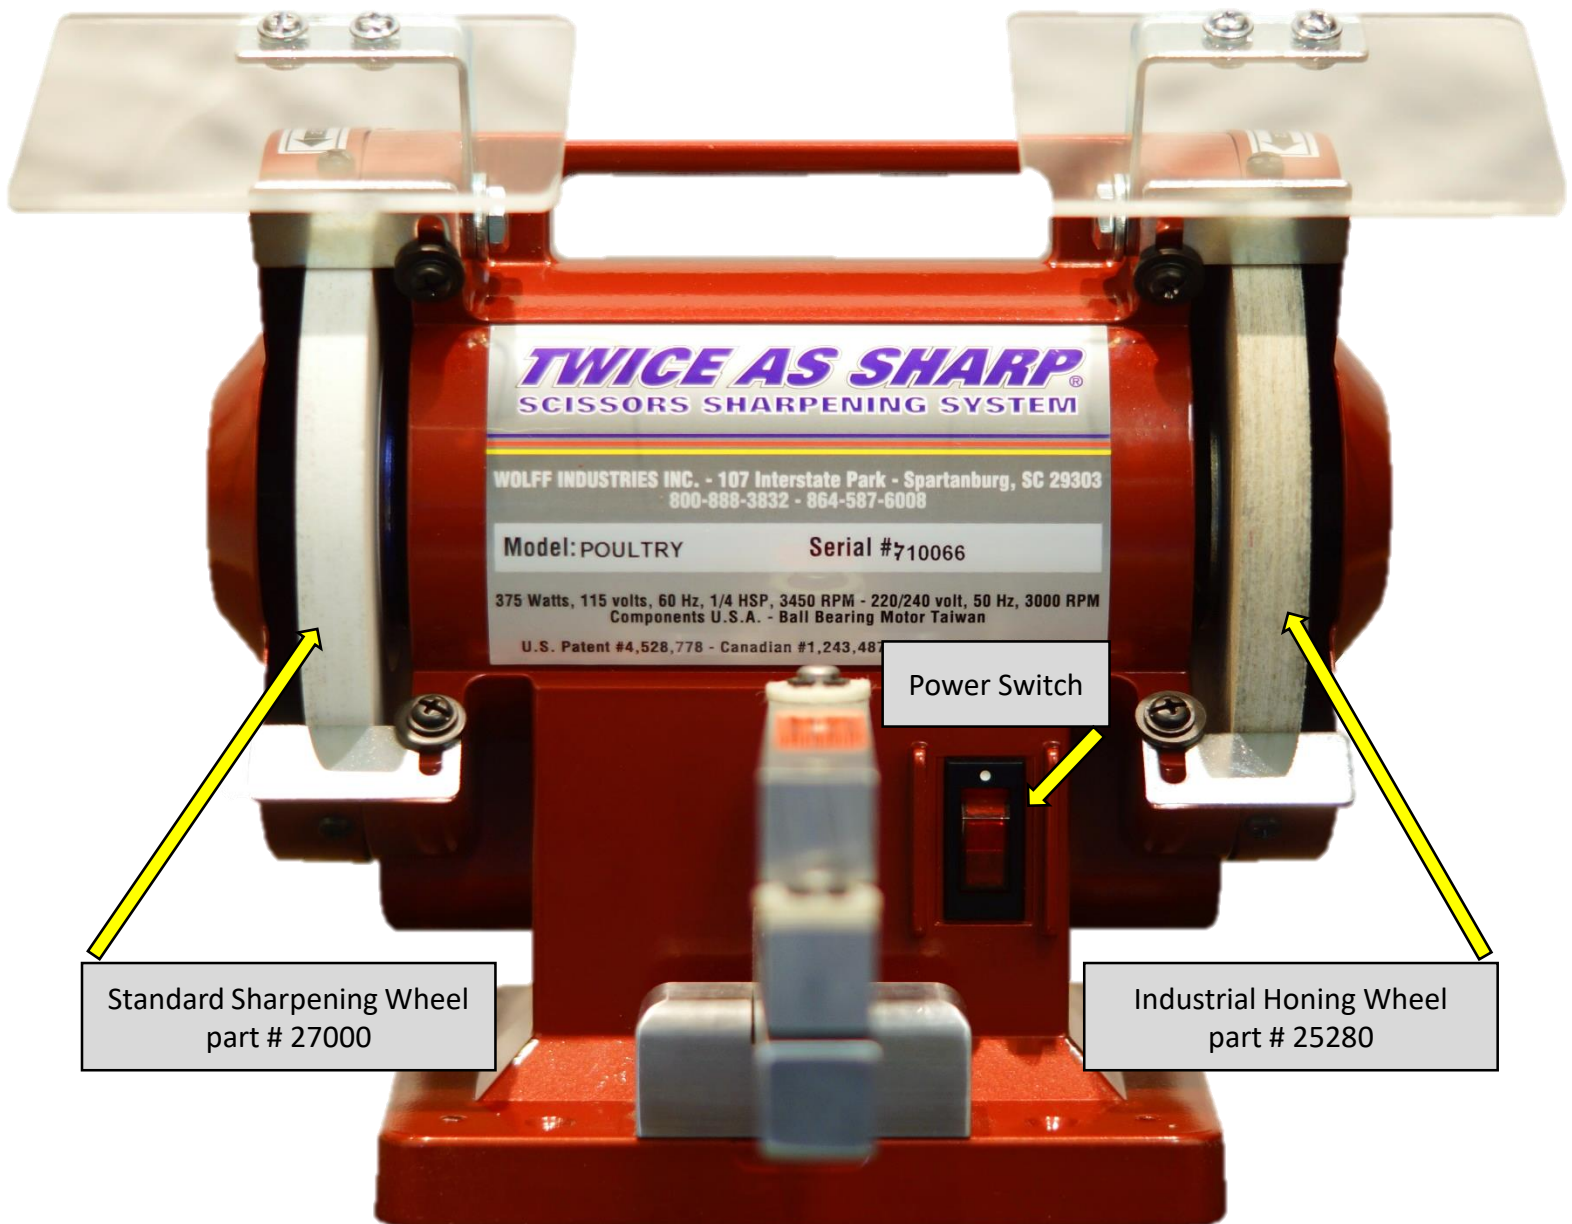

9. Clean the wheel wells
Periodically.

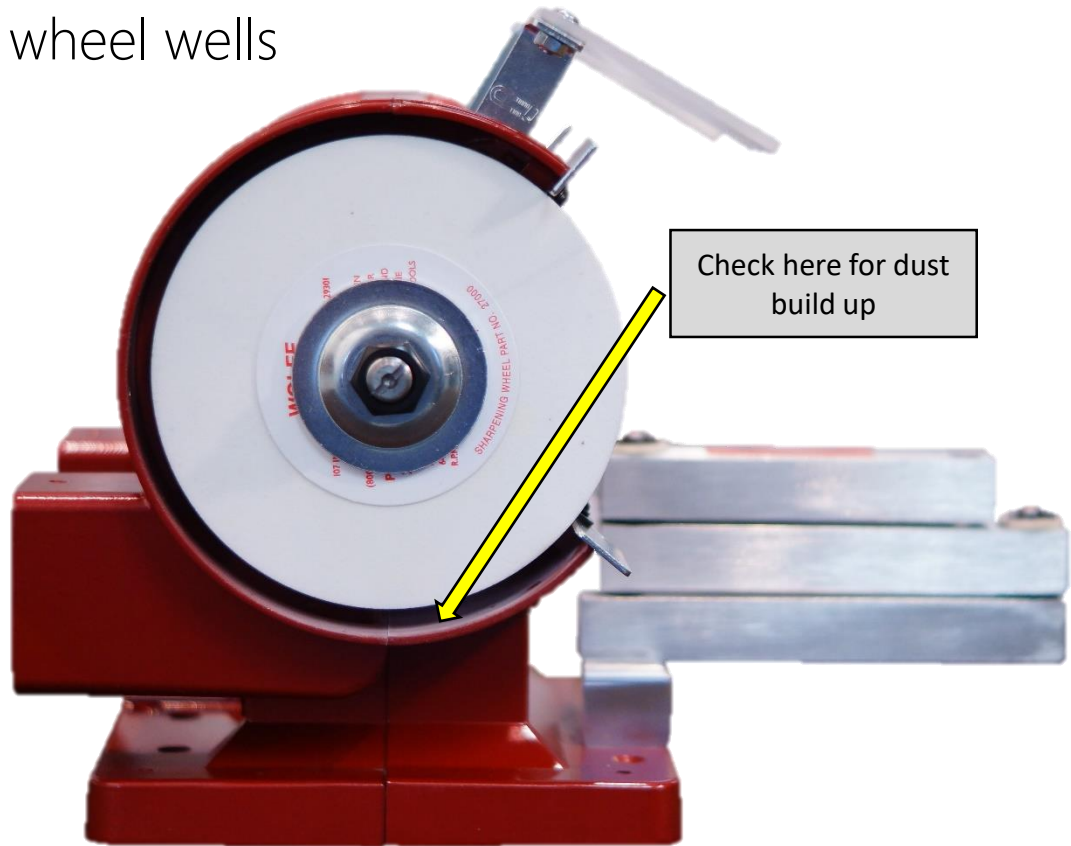

10. Adjust the finger guards.

