
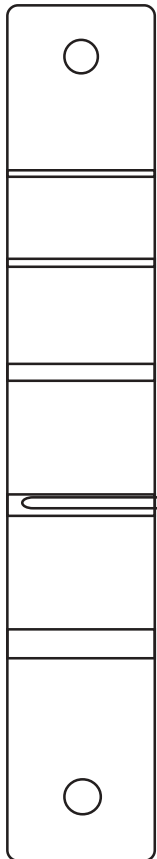


SET ADJUSTING TOOL

Instructions


Part # 23110

The Set Adjusting Tool will easily add or subtract set (curve) to the blades without damage to the finish or the cutting edge.

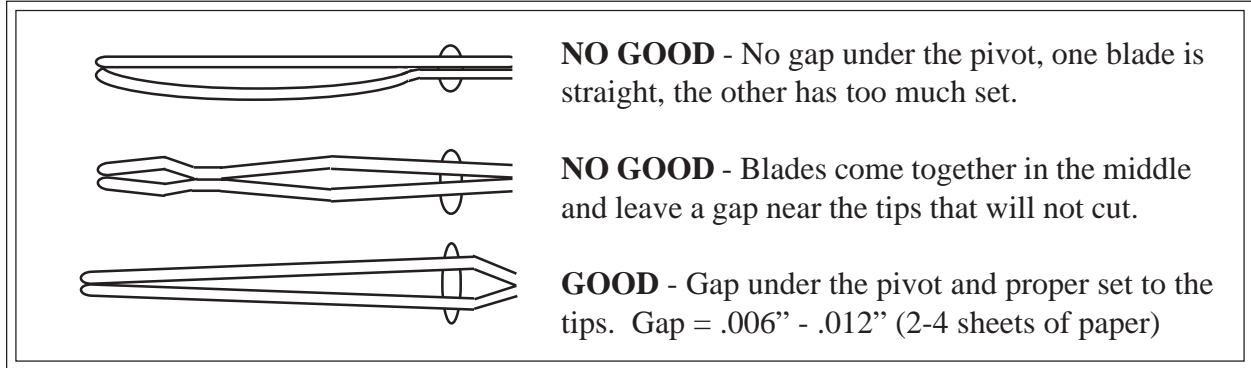

- 1 - Attach the Set Adjusting Tool to your workbench or carrying case. **DO NOT HOLD THE SET TOOL IN YOUR HAND.** A scissors blade breaking or slipping out of the tool will easily cut you.
- 2 - Inspect the scissors and decide where the set needs to be added or subtracted.
- 3 - Find the slot in the Set Adjustment Tool that fits the blade at the point where adjustment is needed.

Note: Always bend the blade just behind (towards the pivot) the area that needs adjustment.

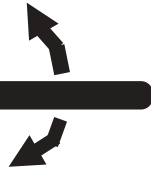

Bend the handle in the direction that set is needed.

- 4 - Hold the handle of the blade to be adjusted and bend lightly to add or subtract set.

WARNING: DO NOT OVER BEND.

Over bending can cause the blade to break. Bend only a little at a time.

For more information on using the Set Adjusting Tool, see the Twice as Sharp® or the OOKAMI GOLD® manuals.

WOLFF INDUSTRIES, Inc.

107 Interstate Park
Spartanburg, SC 29303

Fax
International

800-888-3832
864-587-0660
864-587-0013