
NOTICE BEFORE ASSEMBLY


Please choose the **CHAISE** will be on the **LEFT** or **RIGHT** hand side


ASSEMBLY INSTRUCTION FOR MODEL NO.: F7615, F7616, F7617, F7618, F7619, F7620


CHAISE ON THE LEFT

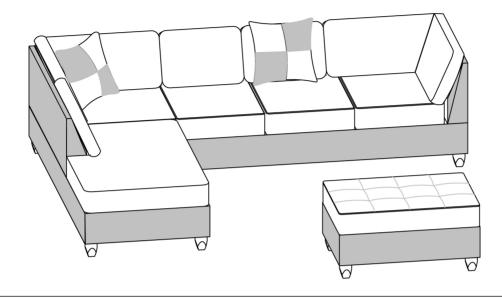



Control No.

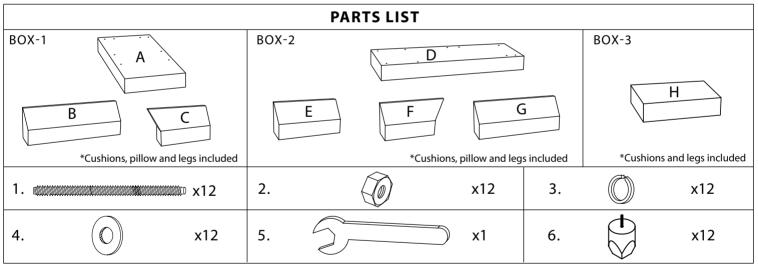

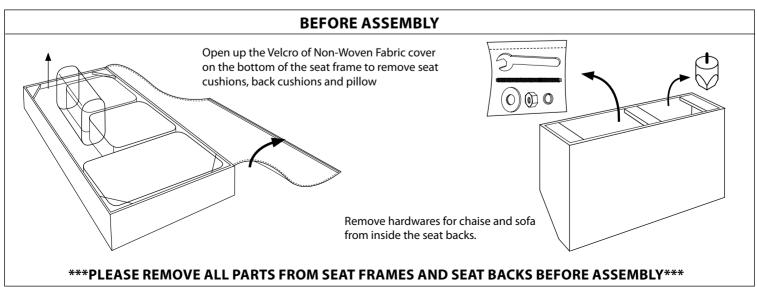

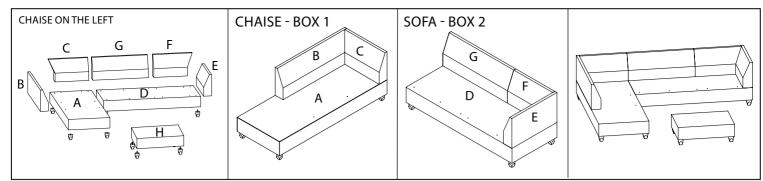

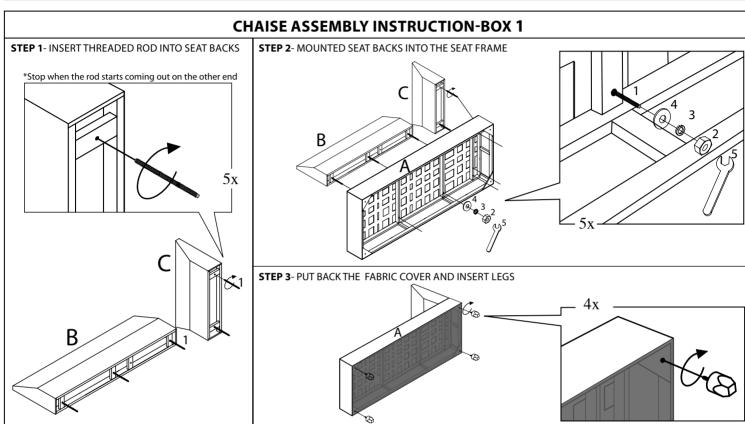

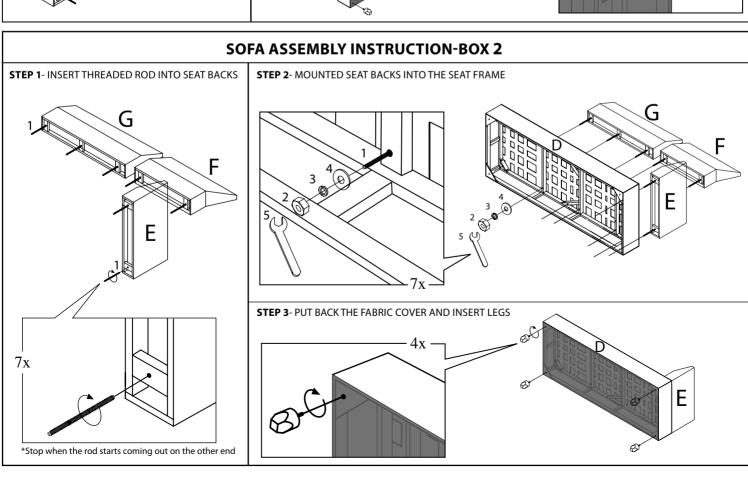


NOTICE BEFORE ASSEMBLY

Please choose the **CHAISE** will be on the **LEFT** or **RIGHT** hand side


ASSEMBLY INSTRUCTION FOR MODEL NO.: F7615, F7616, F7617, F7618, F7619, F7620


CHAISE ON THE RIGHT

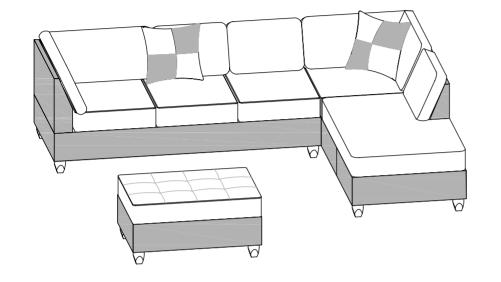



Before assembly, open both Box 1 and Box 2 to switch between Part C and Part F. And you will get the direction of right chaise.


Control No.

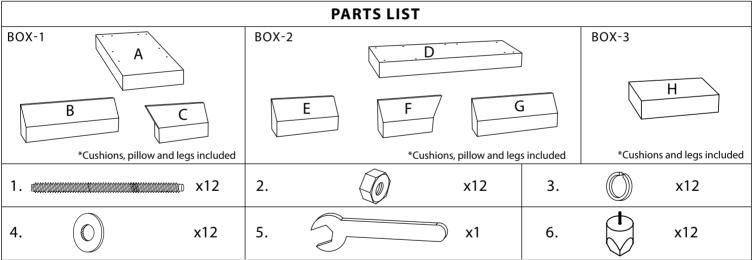

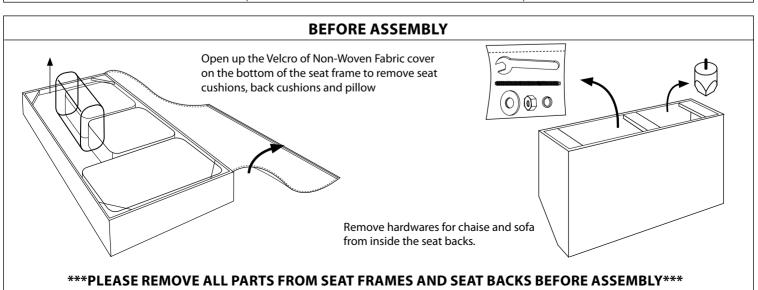

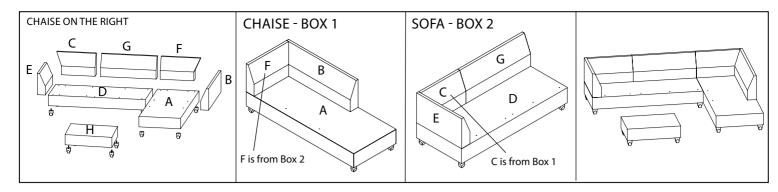


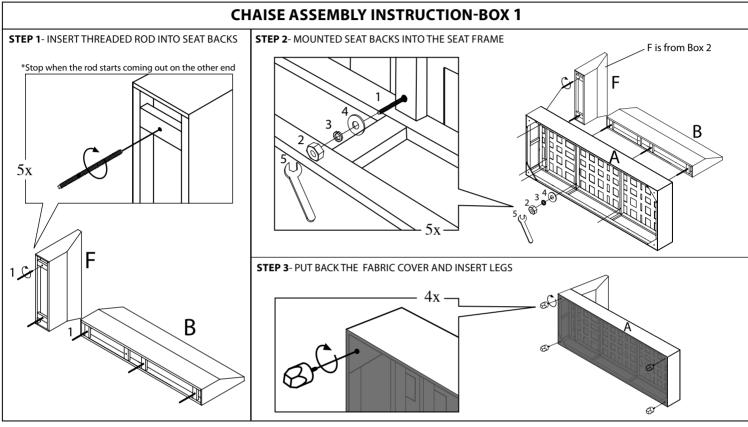

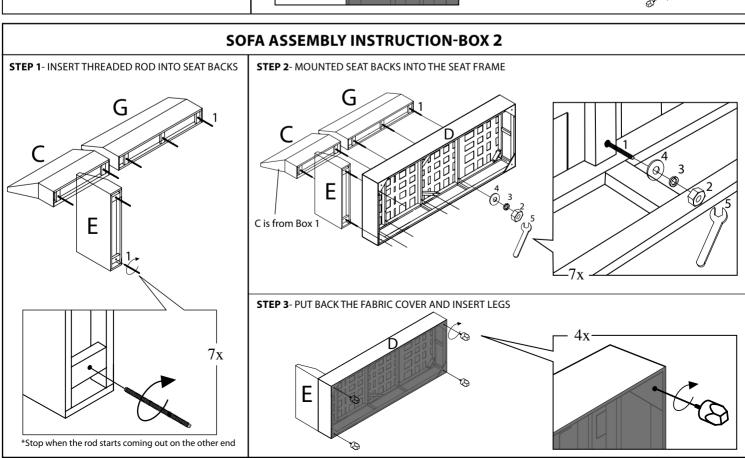

OPTIONAL: CHAISE + SOFA(SECTIONAL)

STEP1-INSERT THE "N" SHAPE HANGER INTO THE ONE-ARM CHASE FRAME AND ONE-ARM SOFA FRAME TO ATTACH TOG ETHER

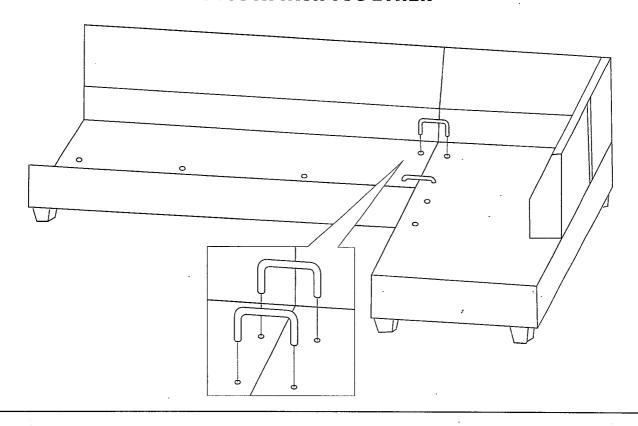

CHAISE + SOFA(SECTIONAL)

STEP1-INSERT THE "N" SHAPE HANGER INTO THE ONE-ARM CHASE FRAME AND ONE-ARM SOFA FRAME TO ATTACH TOG ETHER

