

- SOL0058 -

# SOLE

FITNESS



ROWER

## OWNER'S MANUAL

**PLEASE CAREFULLY READ THIS ENTIRE MANUAL BEFORE  
OPERATING YOUR NEW ROWER!**

# TABLE OF CONTENTS

<u>Important Safety Instructions</u>	<b>2</b>
<u>Important Electrical Information</u>	<b>3</b>
<u>Important Operation Instructions</u>	<b>3</b>
<u>Assembly instructions</u>	<b>6</b>
<u>Operation of Your New Rower</u>	<b>8</b>
<u>FOLDING/UNFOLDING PROCEDURES</u>	<b>18</b>
<u>Exploded View Diagram</u>	<b>23</b>
<u>Parts List</u>	<b>24</b>

SOL0058\_ver.A

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

**DANGER** – To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING**–To reduce the risk of burns, fire, electric shock, or injury to persons, install the rowing machine on a flat level surface with access to a DC 12V,1.6A.

- Do not operate Rower on deeply padded, plush or shag carpet. Damage to both carpet and Rower may result.
- Keep children away from the Rower. There are obvious pinch points and other caution areas that can cause harm.
- Keep hands away from all moving parts.
- Never operate the Rower if it has a damaged cord or plug. If the Rower is not working properly, call your dealer.
- Keep the cord away from heated surfaces.
- Do not operate where aerosol spray products are being used or where oxygen is being administered. Sparks from the motor may ignite a highly gaseous environment.
- Never drop or insert any object into any openings.
- Do not use outdoors.
- To disconnect, turn all controls to the off position, then remove the plug from the outlet.
- Do not attempt to use your Rower for any purpose other than for the purpose it is intended.
- Use of a chest strap transmitter (sold separately) is an accurate method of heart rate analysis. Various factors, including the user's movement, may affect the accuracy of heart rate readings.
- Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your Rower. Quality athletic shoes are recommended to avoid leg fatigue.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep children under the age of 13 away from this machine.

## CAUTION:

To assure continued FCC compliance:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Keep children under the age of 13 away from this machine.

**SAVE THESE INSTRUCTIONS - THINK SAFETY!**

# IMPORTANT ELECTRICAL INSTRUCTIONS

## WARNING

**NEVER** remove any cover without first disconnecting AC power. If voltage varies by ten percent (10%) or more, the performance of your Rower may be affected. Such conditions are not covered under your warranty. If you suspect the voltage is low, contact your local power company or a licensed electrician for proper testing.

**NEVER** expose this Rower to rain or moisture. This product is NOT designed for use outdoors, near a pool or spa, or in any other high humidity environment. The operating temperature specification is 40 to 120 degrees Fahrenheit, and humidity is 95% non-condensing (no water drops forming on surfaces).


**Circuit Breakers:** Some circuit breakers used in homes are not rated for high inrush currents that can occur when a Rower is first turned on or even during use. If your Rower is tripping the house circuit breaker (even though it is the proper current rating) but the circuit breaker on the Rower itself does not trip, you will need to replace the home breaker with a high inrush type. This is not a warranty defect. This is a condition we as a manufacture have no ability to control. This part is available through most electrical supply stores. Examples: Grainger part # 1D237, or available online at [www.squared.com](http://www.squared.com) part #QO120HM. The electrical outlet used should have a dedicated 15 amp circuit breaker.

# IMPORTANT OPERATION INSTRUCTIONS


- **NEVER** operate this Rower without reading and completely understanding the results of any operational change you request from the computer.
- Understand that changes in resistance do not occur immediately. Set your desired resistance level on the computer console and release the adjustment key. The computer will obey the command gradually.
- Use caution while participating in other activities while pedaling on your Rower; such as watching television, reading, etc. These distractions may cause you to lose balance which may result in serious injury.
- Do not use excessive pressure on console control keys. They are precision set to function properly with little finger pressure.

# SR500 ASSEMBLY PACK CHECKLIST


## 1 HARDWARE STEP 1

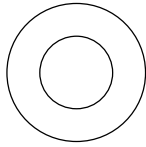

 **#109.**  $\text{Ø}3/8" \times \text{Ø}19 \times 1.5\text{T}$   
Flat Washer (4 pcs)




**#121.**  $\text{Ø}10 \times 2\text{T}$   
Spring Washer (4pcs)

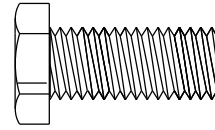


**#120.**  $3/8" \times 3/4"$   
Hex Head Bolt (4pcs)

## 2 HARDWARE STEP 2

 


**#129.**  $\text{M}6 \times \text{P}1.0 \times 10\text{L}$   
Button Head Socket Bolt (4 pcs)

## 3 HARDWARE STEP 3

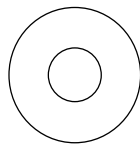 
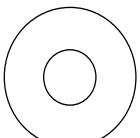

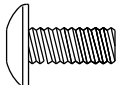



**#122.**  $\text{Ø}5/16" \times \text{Ø}18 \times 1.5\text{T}$   
Flat Washer (4 pcs)






**#123.**  $\text{M}8 \times \text{P}1.25 \times 12\text{L}$   
Button Head Socket Bolt (5 pcs)

# 4 HARDWARE STEP 4


 <b>#125.</b> Ø1/4" Spring Washer (4 pcs)	 <b>#122.</b> Ø5/16" × Ø18 × 1.5T Flat Washer (6 pcs)	
 <b>#124.</b> M6 × 15L_ Phillips Head Screw (4 pcs)	 <b>#123.</b> M8 × P1.25 × 12L Button Head Socket Bolt (6 pcs)	 <b>#85.</b> M5 × 10L Phillips Head Screw (3 pcs)

## ASSEMBLY TOOLS

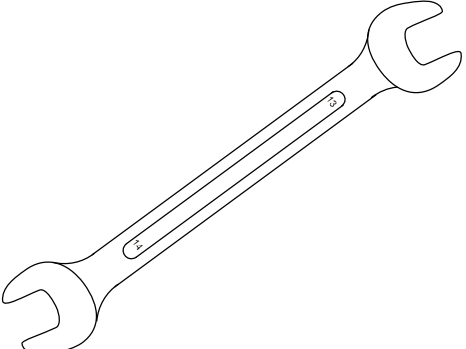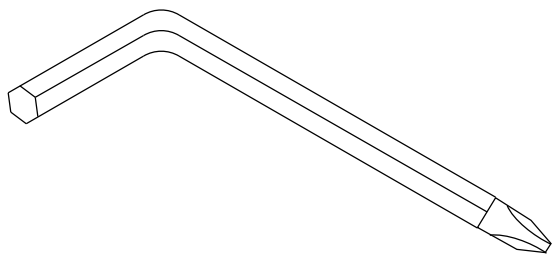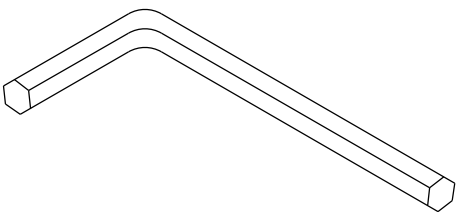 <b>#128.</b> 13/14m/m_Wrench	
 <b>#127.</b> Combination M5 Allen Wrench & Phillips Head Screw Driver	 <b>#126.</b> M4 Allen Wrench

# SR500 ASSEMBLY INSTRUCTIONS

## 1 ASSEMBLY STEP 1

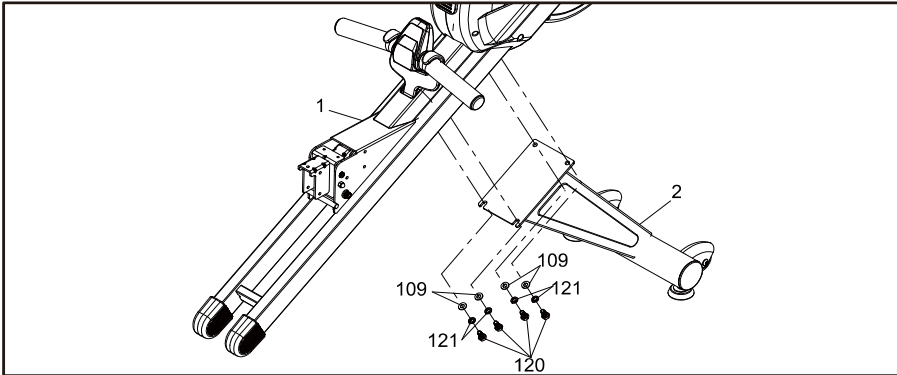


1. Gather HARDWARE FOR STEP 1.
2. Use the WRENCH (128) to tighten 4 HEX HEAD BOLTS (120) together with 4 SPRING WASHERS (121) and 4 FLAT WASHERS (109) to secure the MAIN FRAME (1) and FRONT STABILIZER (2) together.

### HARDWARE STEP 1

- #109.  $\text{Ø}3/8" \times \text{Ø}19 \times 1.5\text{T}$  Flat Washer (4 pcs)
- #121.  $\text{Ø}10 \times 2\text{T}$  Spring Washer (4pcs)
- #120.  $3/8" \times 3/4"$  Hex Head Bolt (4pcs)

## 2 ASSEMBLY STEP 2

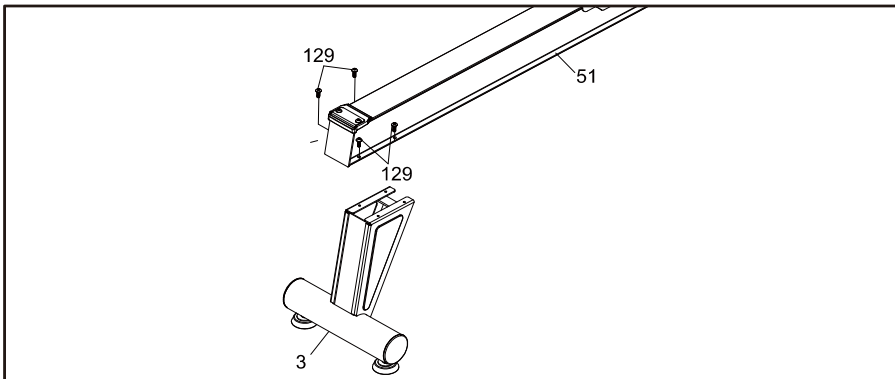


1. Gather HARDWARE FOR STEP 2.
2. Use ALLEN WRENCH (126) to tighten 4 BUTTON HEAD SOCKET BOLTS (129) onto the ALUMINUM TRACK (51) and the Rear Stabilizer (3).

### HARDWARE STEP 2

- #129.  $\text{M6} \times \text{P1.0} \times 10\text{L}$  Button Head Socket Bolt (4 pcs)

# 3 ASSEMBLY STEP 3

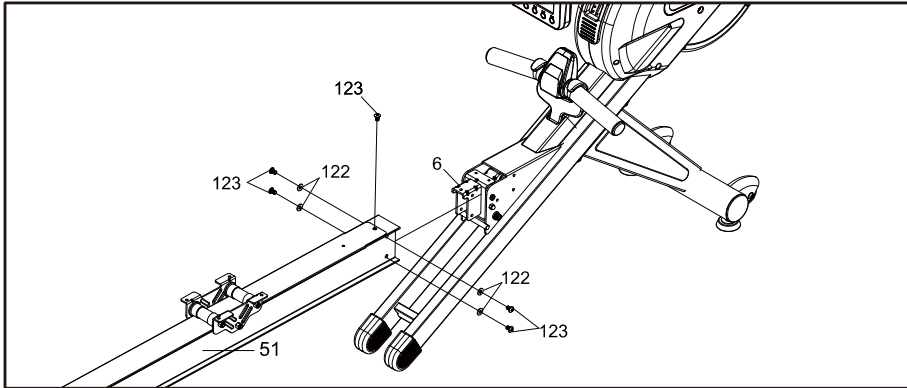


## HARDWARE STEP 3

- #122. Ø5/16" × Ø18 × 1.5T Flat Washer (4 pcs)
- #123. M8 × P1.25 × 12L Button Head Socket Bolt (5 pcs)

1. Gather HARDWARE FOR STEP 3.
2. Attach the other end of the ALUMINUM TRACK (51) to FOLDING END ASSEMBLY (6) and use COMBINATION WRENCH (127) to tighten the 5 BUTTON HEAD SOCKET BOLTS (123) together with 4 FLAT WASHERS (122).

# 4 ASSEMBLY STEP 4

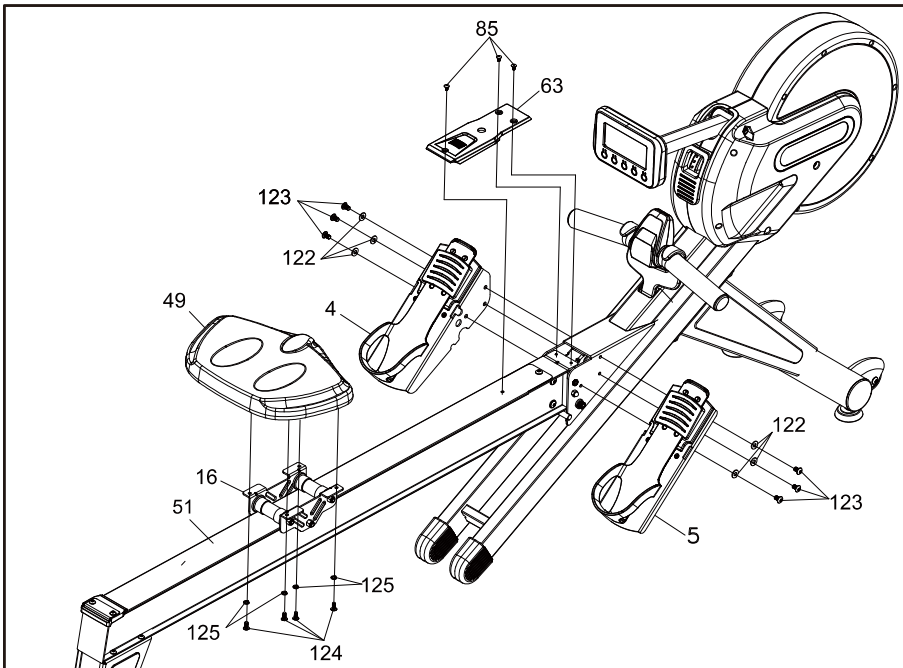

## HARDWARE STEP 4


- #125. Ø1/4" Spring Washer (4 pcs)
- #122. Ø5/16" × Ø18 × 1.5T Flat Washer (6 pcs)
- #124. M6 × 15L Phillips Head Screw (4 pcs)
- #123. M8 × P1.25 × 12L Button Head Socket Bolt (6 pcs)
- #85. M5 × 10L Phillips Head Screw (3 pcs)

1. Gather HARDWARE FOR STEP 4.
2. Install left and right PEDALS (4,5) on the MAIN FRAME (1) with 6 BUTTON HEAD SOCKET BOLTS (123) and 6 FLAT WASHERS (122) by using COMBINATION WRENCH (127) to tighten. Use again COMBINATION WRENCH (127) to install CONNECTING COVER (63) on ALUMINUM TRACK (51) with 3 PHILLIPS HEAD SCREWS (85). Install SEAT (49) and SEAT ATTACHING BOARD (16) with 4 PHILLIPS HEAD SCREWS (124) together with 4 SPRING WASHERS (125) by using COMBINATION WRENCH (127).



# OPERATION OF YOUR ELLIPTICAL

## GETTING FAMILIAR WITH THE CONTROL PANEL CONSOLE

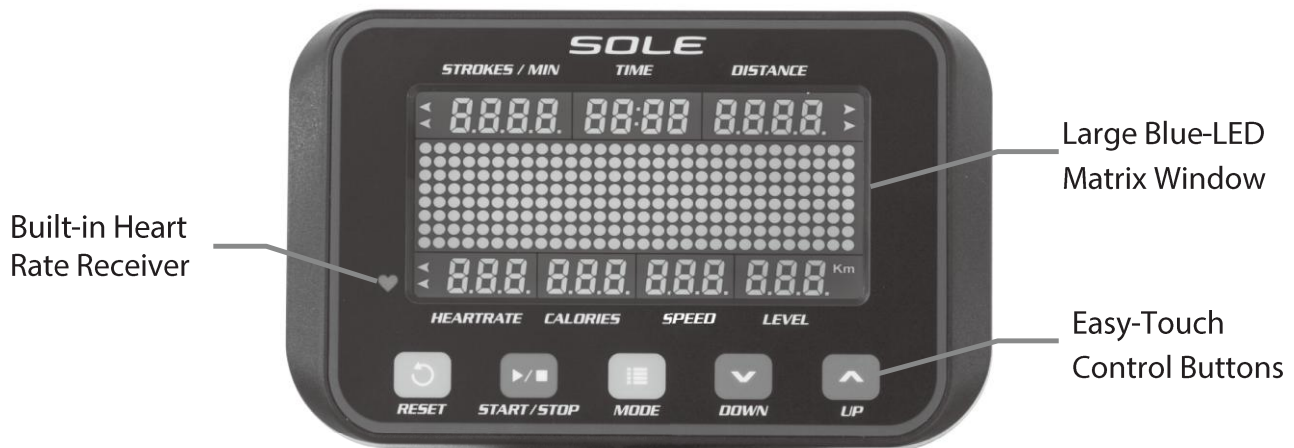

### POWER

When Pressing any key button wakes up the console which has been turned off, the console LCD will turn on with full display and beeps for 2 seconds then enters idle mode. When there is speed signal input with the speed sensor detected, it directly enters Manual workout mode.

### POWER OFF

In any mode during turning on, if there is not any button activated or no rowing activity lasts for 1 minute, it turns off automatically.

### WINDOW FUNCTIONS

#### STROKE/MIN

S/m value shows the equivalent strokes per minute.

#### TIME

- Shows the Time.
- Range of time: 00:00~99:59(minute: second)
- The time is accumulated for each workout mode.
- When time is set to count down, it shows the time remaining.

## **DISTANCE**

- The distance range is 0~9999 and switches to the format of 1X.XX when the value is over 9999.
- The distance will be accumulated for each workout mode.
- When the distance is set to count down, it shows the remaining distance.

## **HEART RATE**

- The heart rate range is 40~220 bpm
- When the heart rate signal is detected, the small dot at lower right corner of the heart rate window will be blinking together with heart rate value showing.
- When there is no heart rate signal detected, the heart rate window shows nothing.

## **CALORIES**

- The Calorie window shows the value of calorie dissipated.
- The calorie range is 0~999.

## **SPEED:** Average speed per hour

- Average speed range 0.0 ~ 99.9
- Display in km/hr

## **LEVEL**

- The Level window shows the current resistance level.
- The level range is 1~16
- Level 1 and 2 would light the first dot, level 3 and 4 would light the second dot, etc.

## **500M/TIME**

- Only workout modes of Manual, Distance, Time and Calorie are with this display function.
- For Manual workout mode as an example: When the console starts, Matrix in the middle of LCD will show the wave pattern then switch to 500M/TIME 00:00 across center display after 5 seconds then switch again back to the wave pattern after another 5 seconds and continue to repeat the cycle. This is the function of Scan.
- The console goes directly into Scan mode after start. If Mode button is pressed, it shows the wave pattern. Pressing the Mode button again, it displays 500M/TIME and repeat again by pressing Mode button it goes back with Scan function (recyclable).

## **KEY BUTTON FUNCTION**

- Any valid key button pressed will generate a beep sound.
- When in power off mode, pressing any key button turns on the console.

## **MODE KEY**

- Under idle mode, pressing MODE key each time switches the workout mode with the following sequence:
- MANUAL » DISTANCE » TIME » CALORIES » 20/10 INTERVAL » 10/20 INTERVAL » CUSTOM INTERVAL » Fat Burn » Cardio » Strength » Game

- The default workout mode after turning on the unit is Manual mode.
- To choose the target workout mode, when the matrix window shows the desired workout pattern and parameter window value to be set will be blinking each second.

#### **UP KEY**

- Under the setting mode of the target workout, the parameter is will be counted up.
- The value increases one increment when "UP" key is pressed once.

#### **DOWN KEY**

- Under the setting mode of the target workout, the parameter is will be counted down.
- The value decreases one increment when DOWN key is pressed once.

#### **START/STOP KEY**

- Under idle mode, pressing Start/Stop key button enters Manual workout mode.
- To confirm the value the window is showing when setting the parameter under each target workout mode and to start the workout mode.
- Press to end the current workout mode and all message windows stop counting.

#### **RESET KEY**


- Pressing this key button under stopping mode, the image switches to the idle mode.
- The reset key button is valid only in stopping mode.
- Under any mode, pressing this key button for 3 seconds turns on the console again.

# Operating Instruction

The screen is with full display and the buzzer beeps for two seconds after turning on. Pressing **Start** button goes directly to **Manual** workout mode or pressing **MODE** button to switch and select a workout mode with the workout sequence shown as below:

**MANUAL » DISTANCE » TIME » CALORIES » 20/10 INTERVAL » 10/20 INTERVAL » CUSTOM INTERVAL » Fat Burn » Cardio » Strength » Game**

The program name will scroll from left to right to tell the user what it is.

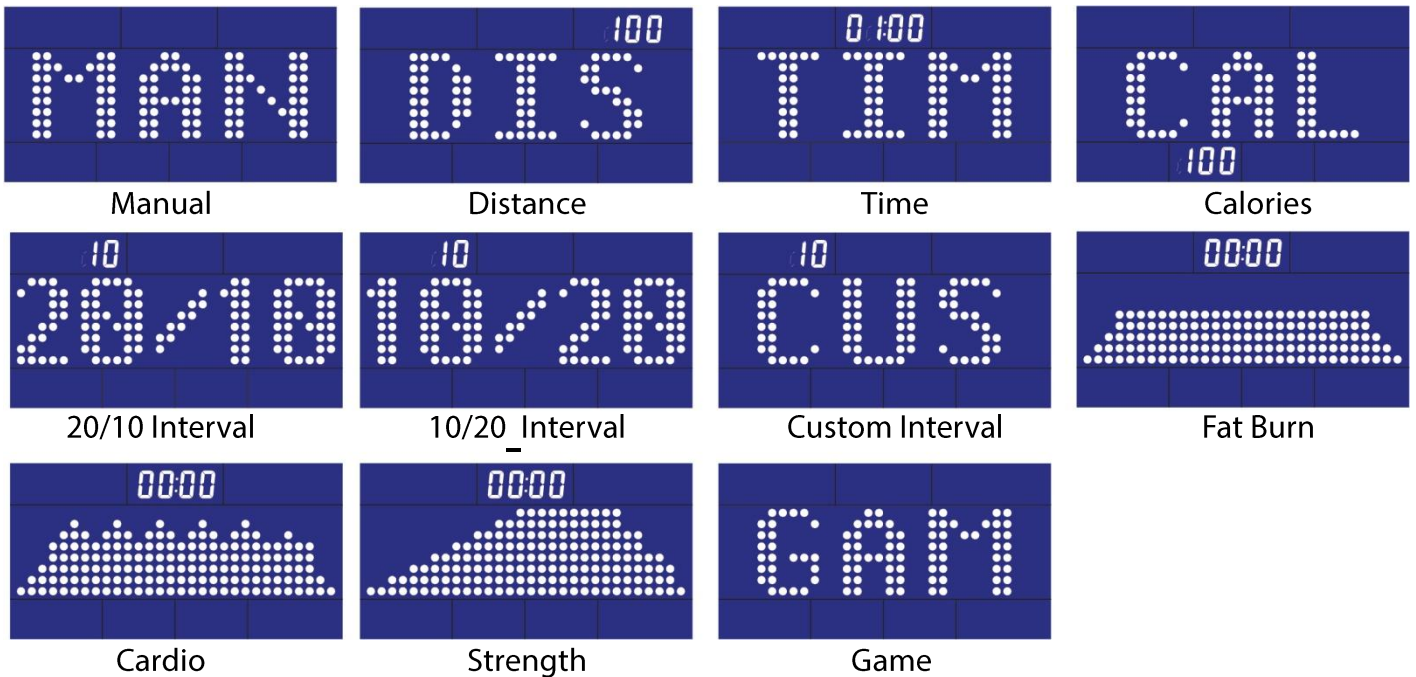

## MANUAL MODE

To choose MANUAL mode (Fig. 1-1)

Pressing **Start/Stop** button begins the workout mode or pulling the paddle under the idle mode enters directly into Manual workout mode.

The image at the center of LCD will scan every 5 seconds to show the stroke speed with wave pattern (**Fig. 1-2**) and 500M/TIME (**Fig. 1-3**) or pressing **MODE** button to cancel scanning with wave pattern only. Pressing **MODE** again switches the image to show 500M/TIME.

Pressing **UP** or **DOWN** button and adjusts the resistance level which is shown at bottom right corner of **LEVEL** window.



Fig 1-1



Fig 1-2



Fig 1-3

## TARGET DISTANCE

To choose target distance count-down Distance workout mode (Fig. 2-1)

Use **UP/DOWN** buttons to adjust and set the workout distance. The default distance is 100M with increment of 50M up or down. Press **Start/Stop** button to confirm the setting and start the workout 20 mode.

The image at the center of LCD will scan every 5 seconds to show the stroke speed with wave pattern (**Fig. 2-2**) and 500M/TIME (**Fig. 2-3**) or pressing **MODE** button to cancel scanning with wave pattern only. Pressing **MODE** again switches the image to show **500M/TIME**.

**Distance** window counts down from target distance setting value and shows the remaining distance of the workout.

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level.

When the distance is counted down to 0, the workout completes and the buzzer sounds with a long beep. If paddling continues, the distance count-down repeats.

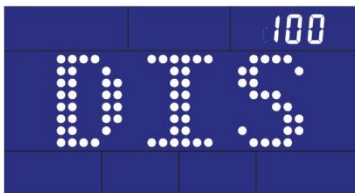


Fig 2-1



Fig 2-2

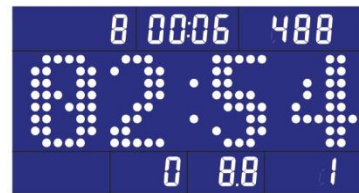


Fig 2-3

## TARGET TIME

To choose target time count-down Time workout mode (Fig. 3-1)

Use **UP/DOWN** buttons to adjust and set the workout time. The default distance is 1:00 with 1-minute increment of up or down (99:00 maximum). Press **Start/Stop** button to confirm the setting and start the workout mode.

The image at the center of LCD will scan every 5 seconds to show the stroke speed with wave pattern (**Fig. 3-2**) and 500M/TIME (**Fig. 3-3**) or pressing **MODE** button to cancel scanning with wave pattern only. Pressing **MODE** again switches the image to show 500M/TIME.

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level.

Time window counts down from the setting time value and shows the remaining time of the workout. When time is counted down to 0:00, the workout completes and the buzzer sounds with a long beep.

If paddling continues, the time count-down repeats.



Fig 3-1



Fig 3-2

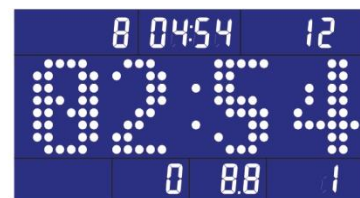


Fig 3-3

## TARGET CALORIE

To choose target calorie count-down Calories workout mode (Fig. 4-1)

Use **UP/DOWN** buttons to adjust and set the target calorie. The default value is 100 with increment of 10 up or down. Press **Start/Stop** button to confirm the setting and start the workout mode.

The image at the center of LCD will scan every 5 seconds to show the stroke speed with wave pattern (**Fig. 4-2**) and 500M/TIME (**Fig. 4-3**) or pressing **MODE** button to cancel scanning with wave pattern only. Pressing **MODE** again switches the image to show **500M/TIME**.

Calorie window counts down from the setting target calorie value and shows the remaining calorie of the workout.

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level.

When calorie is counted down to 0, the workout completes and the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.



Fig 4-1



Fig 4-2

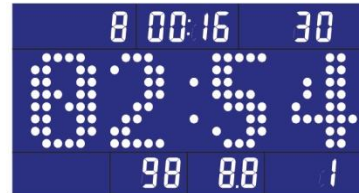


Fig 4-3

## 20/10 INTERVAL

To choose 20/10 INTERVAL workout mode (Fig. 5-1)

The image at the center of LCD: 20 seconds (Exercise)/10 seconds (Rest)

Pressing **Start/Stop** button starts the workout mode.

The image at the center of LCD shows time count-down of current workout and wave (**Fig. 5-2**) or rest time count-down and mark (**Fig. 5-3**).

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level. There are 10 Exercise/Rest cycles for each workout time.

When workout completes, the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.



Fig 5-1



Fig 5-2



Fig 5-3

## 10/20 INTERVAL

To choose 10/20 INTERVAL workout mode (Fig. 6-1)

The image at the center of LCD: 10 seconds (Exercise)/20 seconds (Rest)

Pressing Start/Stop button starts the workout mode.

The image at the center of LCD shows time count-down of current workout and wave (Fig. 6-2) or rest time count-down and mark (Fig. 6-3).

Under the workout mode, pressing UP or DOWN key button adjusts the resistance level. There are 10 Exercise/Rest cycles for each workout time.

When workout completes, the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.

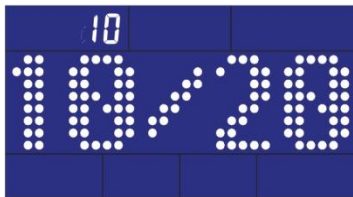


FIG 6-1

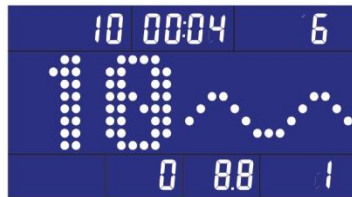


Fig 6-2



Fig 6-3

## CUSTOM INTERVAL

To choose CUSTOM INTERVAL workout mode (Fig. 7-1)

User-define time (Exercise)/time (Rest): the default is 10 seconds (Exercise)/10 seconds (Rest)

The value at left side of the matrix window flashes for setting the exercise time. Use **UP/DOWN** buttons to adjust and set the workout time. The default time is 10 seconds with 1-second increment of up or down. Press **Start/Stop** button to confirm the setting and start the workout mode.

The value at right side of the matrix window flashes for setting the rest time. Use **UP/DOWN** buttons to adjust and set the workout time. The default time is 10 seconds with 1-second increment of up or down. Press **Start/Stop** button to confirm the setting and start the workout mode.

The image at the center of LCD: 10 seconds (Exercise)/10 seconds (Rest) Pressing **Start/Stop** button starts the workout mode.

The image at the center of LCD shows time count-down of current workout and wave (**Fig. 7-2**) or rest time count-down and mark (**Fig. 7-3**).

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level. There are 10 Exercise/Rest cycles for each workout time.

When workout completes, the buzzer sounds with a long beep. If paddling continues, the time countdown repeats.



Fig 7-1



Fig 7-2



Fig 7-3

## FAT BURN

To choose Fat Burn workout mode (Fig. 8-1)

Pressing **Start/Stop** button and begins the workout mode or setting the workout time. Use **UP/DOWN** buttons to adjust the time. The increment of adjustment is 5-minute (99:00 maximum). Press **Start/Stop** button to start the workout mode.

The image at the center of LCD shows the fat burn profile (Fig. 8-2)

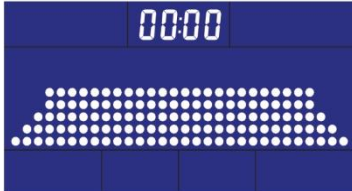


Fig 8-1

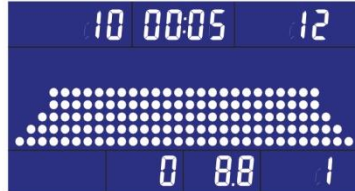


Fig 8-2

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level. Time window starts count-down from the setting time and shows the remaining workout time. When time is counted down to 0:00, the workout completes and the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.

## CARDIO WORKOUT

To choose cardio workout mode (Fig. 9-1)

Pressing **Start/Stop** button and begins the workout mode or setting the workout time. Use **UP/DOWN** buttons to adjust the time. The increment of adjustment is 5-minute (99:00 maximum). Press **Start/Stop** button to start the workout mode.

The image at the center of LCD shows the cardio profile (Fig. 9-2)

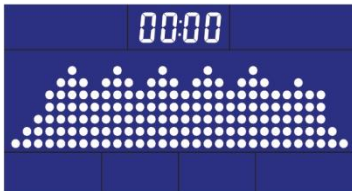


Fig 9-1

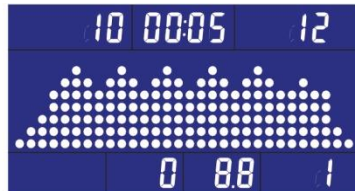


Fig 9-2

Under the workout mode, pressing **UP** or **DOWN** key button adjusts the resistance level. Time window starts count-down from the setting time and shows the remaining workout time. When time is counted down to 0:00, the workout completes and the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.



## STRENGTH WORKOUT

To choose Strength workout mode (Fig. 10-1)

Pressing Start/Stop button and begins the workout mode or setting the workout time. Use UP/DOWN buttons to adjust the time. The increment of adjustment is 5-minute (99:00 maximum). Press Start/Stop button to start the workout mode.

The image at the center of LCD shows the strength profile (Fig. 10-2)

Time window starts count-down from the setting time and shows the remaining workout time.

When time is counted down to 0:00, the workout completes and the buzzer sounds with a long beep. If paddling continues, the time count-down repeats.

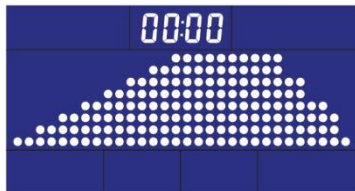


Fig 10-1

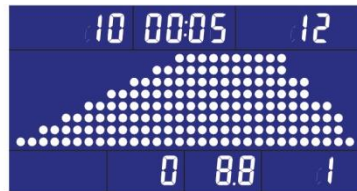


Fig 10-2

## GAME WORKOUT

To choose GAME workout mode (Fig. 11-1)

Pressing Start/Stop button and begins the GAME workout mode (11-2).

Three dots at left side represents the user position and the image shift one profile left per second and continue to scroll.

The position of the user will not shift. However, the faster the user stroke, the higher the user's position. When there is no stroke, the position of the user goes down to the lowest. The height of the user's position is equivalent to the speed the user strokes.

The time for the game workout starts counting down from 5 minutes and ends when time is up.

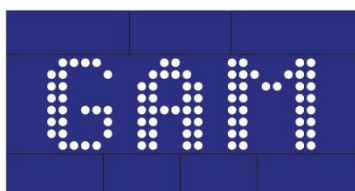
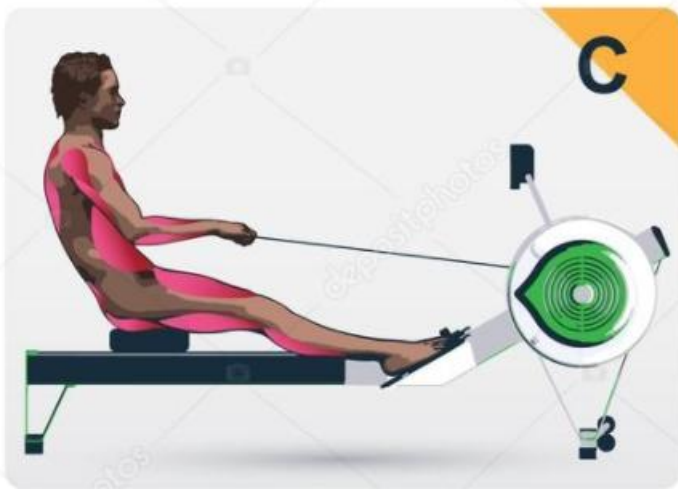


Fig 11-1

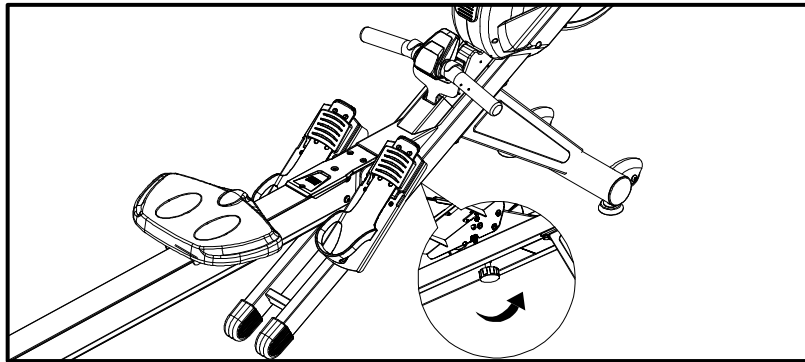


Fig 11-2


User faces Rower, raises right foot to cross the seat and sits on Rower. At the moment, user is facing console faceplate, and step on the Pedal (now user's knees are bent). After adjusting position of Pedal Plate to match user's feet, tighten strap on the side of Pedal and make sure it's tight on strap and user's feet. When leaving Rower, reverse the steps.




# FOLDING/UNFOLDING PROCEDURES




1. Turn the knob counterclockwise to release.

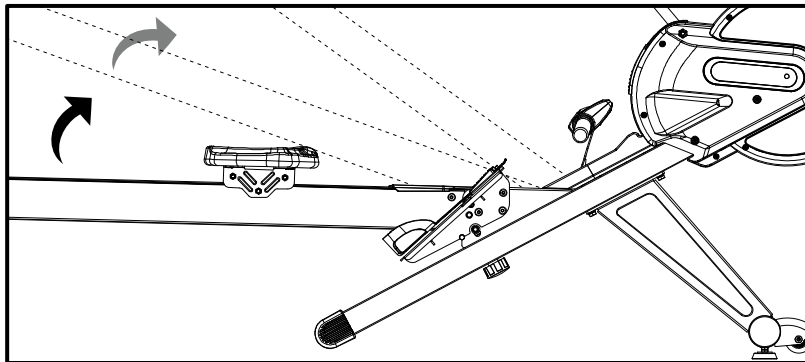

2. Fold up the aluminum rail assembly.

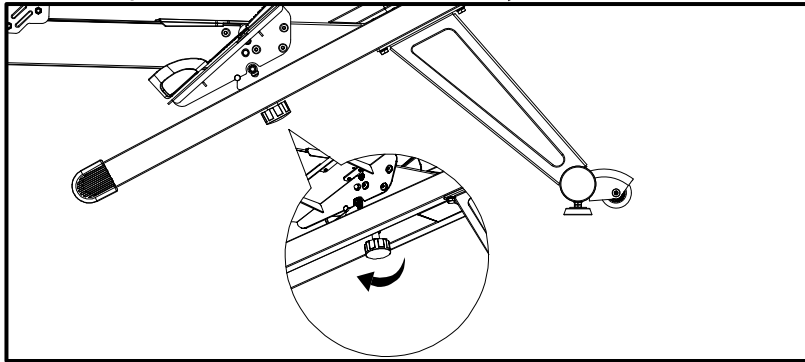

3. Turn the knob clockwise to tighten.

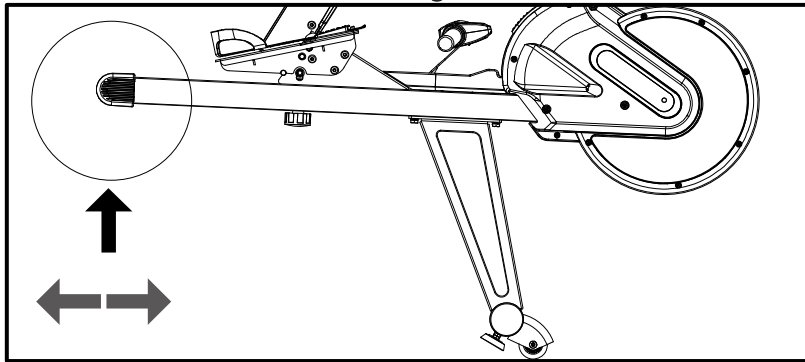

4. Fold the aluminum rail assembly up. Lift the rear and roll away.

# HEART RATE PROGRAMS

## Before we get started, a word about Heart Rate:


The old motto, "no pain, no gain," is a myth that has been overpowered by the benefits of exercising comfortably. A great deal of this success has been promoted by the use of heart rate monitors. With the proper use of a heart rate monitor, many people find that their usual choice of exercise intensity was either too high or too low and exercise is much more enjoyable by maintaining their heart rate in the desired benefit range.

To determine the benefit range in which you wish to train, you must first determine your Maximum Heart Rate. This can be accomplished by using the following formula: 220 minus your age. This will give you the Maximum Heart Rate (MHR) for someone of your age. To determine the effective heart rate range for specific goals you simply calculate a percentage your MHR. Your Heart rate training zone is 50% to 90% of your maximum heart rate. 60% of your MHR is the zone that burns fat while 80% is for strengthening the cardio vascular system. This 60% to 80% is the zone to stay in for maximum benefit.

For someone who is 40 years old their target heart rate zone is calculated:

$220 - 40 = 180$  (maximum heart rate)  
 $180 \times .6 = 108$  beats per minute  
(60% of maximum)  
 $180 \times .8 = 144$  beats per minute  
(80% of maximum)

So for a 40 year old the training zone would be 108 to 144 beats per minute.

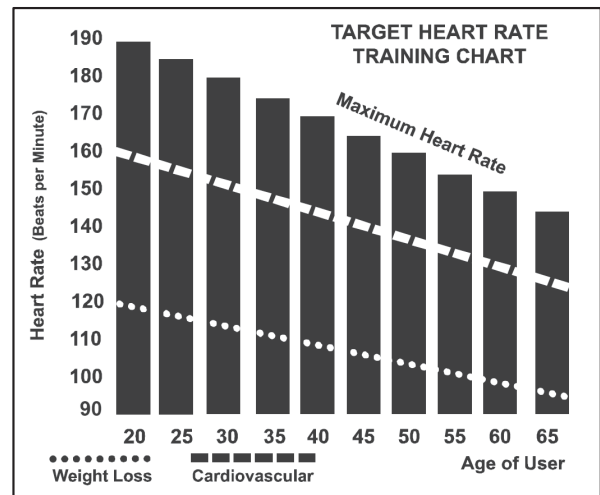

If you enter your age during programming the console will perform this calculation automatically. Entering your age is used for the Heart Rate programs. After calculating your MHR you can decide upon which goal you would like to pursue.

The two most popular reasons for, or goals, of exercise are cardiovascular fitness (training for the heart and lungs) and weight control. The black columns on the chart above represent the MHR for a person whose age is listed at the bottom of each column. The training heart rate, for either cardiovascular fitness or weight loss, is represented by two different lines that cut diagonally through the chart. A definition of the lines' goal is in the bottom left-hand corner of the chart. If your goal is cardiovascular fitness or if it is weight loss, it can be achieved by training at 80% or 60%, respectively, of your MHR on a schedule approved by your physician. Consult your physician before participating in any exercise program.

With all SOLE Heart Rate ROWER machines you may use the heart rate monitor feature without using the Heart Rate program. This function can be used during manual mode or during any of the nine different programs. The Heart Rate program automatically controls resistance at the pedals.

## **RATE OF PERCEIVED EXERTION**

Heart rate is important but listening to your body also has a lot of advantages. There are more variables involved in how hard you should workout than just heart rate. Your stress level, physical health, emotional health, temperature, humidity, the time of day, the last time you ate and what you ate, all contribute to the intensity at which you should workout. If you listen to your body, it will tell you all of these things.

The rate of perceived exertion (RPE), also known as the Borg scale, was developed by Swedish physiologist G.A.V. Borg. This scale rates exercise intensity from 6 to 20 depending upon how you feel or the perception of your effort.

The scale is as follows: Rating

### Perception of Effort

- 6 Minimal
- 7 Very, very light
- 8 Very, very light +
- 9 Very light
- 10 Very light +
- 11 Fairly light
- 12 Comfortable
- 13 Somewhat hard
- 14 Somewhat hard +
- 15 Hard
- 16 Hard +
- 17 Very hard
- 18 Very hard +
- 19 Very, very hard
- 20 Maximal

You can get an approximate heart rate level for each rating by simply adding a zero to each rating. For example a rating of 12 will result in an approximate heart rate of 120 beats per minute. Your RPE will vary depending upon the factors discussed earlier. That is the major benefit of this type of training. If your body is strong and rested, you will feel strong and your pace will feel easier. When your body is in this condition, you are able to train harder and the RPE will support this. If you are feeling tired and sluggish, it is because your body needs a break. In this condition, your pace will feel harder. Again, this will show up in your RPE and you will train at the proper level for that day.

# Using A Heart Rate Transmitter (OPTIONAL)

How to wear your wireless chest strap transmitter:

1. Attach the transmitter to the elastic strap using the locking parts.
2. Adjust the strap as tightly as possible as long as the strap is not too tight to remain comfortable.
3. Position the transmitter with the logo centered in the middle of your body facing away from your chest (some people must position the transmitter slightly left of center). Attach the final end of the elastic strap by inserting the round end and, using the locking parts, secure the transmitter and strap around your chest.
4. Position the transmitter immediately below the pectoral muscles.
5. Sweat is the best conductor to measure very minute heart beat electrical signals. However, plain water can also be used to pre-wet the electrodes (2 ribbed oval areas on the reverse side of the belt and both sides of the transmitter). It's also recommended that you wear the transmitter strap a few minutes before your work out. Some users, because of body chemistry, have a more difficult time in achieving a strong, steady signal at the beginning. After "warming up", this problem lessens. As noted, wearing clothing over the transmitter/strap doesn't affect performance.
6. Your workout must be within range - distance between transmitter/receiver - to achieve a strong steady signal. The length of range may vary somewhat but generally stay close enough to the console to maintain good, strong, reliable readings. Wearing the transmitter immediately against bare skin assures you of proper operation. If you wish, you may wear the transmitter over a shirt. To do so, moisten the areas of the shirt that the electrodes will rest upon.



*Note: The transmitter is automatically activated when it detects activity from the user's heart. Additionally, it automatically deactivates when it does not receive any activity. Although the transmitter is water resistant, moisture can have the effect of creating false signals, so you should take precautions to completely dry the transmitter after use to prolong battery life (estimated transmitter battery life is 2500 hours). The replacement battery is Panasonic CR2032.*

## ERRATIC OPERATION

Caution! Do not use this exercise equipment for Heart Rate Control unless a steady, solid Actual Heart Rate value is being displayed. High, wild, random numbers being displayed indicate a problem.

Areas to look for interference which may cause erratic heart rate:


1. Microwave ovens, TV's, small exercise equipments, etc.
2. Fluorescent lights.
3. Some household security systems.
4. Perimeter fence for a pet.
5. Some people have problems with the transmitter picking up a signal from their skin. If you have problems try wearing the transmitter upside down. Normally the transmitter will be oriented so the logo is right side up.
6. The antenna that picks up your hearts rate is very sensitive. If there is an outside noise source, turning the whole machine 90 degrees may de-tune the interference.
7. Another Individual wearing a transmitter within 3' of your machine's console.

If you continue to experience problems contact your dealer.

## Wireless handle coding steps (OPTIONAL)


1. Unplug the rower and change battery (CR2032) if needed. Plug in the rower and restart the power.
2. When the console is turned on again, press and hold the UP or DOWN handle button for 3 seconds to complete the coding between console and handlebar.
3. Check if coding between console and handlebar is successful: Press START button on the console and then press UP or DOWN button on the handle to see if LEVEL on LCD changes. If yes, it is successful otherwise go back to step 1 to repeat Coding between Console and Handlebar.

### Handle Battery Changing Instructions

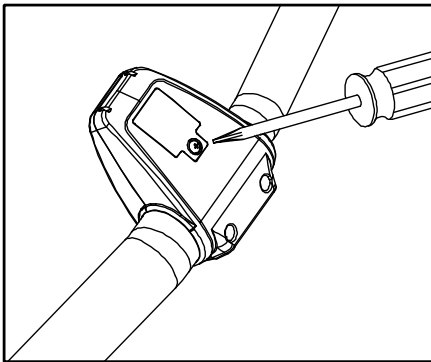


Step 1

Remove the battery cover screw.

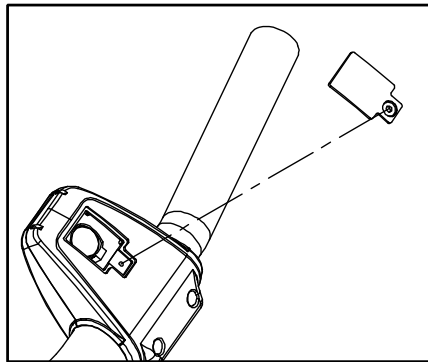

Step 2

Remove the battery cover.

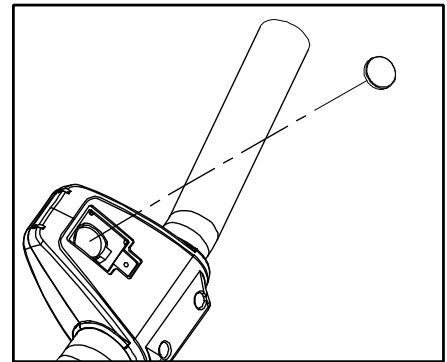


Step 3

Remove and replace the battery with new one, put on the cover and secure with screw.

## General Maintenance

1. Wipe down all areas in the sweat path with a damp cloth after each workout.
2. If a squeak, thump, clicking or rough feeling develops the main cause is most likely one of two reasons:
  - I. The hardware was not sufficiently tightened during assembly. All bolts that were installed during assembly need to be tightened as much as possible. It may be necessary to use a larger wrench than the one provided if you cannot tighten the bolts sufficiently. I cannot stress this point enough; 90% of calls to the service department for noise issues can be traced to loose hardware.
  - II. The crank arm nut needs to be retightened
  - III. If squeaks or other noises persist, check that the unit is properly leveled. There are 2 leveling pads on the bottom of the rear stabilizer, use a 14mm wrench (or adjustable wrench) to adjust the levelers

# Exploded View Diagram

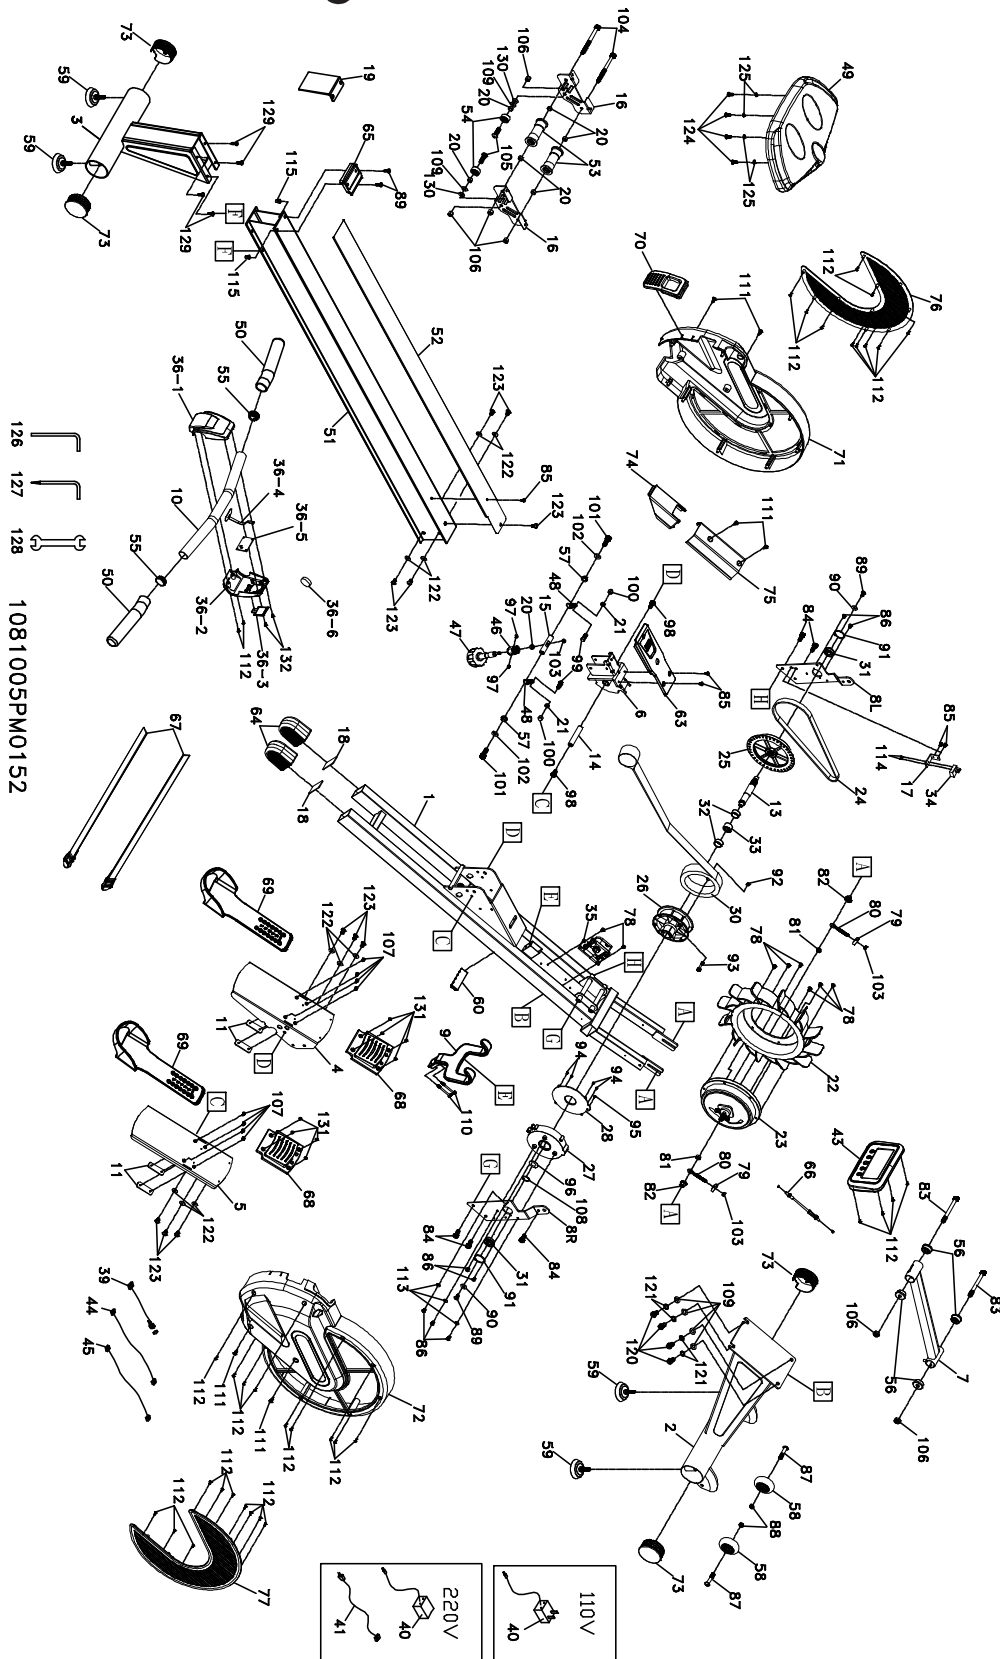



# Parts List

Part Number	Part Description	Qty per unit
1	Main Frame	1
2	Front Stabilizer	1
3	Rear Stabilizer	1
4	Pedal (L)	1
5	Pedal (R)	1
6	Folding End Assembly	1
7	Console Holder Assembly	1
008L	Attaching Plate (L)	1
008R	Attaching Plate (R)	1
9	Hook	1
10	Handle	1
11	Pedal Attaching Board	4
13	Flywheel Pulley Axle	1
14	Track Axle	1
15	Seat Stop Axle	1
16	Seat Attaching Board	2
17	Sensor Plate	1
18	Back Plate	2
19	Back Plate	1
20	Sleeve(Ø10×Ø14×7L)	7
21	Sleeve(Ø8.2×Ø12.7×5L)	2
22	Fan	1
23	Flywheel	1
24	Drive Belt(6PJ-787L)	1
25	Flywheel Pulley	1
26	Latch	1
27	Spring Latch	1
28	Spring Cover	1
30	Ribbon Roll	1
31	Bearing(6201 UOU)	2
32	Bearing(HK2012)	2
33	Unidirectional Bearing(HF2016)	1
34	Board	1
35	Gear Motor	1

<b>Part Number</b>	<b>Part Description</b>	<b>Qty per unit</b>
36	Controller Assembly	1
36~1	Top Handgrip Cap	1
36~2	Rear Handgrip Cap	1
36~3	Battery Cover	1
36~4	Resistance Button W/Cable+Faceplate	1
36~5	RF Module	1
36~6	Battery	1
39	750m/m_DC Power Cord	1
40	Power Adaptor (110V,220V)	1
41	Transformer Power Cord (220V,Optional)	1
43	Console Assembly	1
44	500m/m_Computer Cable (Upper)	1
45	500m/m_Computer Cable (Lower)	1
46	22L × M16 × M22 × 37L_Knob Nut	1
47	Seat Up/Down Adjustment Knob	1
48	Tension Spring	2
49	Seat	1
50	PVC Sleeve	2
51	Aluminum Track	1
52	Aluminum Board	1
53	Aluminum Track Pulley	2
54	Pulley	2
55	Ø32(1.8T)_Button Head Plug	2
56	Axle End Cover	4
57	Bushing	2
58	Ø65 _Transportation Wheel	2
59	Adjustment Foot Pad	4
60	Square End Cap	1
63	Connecting Cover	1
64	End Cover	2
65	Seat Stop Cover	1
66	Steel Cable	1
67	Wire Tie Mount	2
68	Pedal	2
69	Pedal Plate	2
70	Chain Cover Foam	1

<b>Part Number</b>	<b>Part Description</b>	<b>Qty per unit</b>
71	Chain Cover (L)	1
72	Chain Cover (R)	1
73	Stabilizer End Cap	4
74	Front Gear Motor Cover	1
75	Rear Gear Motor Cover	1
76	Nylon Net (L)	1
77	Nylon Net (R)	1
78	M5 × P0.8 × 15L_Phillips Head Screw	8
79	Ø6_Nut Stopper	2
80	M6 × 57L_Idle Wheel Screw	2
81	3/8" × UNF26 × 6T_Luck Nut	2
82	3/8" × UNF26 × 11T_Nut	2
83	3/8" × UNC16 × 3-3/4"_Socket Head Cap Bolt	2
84	M8 × P1.25 × 20L_Socket Head Cap Bolt	5
85	M5 × 10L_Phillips Head Screw	5
86	M5 × 10L_Phillips Head Screw	7
87	5/16" × UNC18 × 1-3/4"_Button Head Socket Bolt	2
88	5/16" × 6T_Nyloc Nut	2
89	M6 × P1.0 × 18L_Button Head Socket Bolt	4
90	Ø6 × Ø19 × 1.5T_Flat Washer	2
91	Ø32 × 1.6T_C Ring	2
92	M5 × 5T_Nyloc Nut	1
93	M5 × P0.8 × 32L_Socket Head Cap Bolt	1
94	3 × 10L_Sheet Metal Screw	4
95	3 × 10L_Sheet Metal Screw	1
96	Ø20 × Ø30 × 0.5T_Flat Washer	1
97	M4 × 5L_Phillips Head Screw	2
98	M8 × P1.25 × 15L_Socket Head Cap Bolt	2
99	M8 × P1.25 × 20L_Hex Head Bolt	2
100	M8 × P1.25 × 13T_Cap Nut	2
101	3/8" × UNC16 × 1"_Socket Head Cap Bolt	2
102	Ø3/8" × 20 × 3.0T_Flat Washer	2
103	M6 × 6T_Nyloc Nut	3
104	3/8" × UNC16 × 4-1/4"_Socket Head Cap Bolt	2
105	3/8" × UNC16 × 32L_Flat Head Socket Bolt	2
106	3/8" × 11T_Nyloc Nut	6

<b>Part Number</b>	<b>Part Description</b>	<b>Qty per unit</b>
107	M5 × 12L_Flat Head Socket Screw	8
108	Ø20_C Ring	1
109	Ø3/8" × Ø19 × 1.5T_Flat Washer	6
110	M5 × P0.8 × 50L_Socket Head Cap Bolt	2
111	Ø5 × 16L_Tapping Screw	6
112	3.5 × 12L_Sheet Metal Screw	35
113	Ø5 × Ø13 × 2T_Flat Washer	3
114	Ø2.6 × 8L_Tapping Screw	2
115	M6,Ø6 × 1.5 + 14.5L_Hex Blind Nut	2
120	3/8" × 3/4"_Hex Head Bolt	4
121	Ø10 × 2T_Spring Washer	4
122	Ø5/16" × Ø18 × 1.5T_Flat Washer	10
123	M8 × P1.25 × 12L_Button Head Socket Bolt	11
124	M6 × 15L_Phillips Head Screw	4
125	Ø1/4"_Spring Washer	4
126	M4_L Allen Wrench	1
127	Combination M5 Allen Wrench & Phillips Head Screw Driver	1
128	13/14m/m_Wrench	1
129	M6 × P1.0 × 10L_Button Head Socket Bolt	4
130	Ø3/8" × Ø21 × 2T_Flat Washer	2
131	M4 × 6L_Phillips Head Screw	8
132	3 × 10L_Sheet Metal Screw	2



**WARRANTY INFORMATION**

**SOL0058 Sole Rower**

**IMPORTANT**

Please read and retain this manual as it will assist with identification for parts and service.

-----

-----

BOYLES FITNESS warrants the Sole Rower to be free from defects in material and workmanship under normal use and service conditions.

The various components of the product are warranted against defects and workmanship for the time periods specified as follows:

<b>Domestic Use</b>	
Frame & Brake	Lifetime*
Parts	5 Years
Labour	1 Year
Commercial Use (>8 hours per day)	
Parts	1 Year

All warranty coverage extends only to the original retail purchaser from the date of purchase. BOYLES FITNESS' obligation under this Warranty is limited to replacing or repairing, at BOYLES' option, the product or parts therein. Any enquiries relating to warranties or spare parts must be directed to our website [www.bfe.com.au](http://www.bfe.com.au) where you can lodge a service request.

This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage (as detailed in this instruction manual), or repairs not provided by BOYLES. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning and by snow or ice). No other Warranty beyond that specifically set forth above is authorised by BOYLES. Lifetime\* refers to the warranty coverage of the units expected service life. NOT the lifetime of the purchaser.

Our sales and service centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters.

**Email** spares@bfe.com.au

**Website** www.bfe.com

### **BFE Warranty Policy – January 1st, 2019**

1. When purchased from an authorised BFE distributor the BFE warranty shall guarantee that all framework and components of your product are free from faulty manufacture. All faulty framework and components will be repaired or replaced as set out in this policy. All warranties in this policy apply to INDOOR HOME/DOMESTIC USE ONLY.
2. These warranties do not apply to products used in commercial use applications.
3. Warranty DOES NOT cover normal wear & tear and excludes faults due to misuse, abuse, incorrect assembly or lack of general maintenance.
4. Warranty is applicable to products sold and placed within Australia only.
5. IMPORTANT. Most of BFE products are pretested and we have inspectors checking all products prior to shipment. The number one reason for a fault is due to INCORRECT ASSEMBLY.
6. If you do have problems please go back to the start and double check your assembly and pay special attention to all WIRING connections. If you have accidentally cut or damaged the wiring please let us know and we will be happy to send you a new set at no-charge

**WARRANTY TERMS**– Warranty commences from the date of purchase from the retail store. Warranty only applies to the original purchaser and is NON transferable. Warranty is void if the serial number of the product has been removed or tampered with.

Warranty does not apply to defects, faults or failures due to:

- (a) Defects caused during assembly or failure to assemble to the assembly manual provided. Assembly errors include but are not limited to damaged wiring harness, stripped crank arms and or pedals and bolts used in the wrong locations.
- (b) Lack of general maintenance and or failure to service or maintain the equipment in accordance with the user manual specifications and recommendations.
- (c) Power Surges. The computers, control boards and motors are very sensitive to power fluctuations. You must use a surge protector on all items that plug into your mains power otherwise your electronics will not be covered by this warranty.
- (d) User negligence, abnormal or excessive use, misuse, abuse or transport damage.
- (e) Repairs, alterations or modifications by NON BFE authorised service technician.
- (f) Accident, fire, flood or malicious damage by third person.
- (g) Ordinary wear and tear.
- (h) Failure to keep the product in a clean, dry environment. You should wipe off any sweat and moisture after each training session.
- (i) Any products sold or placed in an application or the incorrect environment that is not recommended by BFE or as not stipulated in the owner's manual such as a commercial / rental environment will void the warranty set forth by BFE
- (j) BFE recommends the use of a protective rubber floor mat. This reduces the incidence of dust and lint collection around the motor, reduces noise & protects your floor. You can purchase this from your retailer or contact BFE directly at sales@bfe.com.au

BFE will have the option to repair or replace any product which requires attention under the warranty.

**NOTE:** Lifetime\* refers to the warranty coverage of the units expected service life. NOT the lifetime of the purchaser.

**Servicing/Spare Parts**- As with any mechanical equipment general maintenance should be performed on a regular basis by an authorised retailer or service technician. This will ensure longevity of the product and ensure that it is kept working in optimum condition. Failure to properly maintain your equipment may lead to safety issues and may also void the warranty.

You should only use genuine BFE replacement parts otherwise the warranty will be void.

#### **Freight Costs:**

The cost of freighting the replacement part under warranty to the customer shall be free of charge. Your requirement is to return the faulty part via the pre-paid postal service which we will supply.

#### **Returned Goods:**

The unauthorised return of parts or product shall be refused and placed in the hands of the carrier at the cost of the shipper. Return authorisations can be obtained from BFE head office only.

**Service Department hours: Monday to Friday between 8.00am and 3pm**

**Email: spares@bfe.com.au**

PLEASE NOTE: that Authorised service technicians do not reside in all areas of this vast country. If you live beyond the reasonable service area of a metropolitan area, BFE may not be able to support the labour portion of the product warranty. Alternatively you can return (at your cost) your product to the closest BFE repair centre, where it will be fixed at no charge under the warranty period.

Metropolitan Area- defined as no more than 50km from G.P.O in all capital cities.

Disclaimer:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a 'Major failure'.

You are also entitled to have goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure.

BFE does not assume, nor authorise any representative or other person to make or assume for BFE, any warranties whatsoever, whether expressed or implied, in connection with the sale, service, or shipment of our products.

BFE reserve the right to make changes and improvements in our products and specifications without incurring any obligation to similarly alter products previously purchased.

This warranty operates in addition to other rights and remedies available to consumer's rights under the Australian Consumer Law.

**Service Department hours: Monday to Friday between 8am and 3pm**

**Email: [spares@bfe.com.au](mailto:spares@bfe.com.au)**

**Website: [www.bfe.com.au](http://www.bfe.com.au)**