Installation, Operation & Maintenance Guide

Models# 420670, 420671, 420672

### Thank you for purchasing an HM Electronics Coral Cover™ light fixture.

When maintained properly, the unit will provide years of service.





**WARNING:** Please read carefully before proceeding with installation. Your failure to follow any attached instructions and operating parameters may lead to the product's failure.

#### A) READ & FOLLOW ALL SAFETY INSTRUCTIONS

B) **DANGER** – To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself; return the appliance to an authorized service facility for service or discard the appliance:

C14 Pluas

- If the appliance falls into the water, **DON'T** reach for it!
  First unplug it and then retrieve it. If electrical
  components of the appliance get wet, unplug the
  appliance immediately. (Non-immersible equipment only)
- If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source. (Immersible equipment only)
- Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- 4) Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.
- 5) To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of a wall-mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop," shown

Drip Loop

in the figure to the left, should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle, or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, **DON'T** unplug the cord. Disconnect the fuse or circuit breaker

that supplies power to the appliance. Then, unplug and examine for presence of water in the receptacle.

- C) Close supervision is necessary when any appliance is used by or near children.
- D) To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and the like.
- E) Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull the plug from outlet. Grasp the plug and pull to disconnect.
- F) Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- G) Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
- H) Make sure an appliance mounted on a tank is securely installed before operating it.
- Read and observe all the important notices on the appliance.
- J) If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
- K) For added safety, the appliance must be plugged into a receptacle controlled by a GFCI (ground fault interrupter) circuit breaker. The device must be properly connected to a grounded three-prong receptacle.
- L) This appliance is intended FOR HOUSEHOLD USE ONLY.
- M) SAVE THESE INSTRUCTIONS.

For technical assistance or warranty issues, contact Aquatic Life at customersupport@aquaticlife.com

Installation, Operation & Maintenance Guide

www.aquaticlife.com



Contents/Quantity				
		<b>24''</b> #420670	<b>36''</b> #420671	<b>48''</b> #420672
0	LED Panels with 5.9' / 1.8 M cord	2	2	2
2	Led Rails	2	2	2
3	18" Side Endplates	2	2	2
4	24 Volt Power Supply with 3.4' / 1 m cord	2	2	2
6	48" Power Cord with Male C14 Connector	2	2	2
6	Rectangular LED Bracket with screws	2	4	6
7	Screw Packet LED fixtures	1	1	1
8	Suspension Cable Set	1	1	1

**RECOMMENDED TOOLS FOR INSTALLATION** - Phillips Screwdriver

# FIXTURE ASSEMBLY

Scan the QR code to access the installation video.



Enter **qrs.ly/f6ccd33** in a computer web browser to access the installation video.

## DOWNLOAD APP

Scan the QR code to locate the HME AquaMaster app in either Google Play or iTunes Store.






# PROGRAM USE & TUTORIAL

You will use your phone to program & customize lighting with the HME AquaMaster app. To make it easier to follow along, use another device to watch the Program & Use Tutorial.

When connecting to the fixture, enter **Passcode: 24897673** 



Enter qrs.ly/q2ccd52 in a computer web browser to access the programming video.

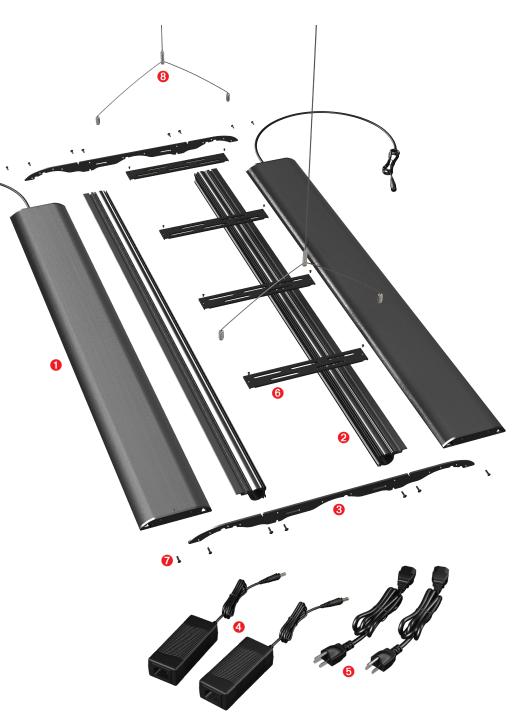

# Installation, Operation & Maintenance Guide

Models# 420670, 420671, 420672

### UNIT MAINTENANCE

Turn off the power to the fixtures and unplug the fixtures. Wipe the housing with a clean moist/semi dry cloth to remove dust, salt and other debris that may build-up on the fixtures.

#### PRODUCT REGISTRATION

Visit AquaticLife.com to register your product.

### USA & CANADA LIMITED WARRANTY

In the United States and Canada, the HME Coral Cover fixtures are distributed by Aquatic Life and warranted through Aquatic Life. Aquatic Life warrants that this product shall be free from defective electrical and non-electrical components due to defects in materials or workmanship for a period of twelve (12) months from the date of purchase. If a defect is shown. Aquatic Life will, at Aquatic Life's sole discretion, either repair or replace the product without charge. No cash refunds will be made. This warranty is provided solely to the original consumer purchaser of the product and may not be transferred or assigned.

This warranty does not apply to damage resulting from accident, misuse, abuse, lack of reasonable care, failure to follow safety and installation instructions, use of the product with non-standard electrical service, or any other defect not resulting from defects in the electrical components of the product or defects in materials or workmanship. This warranty will not be effective unless and until the Coral Cover product is shown to have been used in accordance with the safety and installation instructions accompanying the product.

THIS CONSTITUTES HM ELECTRONIC'S ENTIRE WARRANTY AND HM ELECTRONICS AND AQUATIC LIFE MAKE NO OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT. HM ELECTRONICS AND AQUATIC LIFE SPECIFICALLÝ DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF HM ELECTRONICS AND AQUATIC LIFE CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. HM ELECTRONICS AND AQUATIC LIFE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. HM ELECTRONICS AND AQUATIC LIFE EXPRESSLY DISCLAIMS ALL ALLEGED DAMAGES FOR LOSS OF MARINE LIFE, PERSONAL INJURY, AND/OR PROPERTY DAMAGE.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province. HM Electronics and Aquatic Life shall not have any obligations under this warranty unless the owner notifies Aquatic Life in writing of any alleged defect(s) within 30 days of discovery of the defect(s). Any notice to Aquatic Life must be delivered by United States or electronic mail to the following address:

Aquatic Life, 9710 Klingerman St. S El Monte, CA 91733

Email: customersupport@aquaticlife.com