


Float Valve Kit Instruction Guide



The Aquatic Life Float Valve Kit allows you to automatically fill large tanks, containers, and aquariums. If you are using this with a reverse osmosis or RO/DI system, you **WILL NOT need any other components**, as this includes the necessary auto shut-off valve, check valve, and tubing.

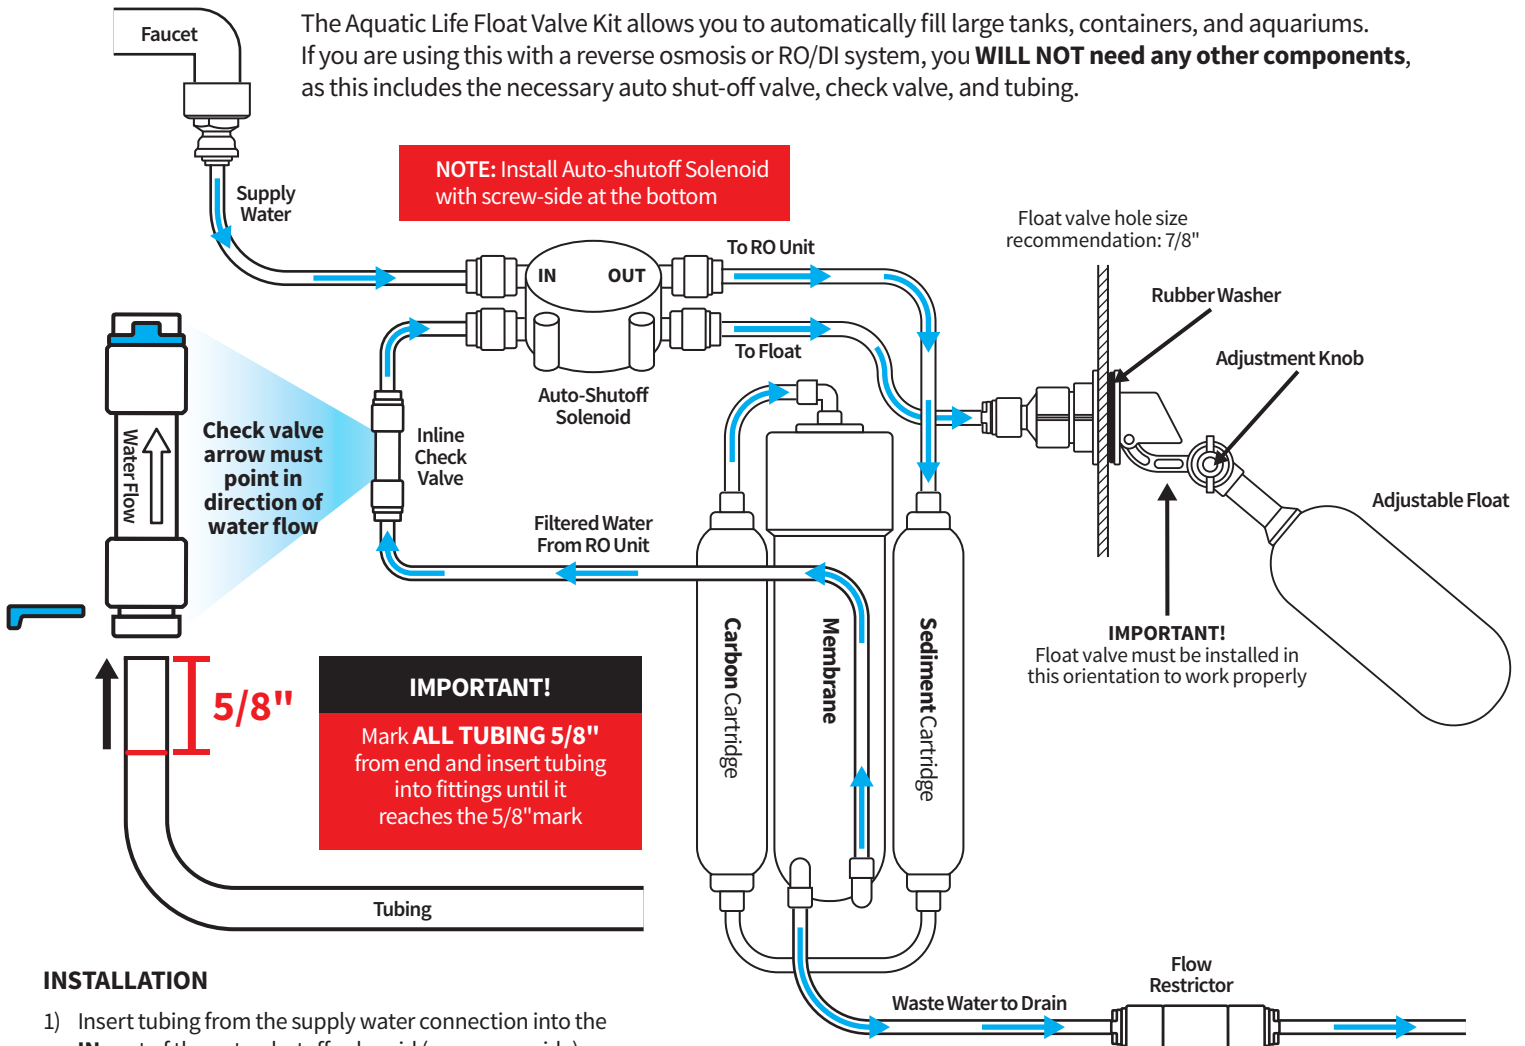

INSTALLATION


- 1) Insert tubing from the supply water connection into the **IN** port of the auto-shutoff solenoid (non-screw side)
- 2) Insert tubing into the **OUT** port of the auto shut-off solenoid (non-screw side) and connect the other end of the tubing to where water flows into the sediment cartridge
- 3) Install the adjustable float into a reservoir or other container
- 4) Connect the tubing from the filtered water existing the membrane to the inline check valve. **Be sure the arrow on the check valve is pointing the direction of water flow**
- 5) Insert tubing to connect the check valve to the **IN** port (screw side) of the auto-shutoff solenoid
- 6) Insert the tubing into the **OUT** port (screw side) and connect the other end of the tubing to the adjustable float valve

PARTS LIST

Auto-Shutoff Solenoid	1/4" x 1/2" FPT
Adjustable Float	5' - 1/4" Polyethylene Tubing
Rubber Washer	Installation Guide
1/4" Inline Check Valve	

PRODUCT SPECIFICATIONS

Minimum Operating Pressure: 40 PSI
Maximum Operating Pressure: 80 PSI

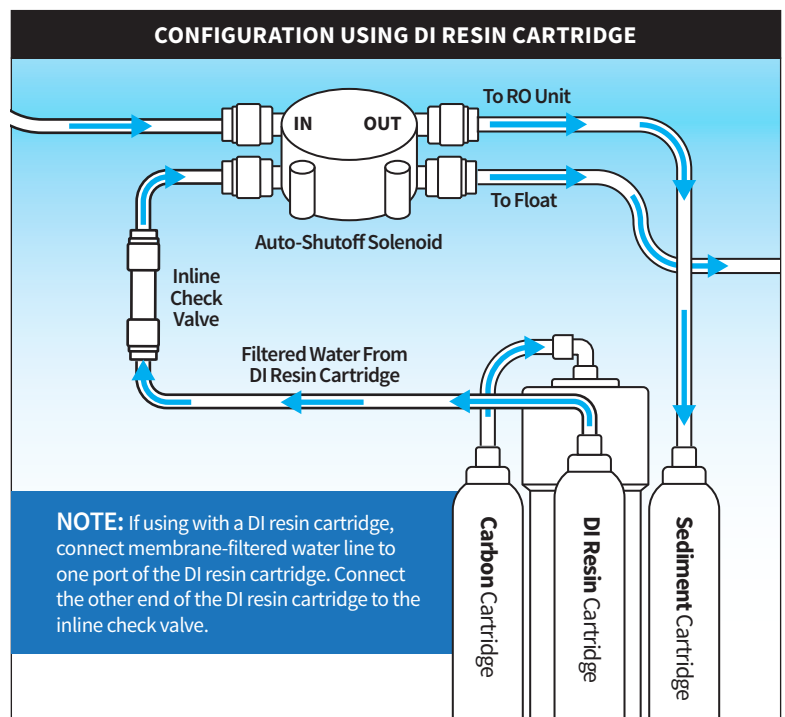



Float Valve Kit

With Automatic Shutoff

Fill large tanks, containers,
and aquariums automatically

Includes auto-shutoff solenoid

Connects to faucet

Aquatic Life is trademark of
Lifetime Products LLC.
© 2020 S. El Monte, CA 91733
1-888-548-3480
www.aquaticlife.com
Made in China

ITEM # 500300



8 10957 01300 4