




## Spring Blind Assembly

**Table: Bill of Materials**

ITEM NO.	DESCRIPTION	QTY
1	SPRING ADAPTOR & BRACKET	2
2	BLIND ASSEMBLY	1
3	SNAP LOCK	2
4	SADDLE	4
5	GRAB HANDLE	1

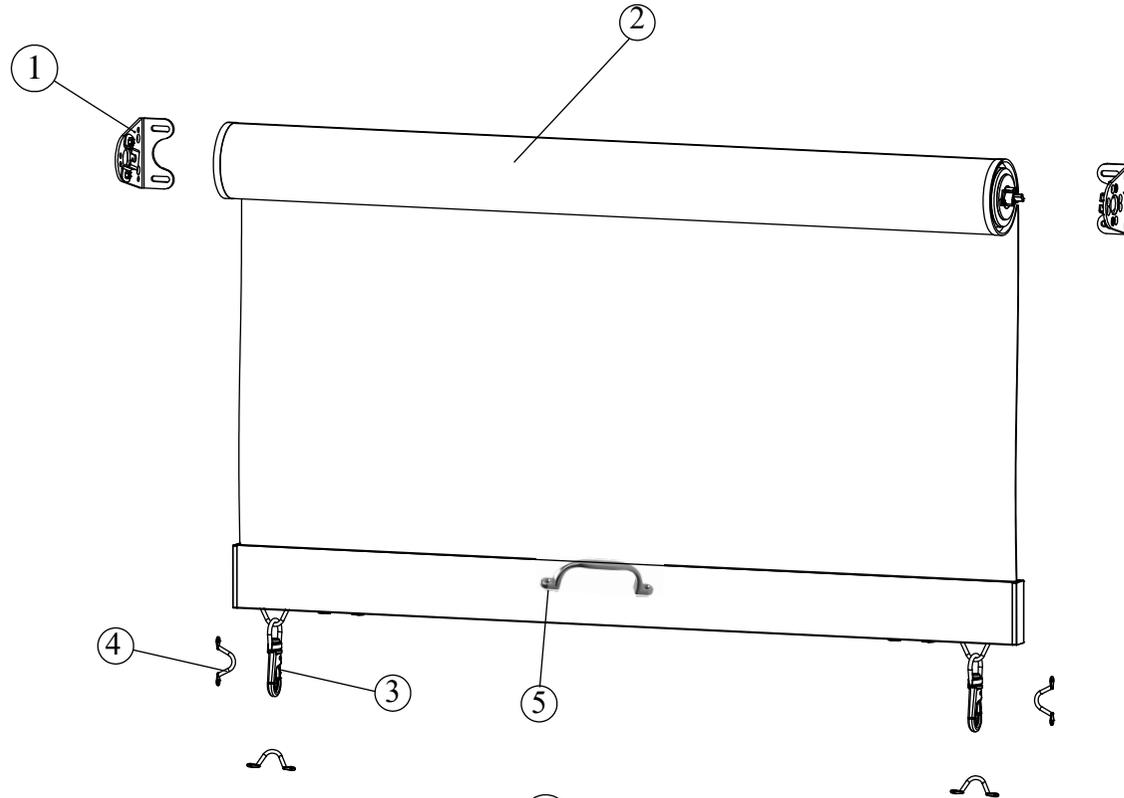


### Mounting Bracket

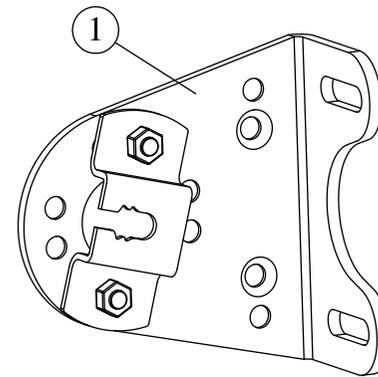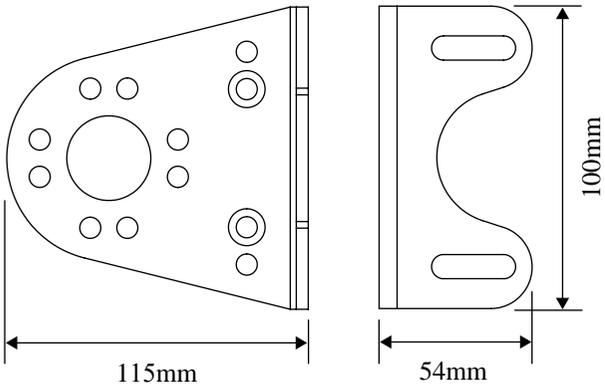



Spring Adaptor & Bracket

Assemble top brackets - reveal mount or face mount.

Left Side Bracket

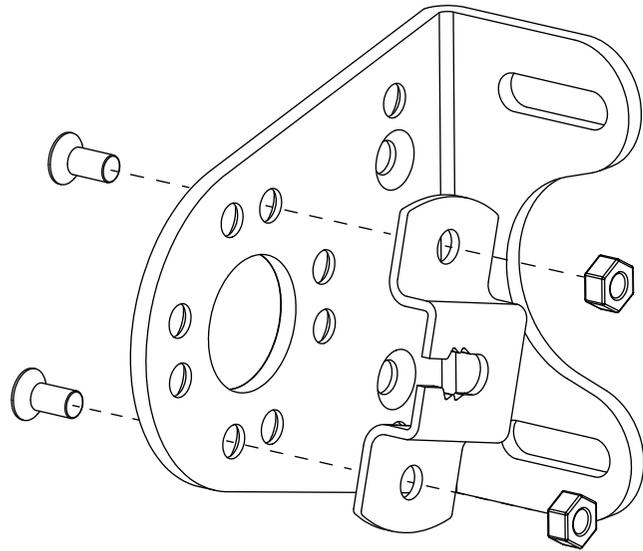



Right Side Bracket

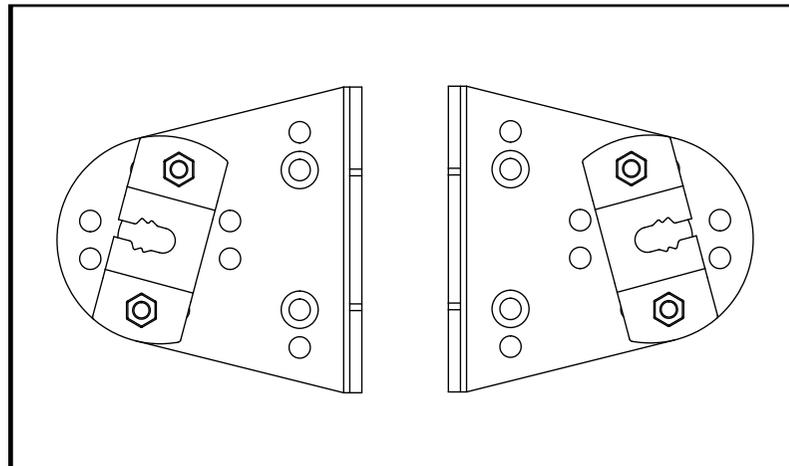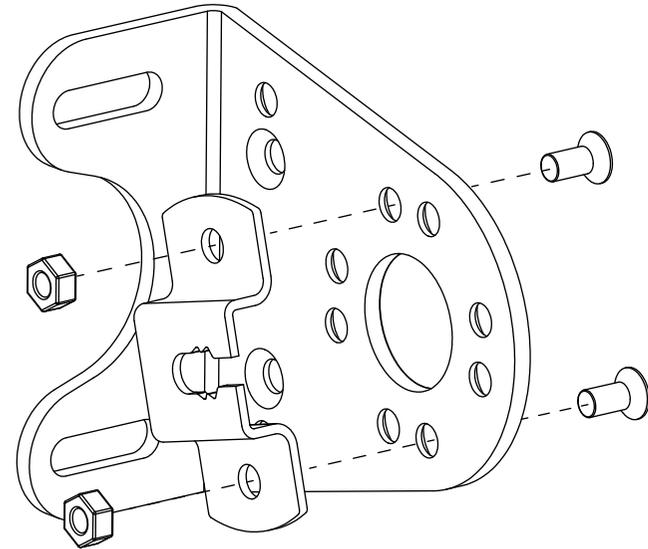

1a

Secure spring adaptor to  
Mounting brackets as shown.


## Assemble top brackets - ceiling mount.

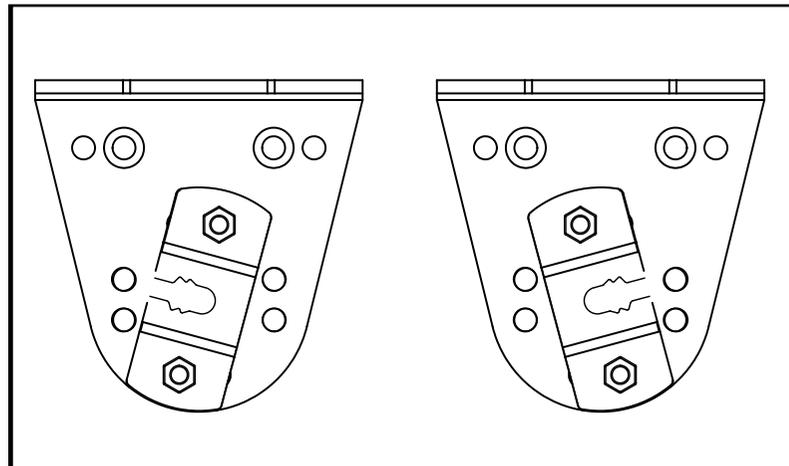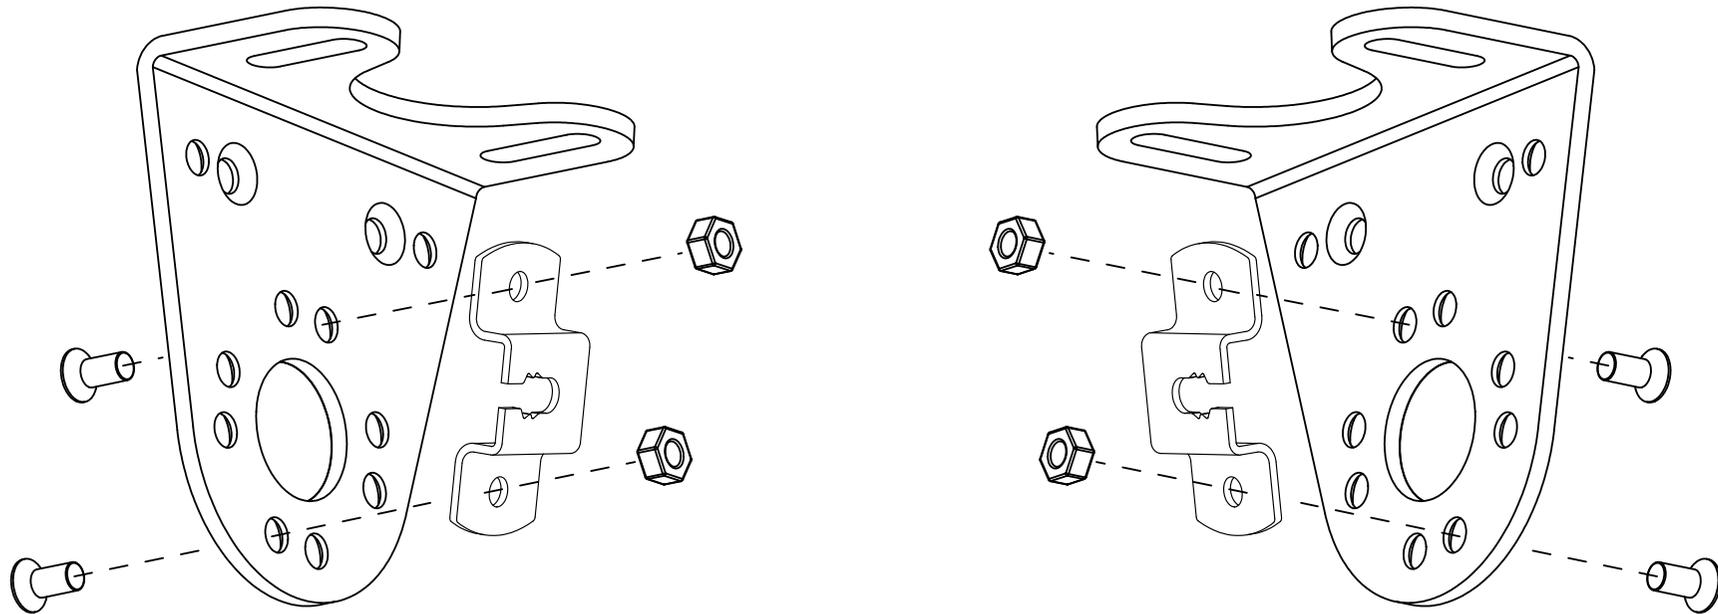


**1b**

Secure spring adaptor to Mounting brackets as shown.

## Install top brackets - reveal mount or face mount.

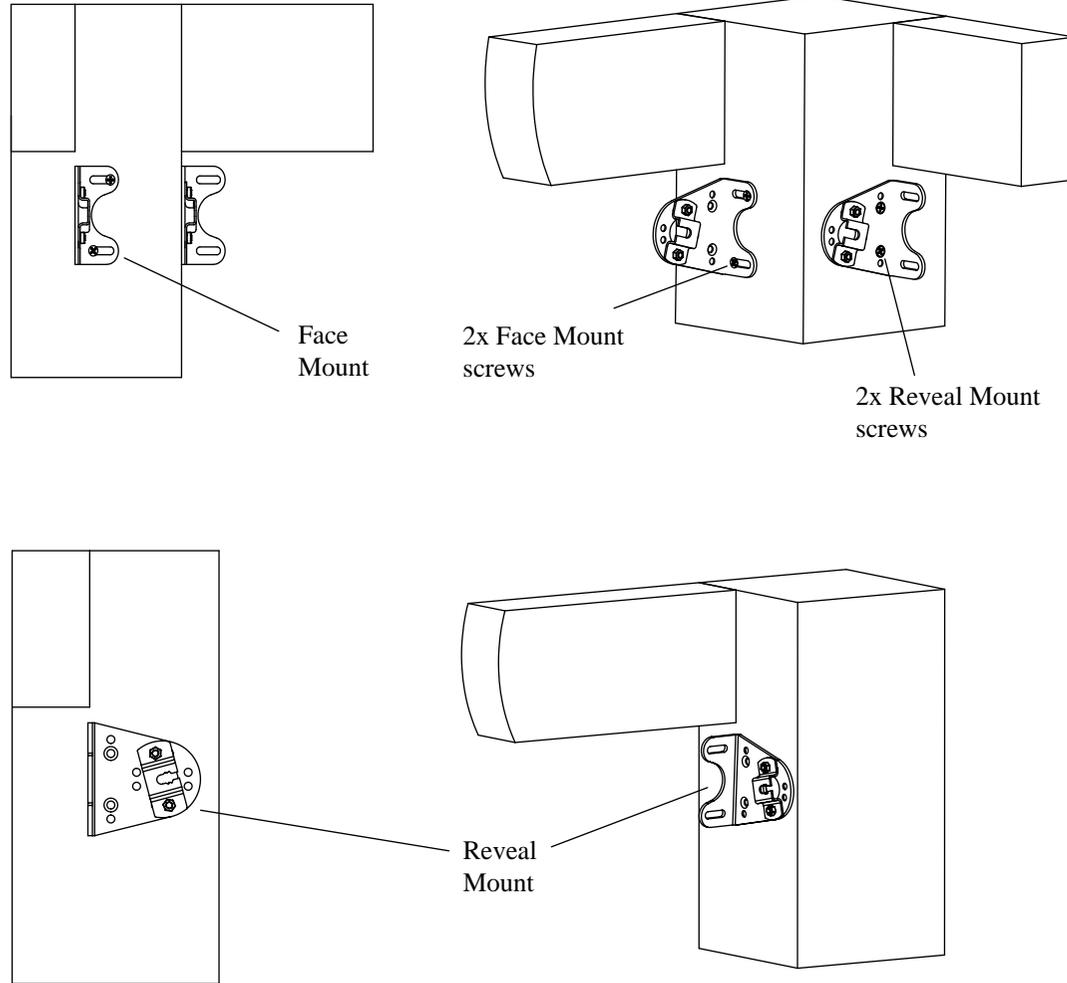

## Install top brackets - ceiling mount.

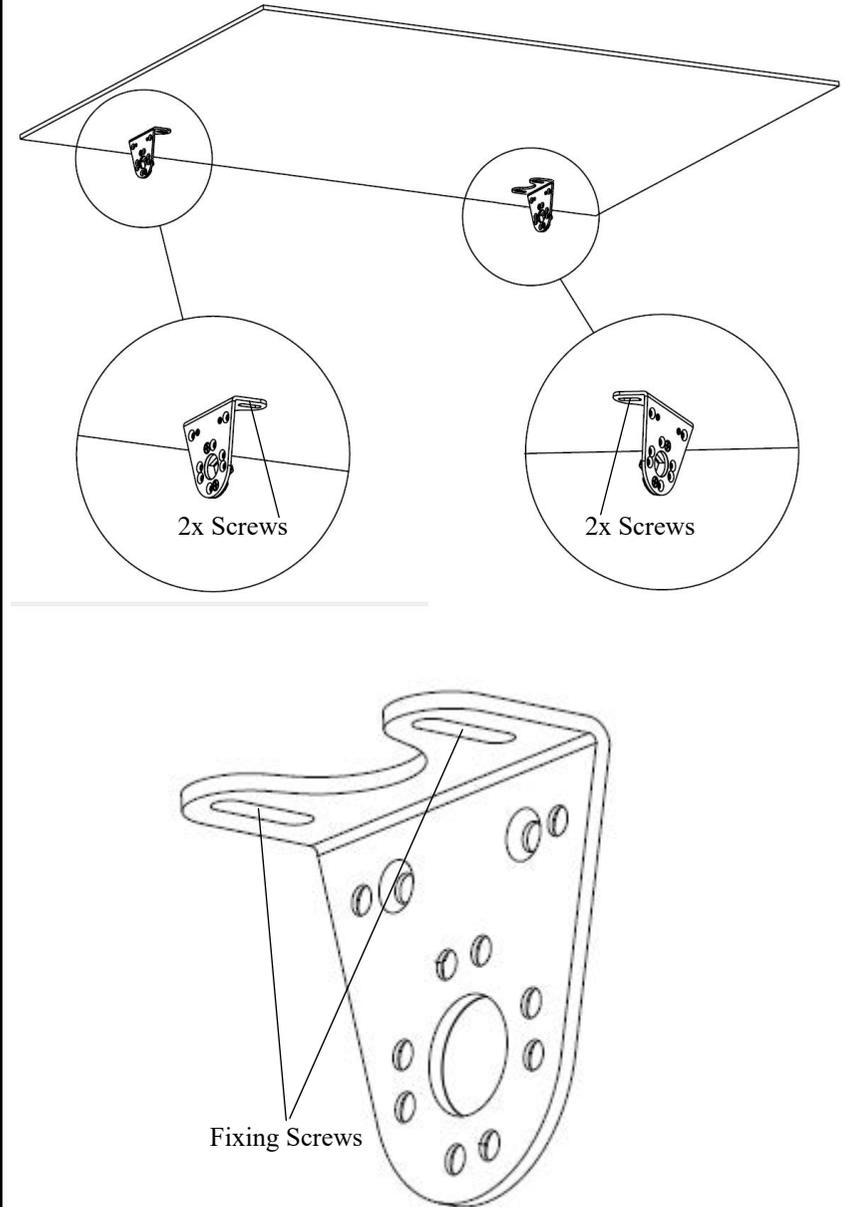

**2a** Fix spring adaptor brackets either *Face Mount* or *Reveal Mount* below the bottom face of the structure.




**2b** Fix spring adaptor brackets to the underside of beam/structure.

## Tension the blind before mounting.



### Important Note:

Tension the blind 10-15x turns before fitting it to the brackets.

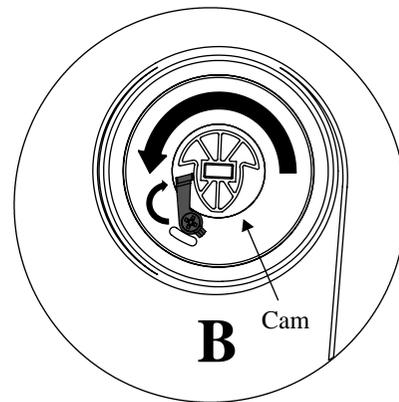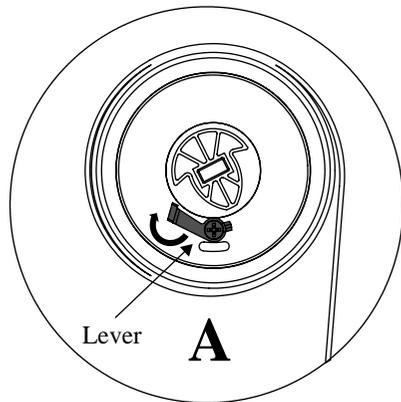
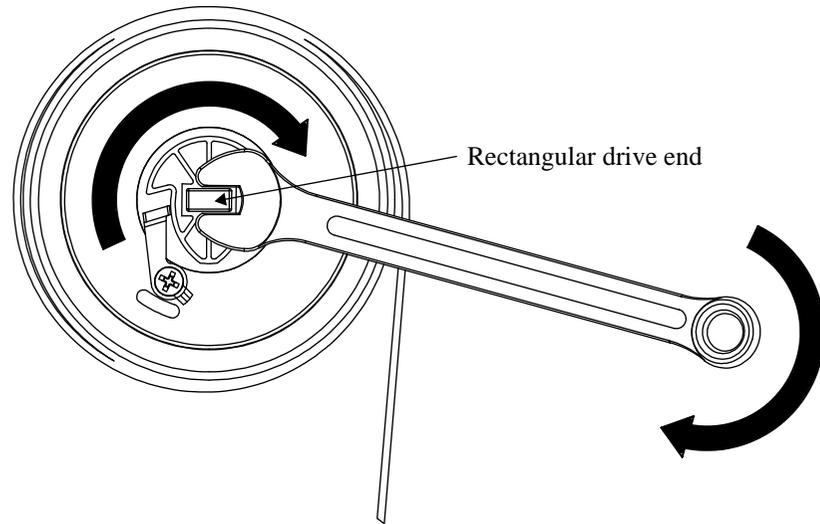


 Tension the blind before fitting it to the brackets.

- 1) Rotate the rectangular drive end 10-15x turns with either a shifter or spanner.
- 2) Rotate the lever (A) on the end of the blind to engage the cam (B). This will prevent the cam from rotating and set the spring tension.


**3**

## Mounting the blind.

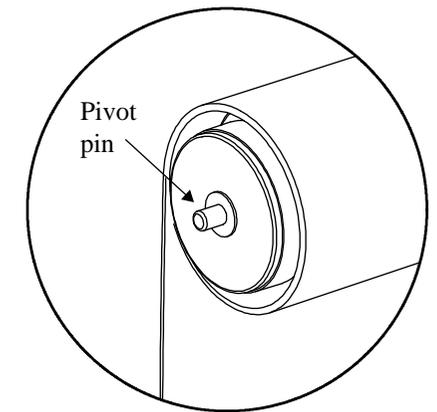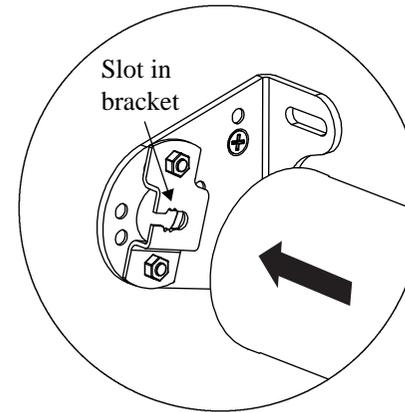

**4**

Align and locate the pivot pin into the slot in the spring adaptor.

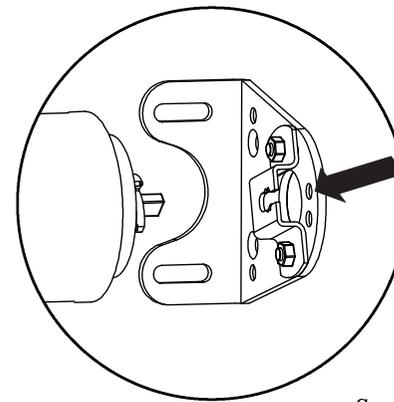


Spring Adaptor

**5**

Align and insert the rectangular drive end into the spring adaptor.. When the blind is under tension this will twist and lock into place.

## Raise and lower the blind.

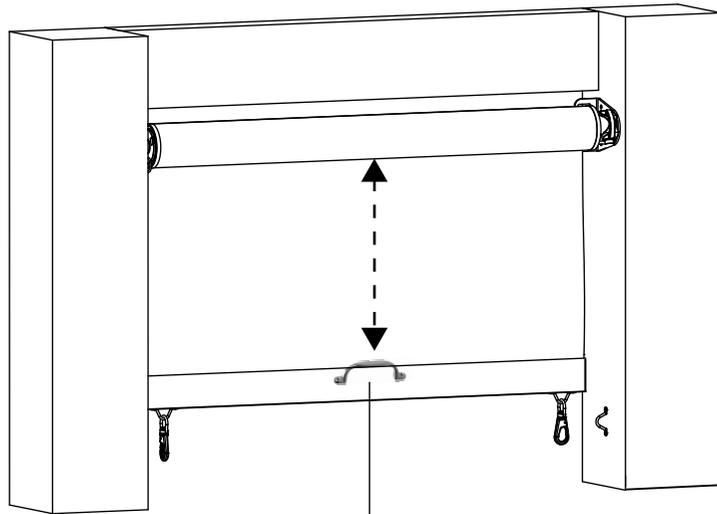


**6**

With the blind in position pull firmly down using the Grab Handle to release and unwind the blind.


## Mounting saddle positions.




**Important Note:** Do not let go of the base rail as this will cause the blind to spring up under tension and may damage your spring.

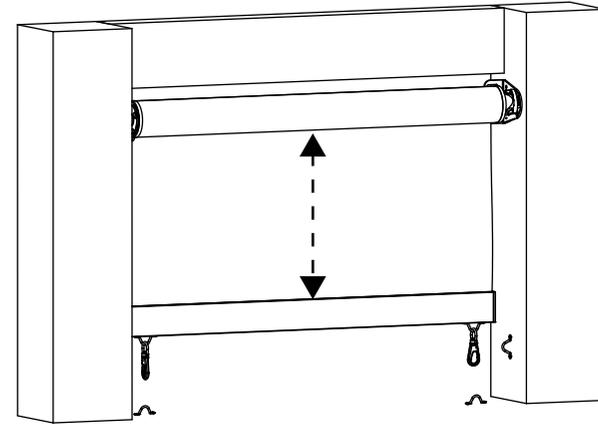


**POST or WALL**

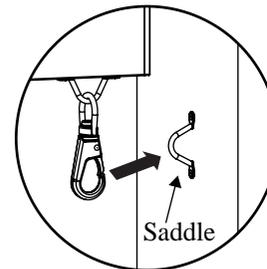

**HAND RAIL**

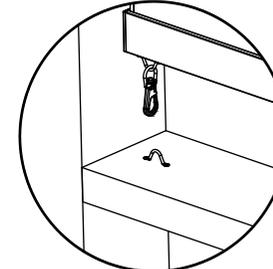

**FLOOR**

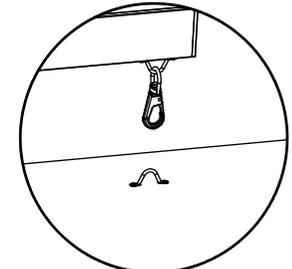

**7**

- 1) Fix saddles at the desired position on posts, wall, hand rail or floor.
- 2) Attach and secure with snap hook before releasing the base rail.

### **DISCLAIMER**

We guarantee that all our products will be free from defects in components and manufacture for a period of **twelve months** from the date of purchase.

All goods supplied are guaranteed against mechanical default in normal domestic use and the supplier will repair or replace at its discretion such components that prove faulty in operation. Damage caused by accidents, alterations, misuse, abuse or wear and tear are not covered by this warranty.

Under the guarantee, the supplier shall not be liable or responsible for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. The benefits conferred by this Guarantee are in addition to all other rights and services which the purchaser has under the Trade Practices Act 1974 and similar state and territory laws.

All warranties are conditional. For the warranty to be valid, customers must strictly adhere to both the installation and care instructions provided. The warranty does not cover variances in colours and textures from batch to batch. In addition, a receipt providing proof of purchase is required for any warranty claims.