

# **OUTDOOR BLIND** - INSTALLATION INSTRUCTIONS


#### **Mechanical Blind Assembly**

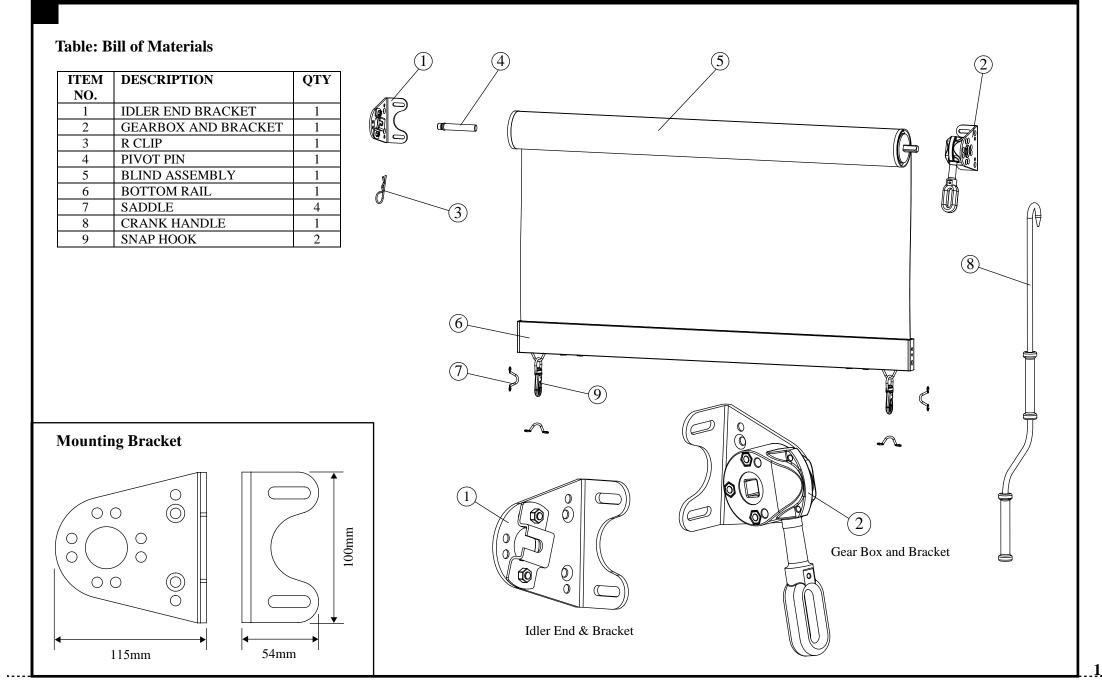

# **OUTDOOR BLIND - INSTALLATION INSTRUCTIONS**

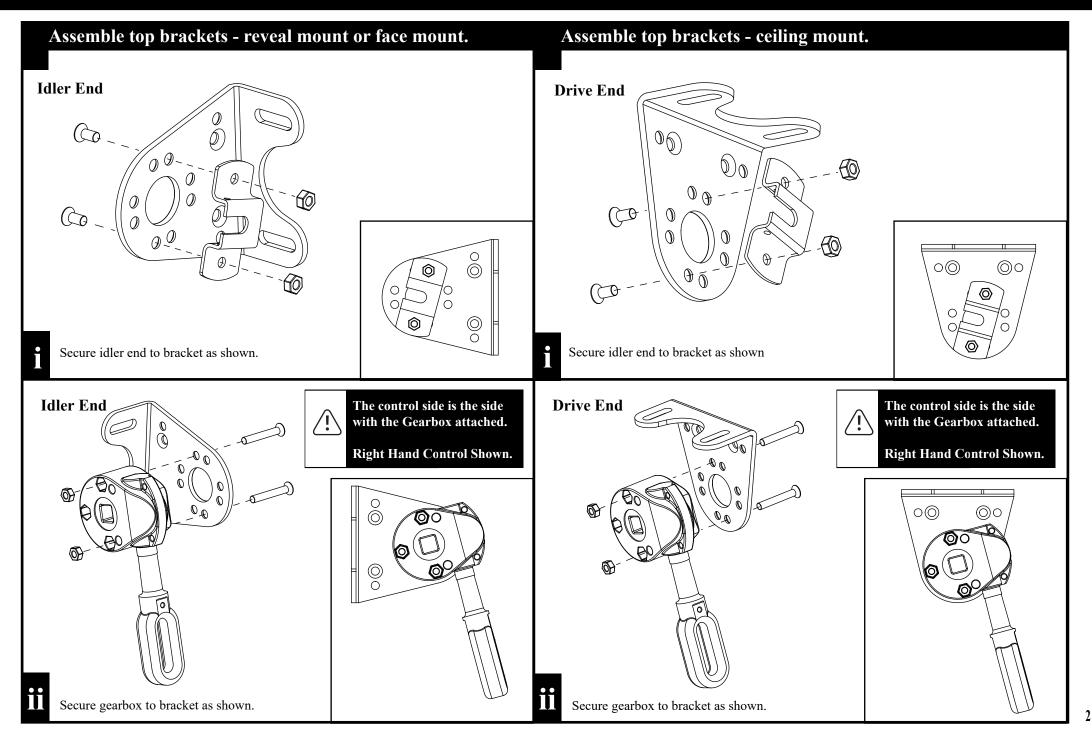


#### **OUTDOOR BLIND - INSTALLATION INSTRUCTIONS**

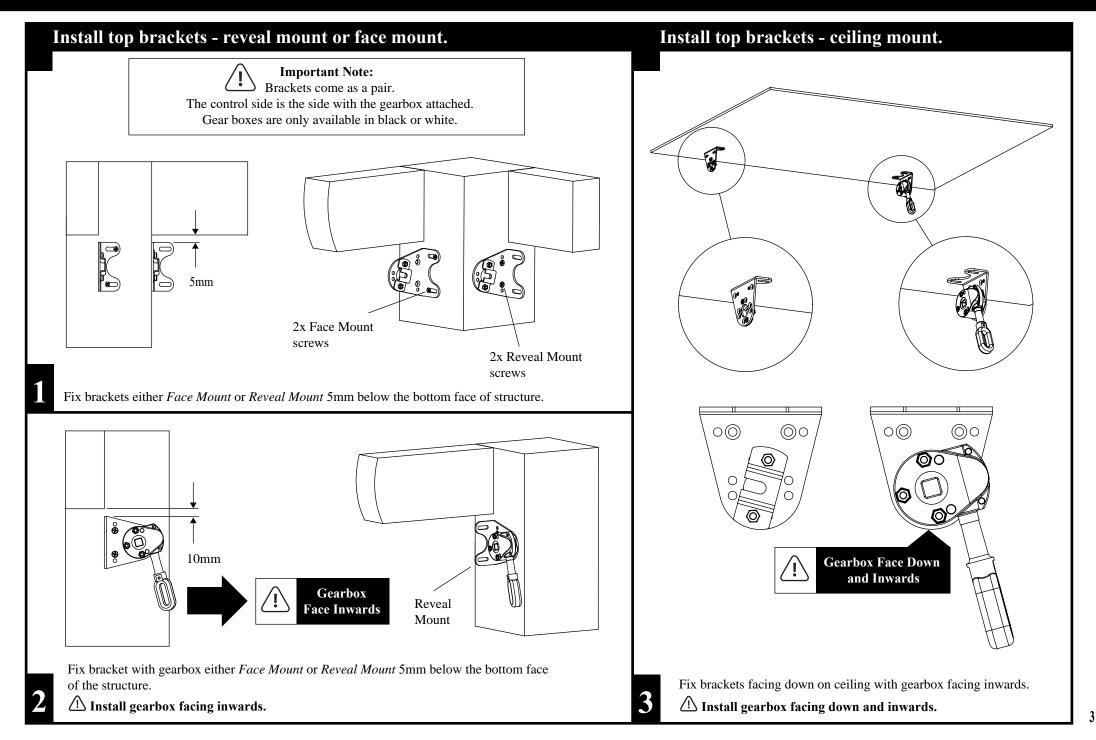


#### **OUTDOOR BLIND** - INSTALLATION INSTRUCTIONS

4


#### Mounting the blind.

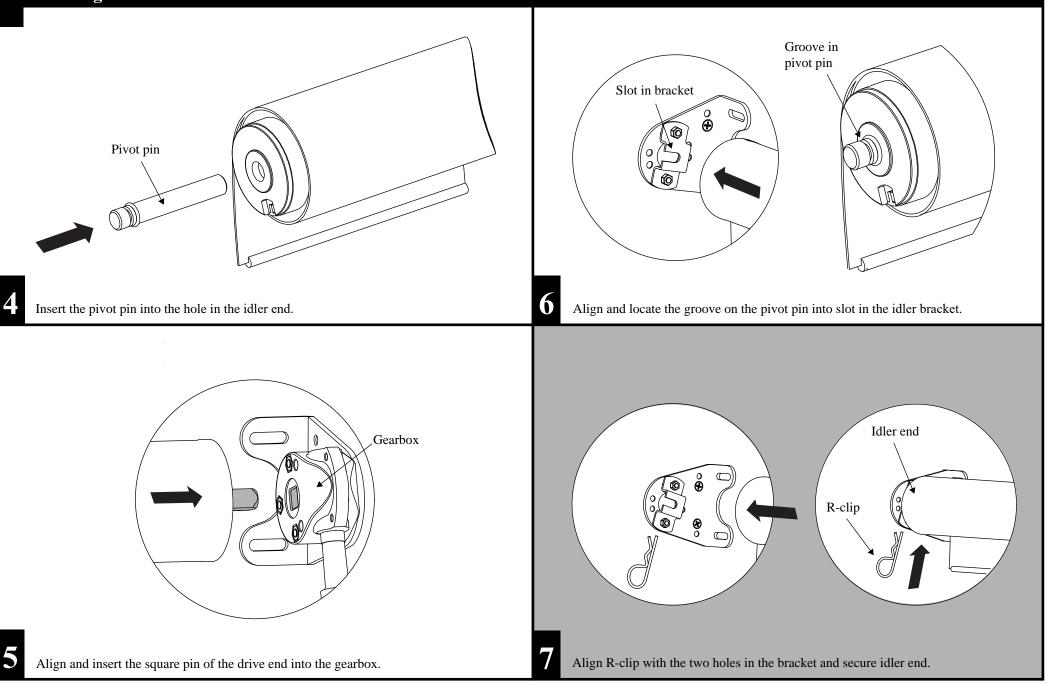

#### **OUTDOOR BLIND** - INSTALLATION INSTRUCTIONS

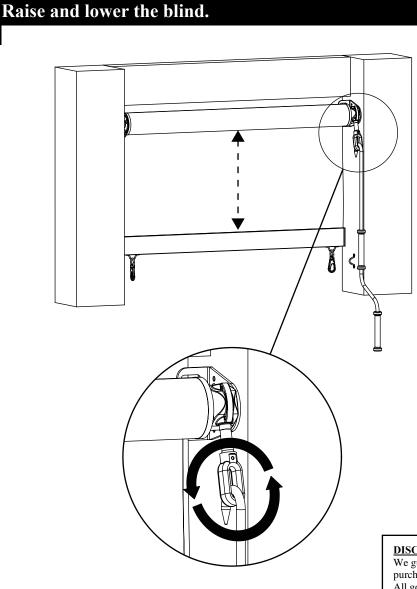

## Mounting saddle positions.

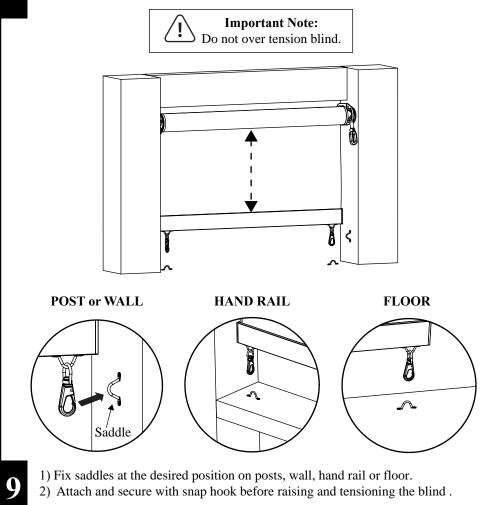

#### DISCLAIMER

We guarantee that all our products will be free from defects in components and manufacture for a period of **twelve months** from the date of purchase.

All goods supplied are guaranteed against mechanical default in normal domestic use and the supplier will repair or replace at its discretion such components that prove faulty in operation. Damage caused by accidents, alterations, misuse, abuse or wear and tear are not covered by this warranty.

Under the guarantee, the supplier shall not be liable or responsible for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. The benefits conferred by this Guarantee are in addition to all other rights and services which the purchaser has under the Trade Practices Act 1974 and similar state and territory laws.

All warranties are conditional. For the warranty to be valid, customers must strictly adhere to both the installation and care instructions provided. The warranty does not cover variances in colours and textures from batch to batch. In addition, a receipt providing proof of purchase is required for any warranty claims.

The blind is in position, use the crank handle to rotate the gearbox to raise and lower the blind to the desired position.