

JE JOUE  
**DUET**

---

A multi-surfaced bullet which is perfect for exploring different erogenous zones. Great for all play including clitoral stimulation and nipple teasing. Explore your body and use the different surfaces to get varying sensations.

With silky soft, body safe medical grade silicone, Duet feels great to touch. The soft, squishy tip will sensually massage your pleasure points. Let our famous rumbly motors penetrate your body deeper, giving you a richer, deeper sensation. You're welcome.

---

**Lubrication:**

We recommend using only water-based lubricants with our toys.

**For cleaning:**

We recommend washing your toy with warm water and soap.



5 Speeds 7 Patterns



Quiet



Body safe



Waterproof



Rechargeable

---

### **Turning on and off:**

- To turn your toy on, hold + until the red light shows and it begins vibrating.
- To increase vibration speed, use the + button.
- To decrease the vibration speed, use the - button.
- To change the vibration pattern, use the middle ~ button.
- Your toy has 5 different speeds and 7 different patterns.
- To turn your toy off, hold the - button until the red light goes off and it stops vibrating.

---

### **Travel Lock**

To activate the travel lock function hold down the + and - buttons for 5 seconds when the toy is in off mode. To turn off travel lock hold down both icons again for 5 seconds.

### **Charging**

1. Gently remove the silicone cap at the rounded end of your bullet
2. Insert your USB cable (provided with your toy)
3. 1 hour of charge gives you 1.5 hours of play

## Limited Warranty:

---

Je Joue warrants your toy for a period of one year from the date of original purchase against any defects due to faulty materials or workmanship. If the product fails during the warranty period, Je Joue will repair or replace it free of charge.

To obtain service under this warranty, return the defective product to the retailer from whom you purchased your toy, together with your sales receipt, address, and a daytime phone number.

This warranty does not cover defects caused by accidental damage, misuse or other use not in

accordance with this instructional manual and its safety warnings.

Removing the battery from your toy or otherwise dismantling or tampering with your toy invalidates the warranty and may prevent your toy from being repaired.

Je Joue is unable to accept returns or exchanges of non-defective products after the seal on the packaging has been broken.

This warranty does not affect your statutory rights as a consumer in any way.

---

Je Joue supports your toy purchased in the UK. If your toy was purchased from elsewhere then Je Joue may attempt a repair but cannot guarantee the outcome.

# Je Joue Toys

---

## Safety Information -

### **IMPORTANT SAFETY INFORMATION**

READ ALL INSTRUCTIONS BEFORE USE.

DO NOT DISCARD THESE INSTRUCTIONS.

**WARNING!** WHEN USING ELECTRICAL PRODUCTS BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

*To reduce the risk of electrocution, burns, fire, dangerous electric shock or injury:*

1. DO NOT place or store your toy or the charger in any liquid (other than water in accordance with these instructions).
2. DO NOT use your toy whilst it is charging.
3. DO NOT charge your toy whilst it is in, or near to, water or any other liquid.
4. DO NOT use a power adapter other than the charger included with your toy or purchased from Je Joue. If you

need a replacement part, please contact us.

5. DO NOT plug the charger into an incorrect voltage source outlet. For correct voltage specification refer to the wall plug label.
6. DO NOT use with voltage converters and plug adapters.
7. DO NOT force the charger plug into an electrical outlet.
8. DO NOT use the charger if the charger or its wire is damaged in any way.
9. DO NOT attach your toy to the charger when wet or when your hands are wet.
10. ALWAYS unplug your toy from the charger before cleaning (in accordance with these instructions).
11. ALWAYS ensure that your toy is dry before connecting it to the charger and plugging the charger into an electrical outlet.
12. ALWAYS connect the charger to a properly grounded electrical outlet.
13. DO NOT charge your toy outdoors.

---

14. DO NOT operate or charge your toy where aerosol products are being used, or where oxygen is being administered.

15. Whilst your toy is water resistant and is capable of safe use both in the bath or shower, it should not be submerged for prolonged periods of time and should be dried completely after such use.

16. DO NOT use your bullet in water of extreme temperature (hot or cold).

*To reduce the risk of electrocution, burns, fire, dangerous electric shock or injury:*

1. Use your toy only in accordance with these instruction manuals.
2. DO NOT use your toy with accessories that are not recommended by Je Joue.
3. DO NOT attempt to dismantle or otherwise tamper with your toy, its charger or any of its components. Doing so may result in injury and invalidate your warranty.

---

4. DO NOT use the charger if the main cord or power supply is damaged, or if your toy is not functioning properly.

5. NEVER operate your toy if it or any of its components have been dropped, damaged, or are not working in any way (if you encounter any problems, please contact us and return the product for examination and repair).

6. DO NOT dispose of your toy or any of its components in a fire.

7. Keep your toy and the charger cord away from heated surfaces.

8. The charging connectors on your bullet are exposed and extra caution should therefore be taken when handling the product.

9. DO NOT use the adaptor/charger supplied with your toy with any other equipment.

10. DO NOT use other adaptors/chargers other than those supplied with your toy.

11. The chargers may become hot during use – take care

---

when handling, allow heat to disperse.

12. Your toy may get hot when charging. **DO NOT COVER.**

*To reduce the risk of electrocution, burns, fire, dangerous electric shock or injury during operation:*

1. **ALWAYS** operate your toy in accordance with these instructions.

2. Your toy is not a child's toy. Please keep away from children.

3. **NEVER** attempt to remove the fascia.

4. **NEVER** operate your bullet without a properly fitted and undamaged silicone cover or fascia.

5. **DO NOT** operate your toy if the outer layer of silicone has been damaged.

6. **DO NOT** drop your toy. This could cause irreparable damage and may invalidate the warranty.

7. **ALWAYS** attach the charger to your toy, then to the outlet. To disconnect, turn the socket off, remove the plug from the outlet, and then disconnect the charger from your toy.

---

8. **ALWAYS** dispose of your toy, the charger and used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap them in metal or aluminium foil. Wrap them in a newspaper before discarding. Je Joue recommends that you contact your local officials to determine proper battery disposal or redemption sites in your area.

9. **DO NOT** disassemble, crush or puncture the battery, or allow metal objects to contact the battery terminals.

10. **ALWAYS** unplug the charger from the electrical outlet when not in use.

11. **DO NOT** place your finger or any other part of your body between your toy and the charger while it is plugged into an electrical outlet.

12. **DO NOT** at any time place your toy or the charger in a dishwasher.

13. **DO NOT** operate your toy under a blanket or pillow or other protective layers to prevent the risk of excessive heating and possible fire, electric shock or injury to persons.



---

14. DO NOT leave your toy unattended on any surface while it is operating.

15. DO NOT use your toy for any other purpose other than is described in this safety manual.

#### MEDICAL CONSIDERATIONS

1. Your bullet serves exclusively for body massage and intimate stimulation of erogenous zones.

DO NOT use your toy for other uses.

2. CONSULT a doctor before using your toy if you have an implanted device, such as a pacemaker or if any surgical operations have been carried out on the relevant body parts.

3. It is important to note that pathogens could be transmitted between people by sharing your toy. To protect against the risk of transmitting pathogens, do not share your toy with other people.

4. DO NOT use your toy if you encounter any discomfort during or after use.

---

5. DO NOT use your toy as a substitute for medical attention.

6. DO NOT massage your toy on a single area for more than 15 minutes.

7. DO NOT massage your toy on any area of the body that is swollen, inflamed or erupted.

8. DO NOT massage your toy on the abdomen if it is painful or if you are pregnant.

9. DO NOT use your bullet on unexplained calf pain.

10. DO NOT massage your toy on the upper neck area near the base of the skull.

11. AVOID your toy from having contact with the eye or eyelid.

12. DO NOT use your toy on sensitive skin areas or in the presence of poor circulation.

13. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given

---

supervision or instruction concerning use of your toy by a person responsible for their safety.

- Always clean your toy after use to reduce the risk of infections.

- Your toy is not intended as a medical appliance.

*If you have concerns regarding your health, consult your doctor before using this product.*