

WARNING SIGN


1615-080, 1615-081, 1615-082

Stand-Alone Auto Spikes Spanish

The warning sign required for the 1603 barrier gate operator with the auto spike system or the stand-alone traffic spike models. The warning sign has a light sensor for automatic dusk to dawn illumination and a manual On-Auto/Off switch.



Installation

Light Switch

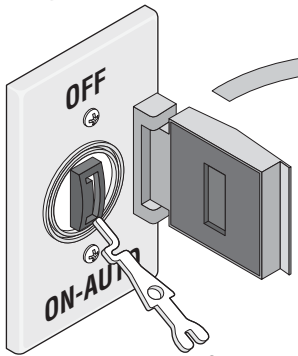

Insert Light Switch Key

Light Sensor

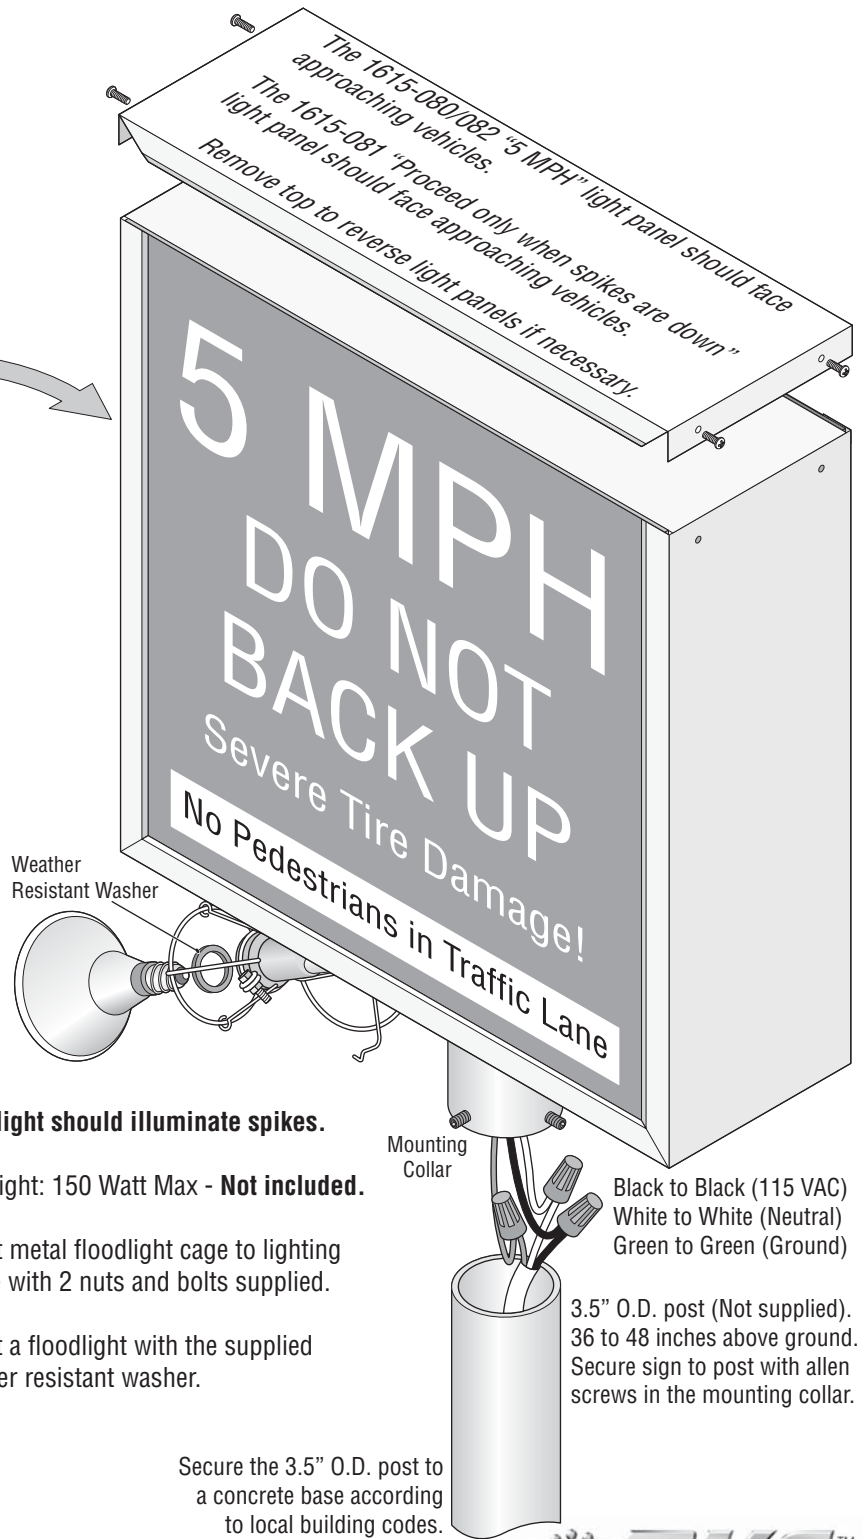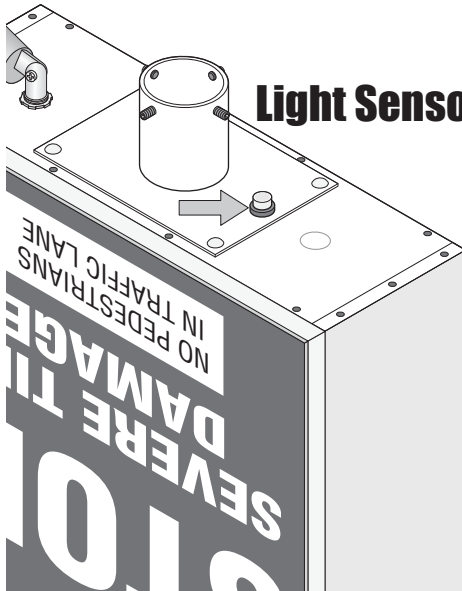

Floodlight should illuminate spikes.

Floodlight: 150 Watt Max - **Not included.**

Mount metal floodlight cage to lighting fixture with 2 nuts and bolts supplied.

Mount a floodlight with the supplied weather resistant washer.

Mounting Collar

Black to Black (115 VAC)
White to White (Neutral)
Green to Green (Ground)

3.5" O.D. post (Not supplied).
36 to 48 inches above ground.
Secure sign to post with allen screws in the mounting collar.

Secure the 3.5" O.D. post to a concrete base according to local building codes.

The first time the light switch is turned ON-AUTO (during the daylight), lights will stay lit for about 1 minute then turn off (Auto-mode).

Test the Auto-Mode

During the daylight, cover the light sensor with black electrical tape. Lights will turn on automatically in 3-5 minutes.

When the tape is removed, lights will turn off automatically in 3-5 minutes.