



INSTALLATION & OWNER'S MANUAL

THE EAGLE POWER I ◊ BATTERY BACK UP



PHONE (818) 764-6690 / TOLL FREE (800) 708-8848



PRE INSTALLATION INSTRUCTIONS



CAUTION!

BEFORE PROCEEDING WITH INSTALLATION READ THIS MANUAL THOROUGHLY AND CAREFULLY FOLLOW ALL THE OPERATION INSTRUCTIONS.



CAUTION!

USE ONE POWER I BATTERY BACK-UP SYSTEM PER EACH GATE OPERATOR. DO NOT ATTEMPT TO CONNECT MORE THAN ONE OPERATOR PER POWER I SYSTEM.

The Eagle-Power I Battery Back up is designed to provide back up power to a gate operator when the main AC supply voltage is interrupted or disconnected. There are two operations to the Eagle-Power I. First, (and recommended) when experiencing a power failure the back-up system not only supplies continuous power to run the gate operator, but will supply all of the the AC accessories (i.e. Loop Detectors, MAG lock, Photo Eyes and Edge Sensors) with all the power required to keep their full functions uninterrupted. Secondly, in the occurrence of power failure the gate can be opened by the Power I "hold open" relay and left open until power is restored. However, with the availability of continuous power available to the operator, this would not be necessary unless desired.

Using the Power I battery back up system with its 115V continuous power, enables the gate operator and all of its safety features to continue to be UL 325 / 991 compliant.

IMPORTANT: THE PHONE SYSTEM TRANSFORMER SHOULD BE INSTALLED DIRECTLY TO THE OPERATOR OUTLETS AND NOT TO THE EAGLE POWER I UNIT.

IMPORTANT: MONTHLY TESTS MUST BE PERFORMED ON BATTERY.

WARNING - HIGH VOLTAGE

ONLY A QUALIFIED TECHNICIAN SHOULD SERVICE THIS GATE OPERATOR

BATTERY TEST LOG

BATTERY TEST DATES		OPERATOR SERVICES DATES	
/ /	/ /	/ /	/ /
/ /	/ /	/ /	/ /
/ /	/ /	/ /	/ /
/ /	/ /	/ /	/ /
/ /	/ /	/ /	/ /
/ /	/ /	/ /	/ /

THE EAGLE POWER I INFORMATION & WARNINGS



The following items are included with the POWER I:

- (A) Power I Control Box
- (B) 2 - 35 AH Batteries
- (C) 1 - Relay Output
- (D) 2 - AC Power In and Power Out Wire Connections
- (E) 1 - 3 AMP Battery Charger
- (F) 1 - 12VDC Output
- (G) 1 - Instruction Manual

Power I Approximate Dimensions: 12 3/8" (h) x 17 1/2" (w) x 11 1/2" (d) - 85 lbs
(SEE PAGE #6 FOR FURTHER MEASUREMENTS)

The Eagle-Power I is a indoor & outdoor unit



CAUTION!

THE POWER I IS DESIGNED TO PROVIDE POWER TO A GATE OPERATOR IN CASE OF A POWER FAILURE OR THE POWER IS SHUT OFF. THE OPERATOR CAN START UNEXPECTEDLY WHEN THE AC POWER IS NOT SUPPLIED. PRIOR TO THE SERVICING OF GATE OPERATOR, BE SURE TO DISCONNECT THE BATTERY PACK OR TURN THE POWER OFF



CAUTION!

THE POWER I PRODUCES LETHAL VOLTAGES. THE BATTERY CAN CARRY HAZARDOUS CURRENTS. THE ASPS SHOULD BE INSTALLED BY A QUALIFIED TECHNICIAN.



CAUTION!

DO NOT SHORT THE BATTERY TERMINALS!

INSTALLATION OF THE EAGLE POWER-I



EAGLE POWER-I

Eagle Operator Gate Size Cycles Per 12 Hour Period Cycles Per 12 Hour Period With Extra Battery *

EAGLE POWER I ● E-POWER I	Eagle Operator	Gate Size	Cycles Per 12 Hour Period	Cycles Per 12 Hour Period With Extra Battery *
	Eagle-2000	10'	120**	240
	Eagle-2000	15'	80**	160
	Eagle-2000	20'	50**	100
	Eagle-2000-DM	10'	120**	240
	Eagle-2000-DM	15'	80**	160
	Eagle-2000-DM	20'	50**	100
	Eagle-1000	10'	140**	280
	Eagle-1000	15'	100**	200
	Eagle-1000	20'	70**	150
	Eagle-200		100**	200
	Eagle-200-DM		100**	200
	Eagle-100		120**	240

* An extra 70AH battery comes with separate mounting box and cables - Weight: 65 lbs

** All ratings are for operators (including The Diamond Control Board) and three of the following accessories: Loop Detector, Receiver, MAG Lock, Phone System and Electric Eye. Additional accessories will reduce the amount of cycles. Testing was only performed on the above specified Eagle Operators. All cycle estimates are based on properly installed gates and operators.

INSTALLATION OF THE EAGLE POWER I



CONNECTING THE AC LINE VOLTAGE:

Electrically, the Power I is wired in series with the incoming AC supply from the breaker box to the operator. The connector labeled "AC In" is connected to the main AC supply. The "AC Out" is connected to the operator.

Connect the incoming AC line to the **AC In** as follows:

L - AC Line In (Live): Black
N - AC neutral (Common): White
G - AC Ground (Earth): Green

Connect the outgoing AC line to the **AC Out** as follows:

L - AC Line Out: Black
N - AC neutral: White
G - AC Ground: Green

Refer to the installation manual provided with operator for the proper connections to the operator

APPLYING THE POWER AND CONNECTING THE SYSTEM RELAY

With the power to the operator and breaker box turned off and all of the AC line connections are complete, install the provided relay. After 5 to 10 seconds the green inverter light will turn on. Then run the operator with the main breaker off to test the power I. When testing is completed, turn on the breaker and the green inverter light will go off, then charger green or yellow light will go on.

FOR HOLD OPEN APPLICATION


Connect the two orange terminals to the "exit open" on the operator. Using this connection will immediately open the gate upon power failure. Gate operator will resume normal operation when power is resumed.

IMPORTANT!


Eagle recommends surge protection be installed on the incoming 110 AC Line to the battery back-up unit.



INSIDE OF THE EAGLE POWER I

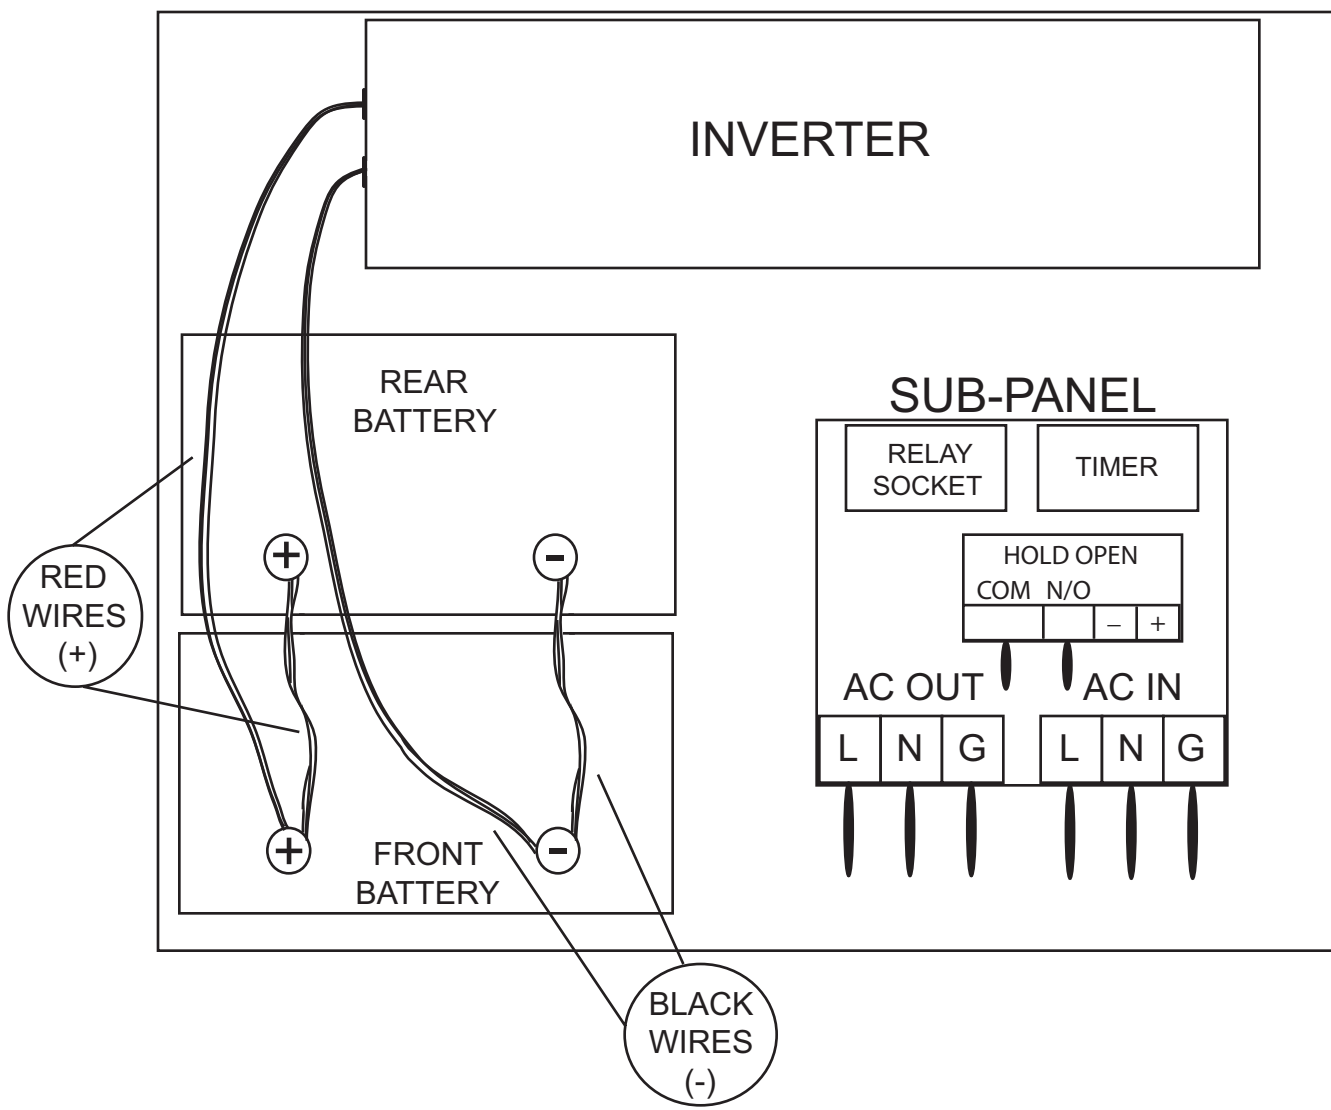

MOUNTING THE EAGLE POWER I

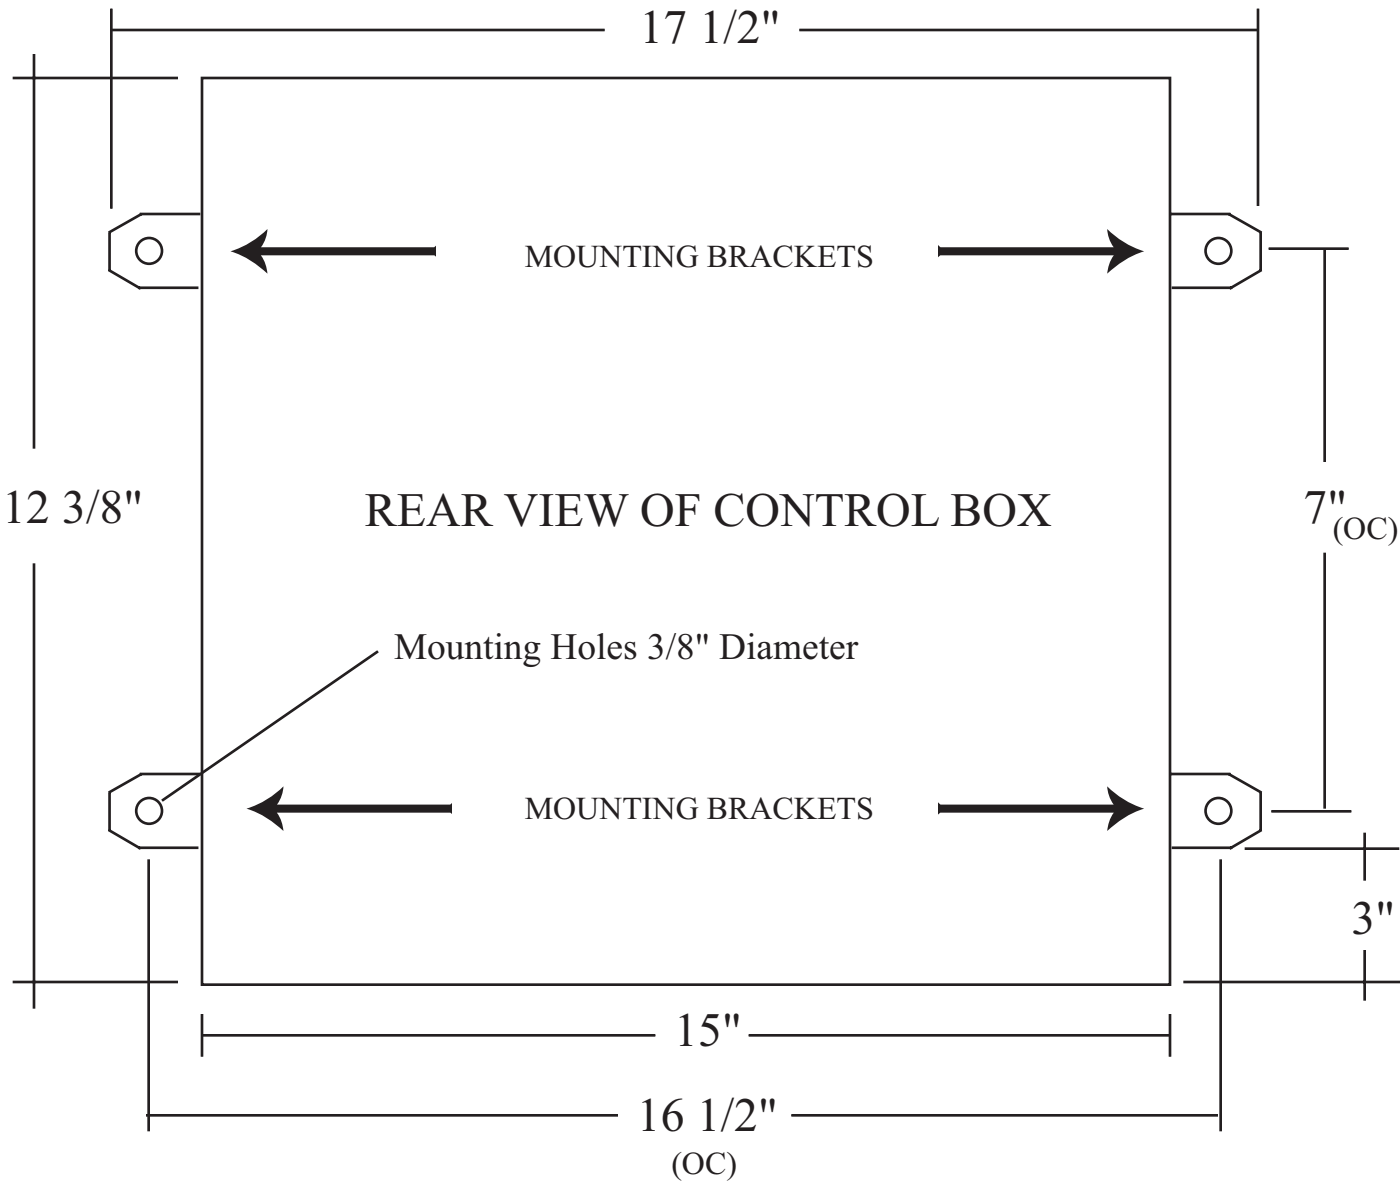

(Drawing N.T.S.)



SPECIFICATIONS & WARRANTY

TECHNICAL SPECIFICATIONS

INPUT VOLTAGE:	105 - 125 VAC
BATTERY:	12VDC / 70AH
RECHARGE TIME:	8 HOURS
OUTPUT VOLTAGE:	115 VAC
OUTPUT FREQUENCY:	60 Hz
OUTPUT CURRANT:	5 AMPS
SURGE CURRANT:	9 AMPS
AC OUTPUT POWER:	800 WATTS
SURGE POWER:	1600 WATTS
RELAY OUTPUTS:	2 AMPS



CAUTION!

DO NOT EXCEED THE
OUTPUT CAPACITY
OF THE POWER I.
CONNECTING A
MOTOR LOAD LARGER
THAN RECOMMENDED
WILL DAMAGE THE
POWER I AND VOID
THE WARRANTY.

MANUFACTURER'S LIMITED WARRANTY

Eagle Access Control Systems, Inc. warrants its Power I to be free from defect in material and workmanship for a period of one (1) year from the date of purchase for single family home or multi-family and commercial use. To obtain service contact your dealer.

To obtain service under this warranty the buyer must obtain authorization instructions for the return of any goods from Eagle before returning the goods. The goods must be returned with complete identification, with copy of proof-of-purchase, freight prepaid and in accordance with Eagle's instructions or they will not be accepted. In no event will Eagle be responsible for goods returned without proper authorization or identification.

Goods returned to Eagle for warranty repair within the warranty period, which upon receipt by Eagle are confirmed to be defective and covered by this limited warranty, will be repaired or replaced at Eagle's sole option, at no cost and returned prepaid. Defective parts will be repaired or replaced with new or factory rebuilt parts Eagle's sole option.

This limited warranty does not cover non-defect damage, damage caused by unreasonable use, damage caused by improper installation or care, vandalism, or lightning, fire or excessive heat or other acts of God (including, but not limited to misuse, abuse or alterations, failure to provide reasonable and necessary maintenance), labor charges for dismantling or reinstalling a repaired or replaced unit, or replacement batteries.

These warranties are in lieu of all other warranties, either expressed or implied. All implied warranties of merchantability and/or a particular purpose are hereby disclaimed and excluded. Under no circumstances shall Eagle be liable for consequential, incidental or special damages arising in connection with the use or inability to use this product. In no event shall Eagle's liability for breach of warranty, breach of contract, negligence or strict liability exceed the cost of this product hereby. No person is authorized to assume for Eagle any other liability in connection with the sale of this product.

For Further Information: Phone (800) 708-8848 / Fax (818) 764-6869