

ENFORCER®

Outdoor Stand-Alone Weatherproof Keypads

Quick User Programming Guide



(SK-2323-SDQ shown)



(SK-1323-SPQ shown)

Model Number	2 Relay Outputs	Backlit Keys	Proximity Reader
--------------	-----------------	--------------	------------------

Mullion-Style Keypads

SK-2323-SDQ	✓	✓	
SK-2323-SPQ	✓	✓	✓

Sealed-Environment Keypads

SK-1323-SDQ	✓	✓	
SK-1323-SPQ	✓	✓	✓

For complete programming instructions, please see page 10 of the User Manual.

Programming Tips

- Program new Master Code immediately.
- Program the Output #1 access mode immediately, or the keypad will only accept user cards.
- Take note of the keypad status LEDs—
 - **Right LED Green:** Standby
 - **Left LED Solid Red/Right LED Solid Orange:** Programming Mode
 - **Right LED Flashing Orange:** Awaiting code/card entry
- If unsure of which mode the keypad is in, press **#** until the right LED is green. The keypad is now in the standby mode. Enter the master code twice to return to Programming Mode.
- For complete programming instructions, see page 10 of the User Manual.

Programming the Master Code

1. Enter Programming Mode by entering the Master Code twice.
(Default Master Code is **12345**)
2. Enter ***3**.
3. Enter the new 5-digit Master Code twice.

Example: If the desired new Master Code is **54321**, enter:

5 4 3 2 1 5 4 3 2 1

4. Exit Programming Mode by pressing **#**.

Setting the Output #1 Access Mode*

DEFAULT: User card only. To use codes, you **MUST** set mode to **01** or **02**.

1. Enter Programming Mode by entering the Master Code twice.
2. Enter ***0**.
3. Enter one of the following:

00 **User card ONLY (DEFAULT)**

01 **Either user card OR user code**

02 **User card AND user code**

Note: The Output #1 Access Mode must be programmed in order for the SK-2323-SPQ and SK-1323-SPQ to accept user codes.

4. Exit Programming Mode by pressing **#**.

*SK-2323-SPQ and SK-1323-SPQ only.

Programming Output #1

Each Output #1 user can be programmed to have a user code and a user card.*

1.1 User Code Only

1. Enter Programming Mode by entering the Master Code twice.
 2. Enter a user ID number. (0 0 0 to 9 9 9)
 3. If the left LED is red, previous user data exists. Clear it by entering * * .
The keypad will beep in confirmation and the left LED will turn green.
 4. Enter a new 5-digit user code.
 5. To program the next user, repeat from step 2 in section 1.1, 1.2, or 1.3.
 6. Exit Programming Mode by pressing # .
-

1.2 User Card Only*

1. Enter Programming Mode by entering the Master Code twice.
 2. Enter a user ID number. (0 0 0 to 9 9 9)
 3. If the left LED is red, previous user data exists. Clear it by entering * * .
The keypad will beep in confirmation and the left LED will turn green.
 4. Swipe a new user card.
 5. Return to Programming Mode by pressing # .
 6. To program the next user, repeat from step 2 in section 1.1, 1.2, or 1.3.
 7. Exit Programming Mode by pressing # again.
-

1.3 User Card and Code*

1. Enter Programming Mode by entering the Master Code twice.
 2. Enter a user ID number. (0 0 0 to 9 9 9)
 3. If the left LED is red, previous user data exists. Clear it by entering * * .
The keypad will beep in confirmation and the left LED will turn green.
 4. Swipe a new user card.
 5. Enter a new 5-digit user code.
 6. To program the next user, repeat from step 2 in section 1.1, 1.2, or 1.3.
 7. Exit Programming Mode by pressing # .
-

*SK-2323-SPQ and SK-1323-SPQ only.

Programming Output #2

Each Output #2 user may only have a user code OR a user card programmed.

2.1 Programming an Output #2 User Code

1. Enter Programming Mode by entering the Master Code twice.
 2. Enter ***4**.
 3. Enter a user ID number. (**00** to **09**)
 4. If the left LED is red, previous user data exists. Clear it by entering ****** .
The keypad will beep in confirmation and the left LED will turn green.
 5. Enter a new 5-digit user code.
 6. To program the next user, repeat from step 3 in section 2.1 or 2.2.
 7. Return to Programming Mode by pressing **#** .
 8. Exit Programming Mode by pressing **#** again .
-

2.2 Programming an Output #2 User Card*

1. Enter Programming Mode by entering the Master Code twice.
2. Enter ***4**.
3. Enter a user ID number. (**00** to **09**)
4. If the left LED is red, previous user data exists. Clear it by entering ****** .
The keypad will beep in confirmation and the left LED will turn green.
5. Swipe a new user card.
6. To program the next user, repeat from step 3 in section 2.1 or 2.2.
7. Return to Programming Mode by pressing **#** .
8. Exit Programming Mode by pressing **#** again.

*SK-2323-SPQ and SK-1323-SPQ only.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2010 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

Website: www.seco-larm.com

E-mail: info@seco-larm.com

 PICCN2

SK-x323-SxQ Addendum_1008.docx