



www.whytebikes.co.uk



**C-7 Men's & Women's: Ridgeway, Malvern, Caledonian & Fairfield.
LC-7 Women's: Strawberry Hill**

**R-7 Men's: Portobello, Cambridge, Stirling, Whitechapel & Shoreditch
R-7 Women's: Victoria, Pimlico & Carnaby**

RC-7: Montpellier

**RD-7: Somerset, Devon, Sussex, Dorset & Suffolk
RD-7C: Cornwall**

RR-7C: Stowe Rival & Stowe Ultegra

CX: Saxon Cross Team & Saxon Cross

**Supplementary Service Manual
2015 Edition 1**

www.whytebikes.co.uk



DESIGNED IN THE U.K.

Table of Contents

1.0 Introduction

2.0 Geometry:

- 2.01: Ridgeway, Malvern & Caledonian
- 2.02: Ridgeway Ladies, Malvern Ladies & Caledonian Ladies
- 2.03: Fairfield
- 2.04: Fairfield Ladies
- 2.05: Strawberry Hill Ladies
- 2.06: Portobello, Cambridge, Stirling, Whitechapel & Shoreditch
- 2.07: Victoria, Pimlico & Carnaby Ladies
- 2.08: Montpellier
- 2.09: Somerset, Devon, Sussex, Dorset & Suffolk
- 2.10: Cornwall Carbon
- 2.11: Stowe Rival & Stowe Ultegra
- 2.12: Saxon Cross Team & Saxon Cross

3.0 Preparations for riding:

- 3.1 Making Adjustments
- 3.2 Set up of Fork

4.0 Safety

5.0 Lubrication:

- 5.1 General Lubrication

6.0 Torque Settings

7.0 Notes.

WHYTE Service Manual

1.0: INTRODUCTION

Thanks for choosing to purchase this Whyte product. We hope you will enjoy all the benefits its advanced design and engineering will bring to your riding experience.

This manual will guide you through the set-up, safety and maintenance procedures that are specific to your Whyte bike. For other more general information, we strongly advise that you also read thoroughly the General Instruction Manual that is also supplied with your new bike.

Also, please note that the specification of all the components that are fitted to your bike as standard may be obtained from the Whyte Bikes Brochure or alternatively from the Whyte Bikes website **www.whytebikes.co.uk**

Please remember, if you are in any doubt about your ability to safely service or repair your Whyte bike, do not ride it and instead arrange for a professional bicycle mechanic at your local Whyte dealer to do the job correctly.


Bundled with this manual, are the respective manufacturers instructions and manuals for the branded parts that are fitted to your Whyte bike. Please take time to study all the relevant instruction manuals to ensure you have a continually safe and well set-up bike before every ride, and to help you build up a relationship of knowledge between you and your Whyte Dealer.

Happy and safe riding,

Whyte design team. April 2014.

WHYTE Service Manual

2.0: GEOMETRY

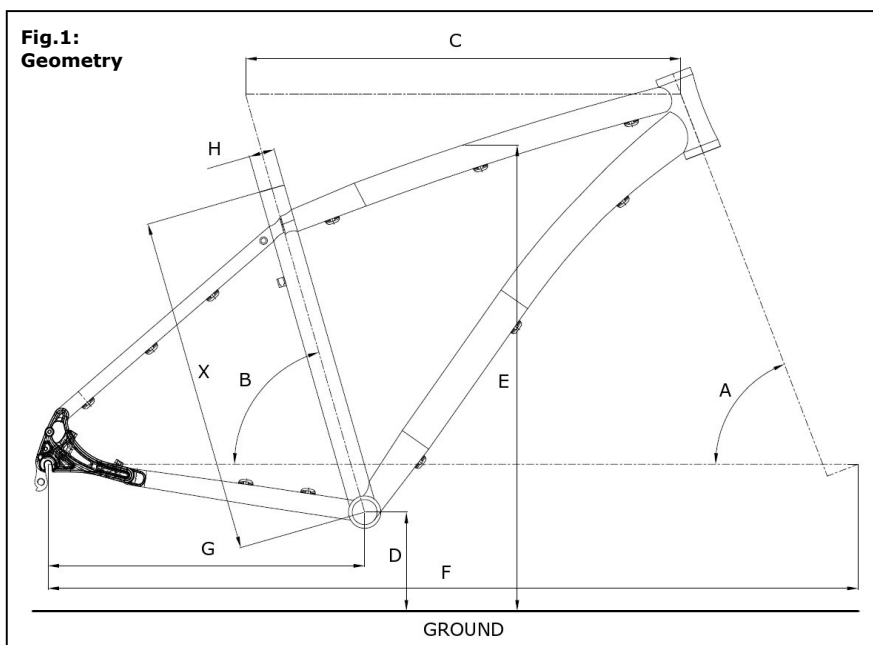

2.01: WHYTE Ridgeway, Malvern & Caledonian

Frame Size	X	XX Small	Extra Small	Small	Medium	Large	Extra Large
Head Angle	A	69.0°	69.0°	69.0°	69.0°	69.0°	69.0°
Seat Angle	B	74.5°	74.5°	74.0°	73.5°	73.0°	73.0°
Top Tube	C	567.1mm	567.1mm	589.4mm	614.2mm	629.2mm	643.5mm
BB Height*	D	288mm	288mm	288mm	288mm	288mm	288mm
Stand Over	E	763mm	775mm	784mm	815mm	842mm	864mm
Wheel Base	F	1083.1mm	1083.1mm	1100.6mm	1120.5mm	1130.6mm	1145.5mm
Chain Stay	G	435mm	435mm	435mm	435mm	435mm	435mm
Seat Post Ø	H	30.9mm	30.9mm	30.9mm	30.9mm	30.9mm	30.9mm

Note:

Geometry shown here is 'Showroom' i.e. without rider aboard the bicycle. 'With Sag' geometry is with rider after correct sag is set at the front. Please refer to suspension set up for information on how to achieve the correct sag of the fork.

*BB height with Ø706mm tyres fitted (35mm / 37-622)



WHYTE Service Manual

2.02: WHYTE Ridgeway Ladies, Malvern Ladies & Caledonian Ladies

Frame Size	X	Small	Medium	Large
Head Angle	A	68.0°	69.0°	69.0°
Seat Angle	B	74.5°	74.0°	73.5°
Top Tube	C	556.6mm	584.4mm	609.2mm
BB Height*	D	288mm	288mm	288mm
Stand Over	E	728mm	747mm	767mm
Wheel Base	F	1072.8mm	1085.4mm	1105.4mm
Chain Stay	G	435mm	435mm	435mm
Seat Post Ø	H	30.9mm	30.9mm	30.9mm

Note:

Geometry shown here is 'Showroom' i.e. without rider aboard the bicycle. 'With Sag' geometry is with rider after correct sag is set at the front. Please refer to suspension set up for information on how to achieve the correct sag of the fork.

*BB height with Ø706mm tyres fitted (35mm / 37-622)

2.03: WHYTE Fairfield

Frame Size	X	X X Small	Extra Small	Small	Medium	Large
Head Angle	A	69.0°	69.0°	69.0°	69.0°	69.0°
Seat Angle	B	74.5°	74.5°	74.0°	73.5°	73.5°
Top Tube	C	536.8mm	546.7mm	563.0mm	586.9mm	605.2mm
BB Height*	D	288mm	288mm	288mm	288mm	288mm
Stand Over	E	732mm	747mm	773mm	798mm	838mm
Wheel Base	F	1056.0mm	1066.0mm	1079.8mm	1099.9mm	1119.8mm
Chain Stay	G	445mm	445mm	445mm	445mm	445mm
Seat Post Ø	H	30.9mm	30.9mm	30.9mm	30.9mm	30.9mm

Note: * BB height with Ø716mm tyres fitted (42-622)

WHYTE Service Manual

2.04: WHYTE Fairfield Ladies

Frame Size	X	Small	Medium	Large
Head Angle	A	69.0°	69.0°	69.0°
Seat Angle	B	74.5°	74.0°	73.5°
Top Tube	C	546.7mm	563.0mm	586.9mm
BB Height*	D	288mm	288mm	288mm
Stand Over	E	712mm	735mm	761mm
Wheel Base	F	1066.0mm	1079.8mm	1099.9mm
Chain Stay	G	445mm	445mm	445mm
Seat Post Ø	H	30.9mm	30.9mm	30.9mm

Note:

*BB height with Ø683mm tyres fitted (28mm / 28-622)

2.05: WHYTE Strawberry Hill

Frame Size	X	Small	Medium	Large
Head Angle	A	68.0°	69.0°	69.0°
Seat Angle	B	74.5°	74.0°	73.5°
Top Tube	C	537.3mm	563.0mm	586.8mm
BB Height*	D	283mm	283mm	283mm
Stand Over	E	658mm	681mm	672mm
Wheel Base	F	1055.9mm	1069.7mm	1089.7mm
Chain Stay	G	435mm	435mm	435mm
Seat Post Ø	H	30.9mm	30.9mm	30.9mm

Note:

Geometry shown here is 'Showroom' i.e. without rider aboard the bicycle. 'With Sag' geometry is with rider after correct sag is set at the front. Please refer to suspension set up for information on how to achieve the correct sag of the fork.

*BB height with Ø706mm tyres fitted (35mm / 37-622)

WHYTE Service Manual

2.06: WHYTE Portobello, Cambridge, Stirling, Whitechapel & Shoreditch

Frame Size	X	Small	Medium	Large	Extra Large	XX Large
Head Angle	A	69.5°	70.0°	70.0°	70.0°	70.0°
Seat Angle	B	74.0°	73.5°	73.0°	73.0°	72.5°
Top Tube	C	570.0mm	595.3mm	614.4mm	628.3mm	643.0mm
BB Height*	D	272mm	272mm	272mm	272mm	272mm
Stand Over	E	723mm	743mm	779mm	805mm	829mm
Wheel Base	F	1052.2mm	1069.1mm	1084.1mm	1099.1mm	1114.2mm
Chain Stay	G	420mm	420mm	420mm	420mm	425mm
Seat Post Ø	H	27.2mm	27.2mm	27.2mm	27.2mm	27.2mm

Note: * BB height with Ø683mm tyres fitted (28-622)

2.07: WHYTE Victoria, Pimlico & Carnaby Ladies

Frame Size	X	Small	Medium	Large
Head Angle	A	69.0°	69.5°	70.0°
Seat Angle	B	74.5°	73.5°	73.0°
Top Tube	C	549.0mm	573.9mm	599.6mm
BB Height*	D	272mm	272mm	272mm
Stand Over	E	708mm	738mm	763mm
Wheel Base	F	1040.2mm	1052.2mm	1069.2mm
Chain Stay	G	420mm	420mm	420mm
Seat Post Ø	H	27.2mm	27.2mm	27.2mm

Note: * BB height with Ø683mm tyres fitted (28-622)

WHYTE Service Manual

2.08: WHYTE Montpellier

Frame Size	X	Medium	Large	Extra Large
Head Angle	A	70.0°	70.0°	70.0°
Seat Angle	B	73.5°	73.0°	73.0°
Top Tube	C	597.0mm	616.1mm	623.3mm
BB Height*	D	272mm	272mm	272mm
Stand Over	E	744mm	776mm	804mm
Wheel Base	F	1069.1mm	1084.1mm	1099.1mm
Chain Stay	G	420mm	420mm	420mm
Seat Post Ø	H	27.2mm	27.2mm	27.2mm

Note: * BB height with Ø683mm tyres fitted (28-622)

2.09: WHYTE Somerset, Devon, Sussex, Dorset & Suffolk

Frame Size	X	48cm	50cm	52cm	54cm	56cm	58cm
Head Angle	A	72.0°	72.0°	72.5°	73.0°	73.0°	73.0°
Seat Angle	B	75.0°	74.5°	74.0°	73.5°	73.0°	73.0°
Top Tube	C	510.0mm	525.0mm	540.0mm	555.0mm	570.0mm	585.0mm
BB Height*	D	279mm	279mm	279mm	279mm	279mm	279mm
Stand Over	E	753mm	771mm	789mm	806mm	822mm	838mm
Wheel Base	F	982.0mm	992.9mm	998.4mm	1003.3mm	1012.8mm	1027.8mm
Chain Stay	G	425mm	425mm	425mm	425mm	425mm	425mm
Seat Post Ø	H	27.2mm	27.2mm	27.2mm	27.2mm	27.2mm	27.2mm

Note: * BB height with Ø700mm tyres fitted (33-622)



WHYTE Service Manual

2.10: WHYTE Cornwall Carbon

Frame Size	X	48cm	51cm	54cm	57cm	60cm
Head Angle	A	70.5°	71.3°	71.8°	71.8°	71.8°
Seat Angle	B	72.5°	72.3°	72.3°	71.8°	71.8°
Top Tube	C	530.5mm	543.4mm	553.4mm	568.7mm	593.7mm
BB Height*	D	283.3mm	280.3mm	280.3mm	282.7mm	282.4mm
Stand Over	E	742mm	760mm	791mm	819mm	845mm
Wheel Base	F	1003.8mm	1006.0mm	1011.8mm	1022.7mm	1047.7mm
Chain Stay	G	430mm	430mm	430mm	430mm	430mm
Seat Post Ø	H	31.6mm	31.6mm	31.6mm	31.6mm	31.6mm

Note: * BB height with Ø683mm tyres fitted (28-622)

2.11: WHYTE Stowe Rival & Stowe Ultegra

Frame Size	X	48cm	51cm	54cm	57cm	60cm
Head Angle	A	71.3°	72.1°	72.6°	72.6°	72.6°
Seat Angle	B	73.3°	73.1°	73.1°	72.6°	72.6°
Top Tube	C	515.6mm	529.9mm	538.1mm	553.8mm	579.0mm
BB Height*	D	277.8mm	274.2mm	274.2mm	276.7mm	276.6mm
Stand Over	E	734mm	753mm	786mm	812mm	840mm
Wheel Base	F	999.0mm	1001.3mm	1007.2mm	1018.1mm	1043.1mm
Chain Stay	G	430mm	430mm	430mm	430mm	430mm
Seat Post Ø	H	31.6mm	31.6mm	31.6mm	31.6mm	31.6mm

Note: * BB height with Ø683mm tyres fitted (28-622)

WHYTE Service Manual

2.12: WHYTE Saxon Cross Team & Saxon Cross

Frame Size	X	50cm	52cm	54cm	56cm	58cm
Head Angle	A	70.0°	70.0°	70.0°	70.0°	69.3°
Seat Angle	B	74.5°	74.0°	73.5°	73.0°	73.0°
Top Tube	C	546.2mm	560.2mm	574.5mm	589.2mm	598.3mm
BB Height*	D	279mm	279mm	279mm	279mm	279mm
Stand Over	E	783mm	799mm	813mm	829mm	844mm
Wheel Base	F	1034.9mm	1049.9mm	1059.9mm	1075.0mm	1085.0mm
Chain Stay	G	425mm	430mm	430mm	435mm	435mm
Seat Post Ø	H	27.2mm	27.2mm	27.2mm	27.2mm	27.2mm

Note: * BB height with Ø697mm tyres fitted (33-622)

WHYTE Service Manual

3.0: PREPARATIONS FOR RIDING

3.1: MAKING ADJUSTMENTS

Please refer to the specific component manufacturers manual or published technical information about adjusting the components on your Whyte bike. Instructions may be downloaded from the relevant manufacturer's internet site, as shown in the table to the right.

If you are uncertain in any way, about making adjustments to any components on you Whyte bike, then **DO NOT RIDE YOUR BIKE**. Contact your Whyte dealer who will be able to advise you on how to go about setting up you Whyte for riding, and or making adjustments to the components fitted to your Whyte.

DT	www.dtswiss.com
Easton	www.eastonbike.com
Ergon	www.ergon-bike.com
FSA	www.fullspeedahead.com
Jagwire	www.jagwireusa.com
Maxxis	www.maxxis.com
Selle Royal	www.selleroyal.com
Shimano	www.shimano.com
SRAM	www.sram.com
Tektro	www.tekro.com
VP	www.vpcomponents.com
WTB	www.wtb.com

3.2: SET UP OF FORK

Tools Required: *Good Quality Shock Pump.*
 Small Ruler

The front fork will be pre-set with the standard settings when you buy your Whyte. Before riding, you will need to adjust the Sag setting on the fork. This is to ensure the forks are set-up correctly for your own body weight, so the fork will perform as intended.

Fork Travel	Sag (15% - Firm)	Sag (25% - Plush)
60mm	9mm	15mm

To set Sag on a front fork, you need to measure the amount the fork compresses when you sit on the bike in the normal riding position. We recommend for the best performance to run approximately (20%) Sag on the front fork.

Sag on and air sprung fork is controlled by adjusting the Air Spring pressure. We recommend you refer to your forks owners manual or relevant website for detailed information about your fork set up and performance relating to all controls and features of your fork.

Rebound Damping adjustment:

WHYTE Service Manual

This adjustment fine-tunes the speed at which the wheel returns to its normal ride height after hitting a bump. To demonstrate the effect of this function, turn the rebound adjuster to its slowest setting. Press down on the handlebars to compress the forks, then release the load. The suspension recovers very slowly to its original position.

Repeat the above with the adjuster turned to the fastest setting and the difference will be seen immediately the load is released. We recommend the optimum setting is to adjust the re-bounce damping to be as slow as possible, but not so slow that the normal ride height is not recovered. On very rough terrain, if the bike becomes progressively lower as more bumps are hit then the re-bounce damping is set too slow. On the other hand if the bike feels choppy and not plush then the re-bounce damping is too fast. A bit of trial and error is needed to get the exact setting. **WARNING.** Only make adjustments to your fork while stationary, and not when riding.

4.0: SAFETY

IMPORTANT: The following are intended to be advisory notes on the safe use of your Whyte bike. You should also read thoroughly the General Instruction Manual also supplied with your new bike. If at any stage you are uncertain about the safety or safe operation of the bike as a whole, or any specific component, then **DO NOT RIDE YOUR WHYTE** and instead please consult the specific component manufacturers instruction manual or your Whyte Dealer for advice.

Maximum Rider Weight Limit for this range of Whyte Bikes: 19 Stone/120kg



WARNING: As is the case with all mechanical components, the bicycle is subjected to wear and high stresses. Different materials and components may react to wear and stress fatigue in different ways. If the design life of a component has been exceeded, it may fail suddenly causing possible injury to the rider. Any form of crack, scratches and decolouring in highly stresses areas are showing that the component has exhausted its life time and has to be replaced. If you are in any doubt about one or more components on your Whyte **DO NOT RIDE YOUR BIKE.** Consult the specific component manufacturers literature, or take your bike to your local Whyte Dealer.



CAUTION: These bikes have disc brakes as standard equipment. It is NOT PERMITTED to convert the braking system to a rim brake type, since the frame has only been tested for disc brake use and also because the wheel rims are not suitable to be used as a braking surface. Making such a modification of components will also void the warranty.

WHYTE Service Manual

Designed for the following use:

The bicycles in the Whyte C-7, LC-7, R-7, RC-7 & RD-7 series' have all been designed, tested and comply with BS EN 14764 Standard, for typical road or path cycling use. They have not been designed or tested for mountain biking or for use in competition.

The bicycles in the Whyte CX series have all been designed, tested and comply with BS EN 14764 Standard, for typical road or path cycling use. Also for Cyclo-Cross competition (when fitted with appropriate off-road tyres). They have not been designed or tested for mountain biking use.

The bicycles in the Whyte RD-7C & RR-7C series' have all been designed, tested and comply with BS EN 14781 Standard, for typical road cycling use. They have not been designed or tested for use in competition.

5.0: LUBRICATION

5.1: GENERAL LUBRICATION

For the correct lubrication regime and maintenance of all parts on a Whyte bicycle, please refer to the specific component manufacturers detailed instructions bundled with this manual or for further information visit the specific manufacturers website.

6.0: TORQUE SETTINGS

IMPORTANT: For all torque settings, refer to the specific manufacturers information bundled with this manual, or alternatively, refer to the specific manufacturers website for further information.

7.0: NOTES

WHYTE Service Manual

NOTES (continued)



WHYTE
PERFORMANCE BY DESIGN

www.whytebikes.co.uk



DESIGNED IN THE U.K.