

Monitor Arm- Setting the monitor tilt tension

The monitor arm tilt tension can be set to match your monitor weight. Take the longest Allen wrench in the tool kit. Hold it near the cover over the tilt pivot near the monitor mount surface. The cover is magnetic and you can use the wrench to lift it out as shown in the image below. You can remove only the magnetic cover or both the magnetic cover and the surrounding aluminum cover in the next step.



Use the wrench to tighten the screw as required. Be sure to insert the wrench fully into the socket in the bolt head so the interface will not be damaged if you need to apply a lot of torque. you can adjust the tension so the pivot will not normally slip but you can still adjust he monitor manually if you need to.

