






Bench Fabric Replacement

Wood Plug Removal

Tools Required: Screw and Screwdriver

1. Insert a wood screw into the centre of the wood plug. The screw will hit the head of the screw under the wood plug.
2. Continuing to drive the screw in will cause the wood plug to pull out.
3. Remove the plug from the screw to re-use the screw. Discard the damaged plug.

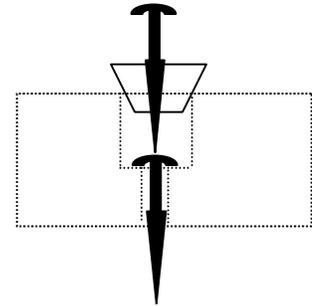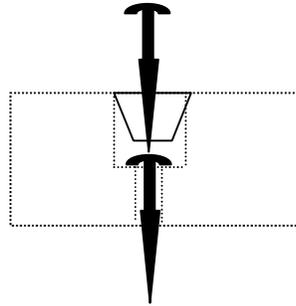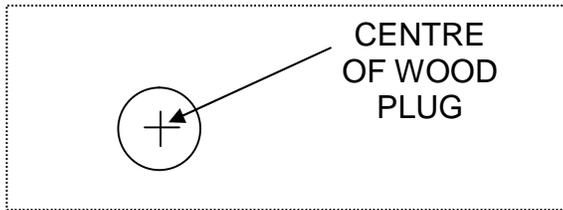

Upholstered Back Replacement Tools Required: #2 Robertson or Phillips Screwdriver, hammer

1. Remove the 4 wood plugs following the instructions above.
2. Note the position of the fabric relative to the back legs – fabric slightly above the wood leg.
3. Remove the 4 wood screws and the upholstered back.
4. Install the new upholstered back, placing in the same position as the original, centred front to back on the wood leg.
5. Install the new wood plugs, hammer gently until flush with the wood surface.

Upholstered Seat Replacement Tools Required: #2 Robertson or Phillips Screwdriver

1. Turn the item upside down.
2. Remove the 4 corner wood screws (plus centre screws on benches) and the upholstered seat. (Only remove screws that hold the seat)
3. Install the new seat, centred front to back (the wood base of the seat will be slightly inside both the front & the back rail).

Hinged Upholstered Seat Replacement Tools Required: #1 Robertson Screwdriver

1. Remove all but 2 of the screws on the seat hinge.
2. Mark the outline of the hinge and a few of the screw holes on the existing seat.
3. Remove the remaining screws.
4. Measure and transfer these marks to the new seat in order to position the seat correctly.
5. Position the new seat against the hinge and reinstall the screws.
6. Install the new safety strap (models 3104, 3105, 3106 and 3107 only)

