



Chair & Bench Fabric Replacement


Wood Plug Removal

Tools Required: Screw and Screwdriver

- 1. Insert a wood screw into the <u>centre</u> of the wood plug. The screw will hit the head of the screw under the wood plug.
- 2. Continuing to drive the screw in will cause the wood plug to pull out.
- 3. Remove the plug from the screw to re-use the screw. Discard the damaged plug.

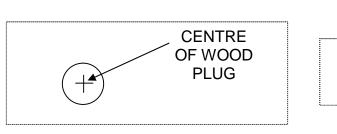

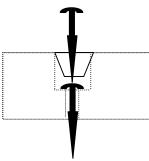

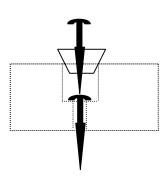

Upholstered Back Replacement

<u>Tools Required</u>: #2 Robertson or Phillips Screwdriver, hammer

- 1. Remove the 4 wood plugs following the instructions above above.
- 2. Note the position of the fabric relative to the back legs fabric slightly above the wood leg.
- 3. Remove the 4 wood screws and the upholstered back.
- 4. Install the new upholstered back, placing in the same position as the original, centred front to back on the wood leg.
- 5. Install the new wood plugs, hammer gently until flush with the wood surface.

Upholstered Seat Replacement

<u>Tools Required</u>: #2 Robertson or Phillips Screwdriver

- 1. Turn the item upside down.
- 2. Remove the 4 corner wood screws (plus centre screws on benches) and the upholstered seat. (Only remove screws that hold the seat)
- 3. Install the new seat, centred front to back (the wood base of the seat will be slightly inside both the front & the back rail.