

***fuse***

**Portable Bluetooth Speaker**



PLEASE READ BEFORE OPERATING THIS EQUIPMENT

[www.fuseaudio.com.au](http://www.fuseaudio.com.au).

## **IMPORTANT SAFETY INSTRUCTIONS**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

### **Water and Moisture**

The unit should not be used near water or wet space, such as a bathtub, washbowl, kitchen sink or swimming pool.

### **Ventilation**

The unit should be situated in a location or position which won't interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.

### **Heat**

The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

## **Power Charger**

The unit should be connected to a power charger (not included) only of the type described in the operating instruction or as marked on the appliance.

## **Cleaning**

The unit should be cleaned only as recommended. See the section «Care and Maintenance» of this manual for cleaning instructions. Object and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

## **Damage Requiring Service**

This unit should be serviced by qualified service personnel when:  
Objects have fallen into or liquid has been spilled into the enclosure.  
The unit has been exposed to rain.

The unit has been dropped or the enclosure damaged.

The unit exhibits a marked change in performance or does not operate normally.

## **Periods of Nonuse**

If the unit is to be left unused for an intended period of time, such as a week or longer, the power cord should be unplugged from the unit to prevent damage or corrosion.

## **Servicing**

The user should not attempt to service the unit beyond those methods described in the user's operating instructions.

Service methods not covered in the operating instructions should be referred to qualified service personnel.

### **CAUTION:**

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

### **WARNING:**

- ◆ Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- ◆ To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

## **CARE AND MAINTENANCE**

- ◆ Do not subject the unit to excessive force, shock, dust or extreme temperature.
- ◆ Do not tamper with the internal component of the unit.
- ◆ Clean the unit with a damp (never wet) cloth. Solvent or detergent should never be used.
- ◆ Avoid leaving your unit in hot, humid or dusty places.
- ◆ Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

- ◆ Always keep your finger dry and clear before touching all the buttons.
- ◆ Do not dispose of batteries in fire, batteries may explode or leak.

## **Controls :**

### **1. M Button**

- While unit is on press **M** to change the mode like FM, TF card, USB, Aux, Bluetooth

### **2. - Button**

In Bluetooth /TF card /USB mode:

- Long press this button to adjust volume down.
- Short press this button for previous track.

### **3. > Button**

- While unit is in Bluetooth /TF card /USB mode press > to play or pause the current track.
- In Bluetooth mode, when receiving an incoming call on your mobile phone, tap this button to answer the phone, press this button again or long press to end the call or ignore the incoming call.
- In FM mode, tap this button to search the radio stations. Tap this button again to stop searching.

### **4. + Button**

- In Bluetooth /TF card / USB mode:
- Long press to adjust volume up.
- Short press this button to next track.

## **5. Indicator (Red color)**

- Blue color = All modes
- Red color = Charging
- No Red color = Fully charged

## **BATTERY CHARGING INSTRUCTION**

This unit operates on a built-in Li-ion battery that can be recharged either using the USB port on your computer or from a USB power adaptor (not included) with a rated output of DC 5V 500mA and up.

Note : The Micro USB CHARGING JACK' located on this unit is only designed for charging the built-in Li-ion battery.

## **CHARGING THE BATTERY FOR FIRST TIME**

- 1.) Charge the built-in Li-ion battery a minimum of 2 hours prior to first use. Plug the unit into the USB port on your computer or into a USB power adaptor (not included) using the included USB cable.
- 2.) The battery charging indicator illuminates red while charging and turns off when the unit is fully charged.

## **RECHARGING THE INTERNAL BATTERY**

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery capacity is very low, the battery Indicator will rapidly flash in red to alert you to recharge the internal battery as soon as possible.

#### Notes:

1. Charging time will vary if you are listening to music while charging the internal battery. We recommend you switch off the speaker power during the charging process.
2. When the internal battery capacity is very low, the battery indicator will beep to alert you to recharge the internal battery as soon as possible.
3. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

### **Pairing (Linking) A Bluetooth Enabled Mobile Phone Or Other Bluetooth Enabled Device To The Speaker**

If the speaker has never been paired with a Bluetooth device before, you need to follow the pairing instructions below to link the speaker with your Bluetooth device.

1. When the speaker turns on, the Operating mode Indicator flashes in blue. The speaker is ready to pair (link) with your Bluetooth device.
2. Activate Bluetooth on the compatible device, and set it to search for compatible devices.
3. Select the speaker name: **Fuse Audio** from the list of found devices.

**Tips:** Only one playback unit can be connected to the speaker. If the speaker is already connected to another playback unit, the speaker will not appear in the BT selection list.

**If the speaker has ever been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the speaker with your Bluetooth device.**

1. After turning on the speaker, the speaker will search for the last paired device. The operating mode indicator will flash in blue. If the unit finds the paired Bluetooth device, a beep sound is heard and operating mode indicator will keep in blue and stop flashing.
2. After successfully pairing (linking), you can begin playing music from your Bluetooth device wirelessly to the speaker.
3. Press the + / - button on the speaker to adjust to the desired volume level.

### **Using The Speaker as a Handfree Bluetooth Speakerphone**

1. Link your mobile phone to the speaker via Bluetooth as described above.
2. When receiving an incoming call on your mobile phone, tap > button on the speaker to switch the incoming call from mobile phone to the speaker. A short beep sound will be heard confirming the call was answered. Complete your call using the built-in microphone and speaker.



3. Adjust the volume control of your mobile phone to obtain the desired sound level.
4. To end the call, just tap the button > again, a short beep sound will be heard and the call will end. If you are playing music from your mobile phone to the speaker before answering the call, the music will automatically resume playing when you hang up.
5. To ignore an incoming call, simply press and hold the button on the speaker for about 2 seconds, a beep sound will be heard and the call will be ignored.

### **OPERATING THE SPEAKER IN AUX-IN MODE**

If you are using an iPod, MP3/MP4 player or other mobile phone which can not connect this unit via bluetooth directly, you can still play it on the speaker via an audio connecting cable.

1. Plug one end (3.5mm) of the 2 in 1 charging & AUX IN cable into the headphone or line out jack on your player, plug the other end (Micro) of the cable into the unit DC charging port of the speaker.
2. Turn on the external audio source and play your device.
3. Turn on the unit, the volume level can now be controlled through the main unit. Operate all other functions on the external device as usual.