



MP3Tech

Transmitter Programming Instructions

Unplug the Mp3Tech at the rear of the unit.


Remove the 4 screws from the bottom of the case and carefully remove the top cover.

Locate the Program Button (A) and the green Led (B) as shown at the right.

Throughout the programming process you will be pressing and holding the program button and counting the flashes on the Led.

Always press and keep holding the button until instructed to release the button.

Have your transmitter within reach before beginning the process. Also don't hesitate too long between steps or the Mp3Tech will exit the program mode and you will have to start the process over.

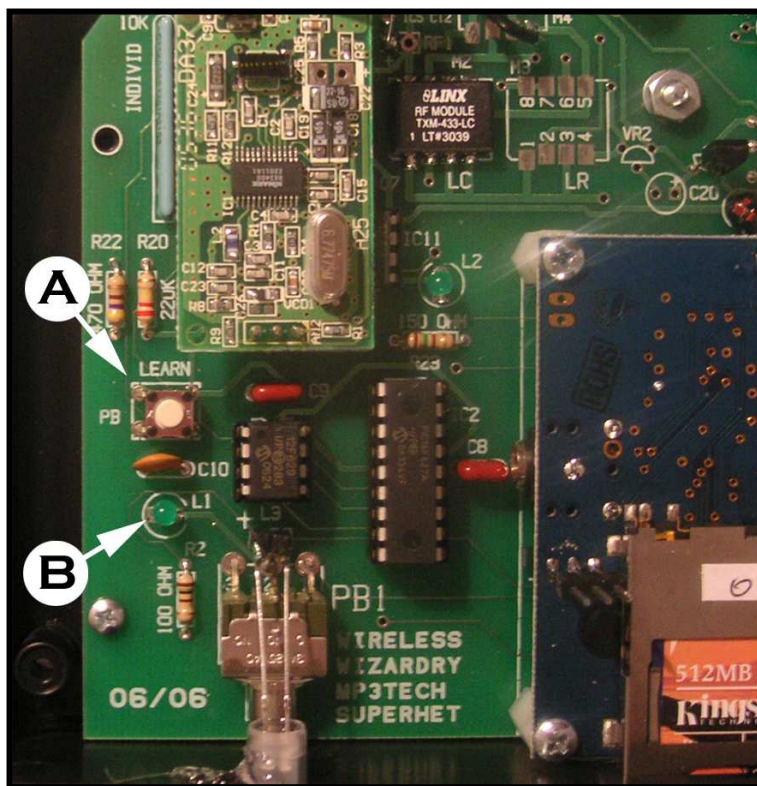

It is highly recommended that you read through the programming process below before starting. It really is quite simple if you know what to expect ahead of time.

If you have any problems, feel free to call us at (216) 245-7230 and we'll be glad to help walk you through the process. Thank you.

Programming:

Plug the power into the back of the Mp3Tech then immediately press and hold the Program Button.

The Led will flash once.

Press Transmitter Button “I” for about one second.

The Led will flash once.

Momentarily release the Program button then press and hold it again.

The Led will flash 2 times.

Press Transmitter Button “II” for about one second.

The Led will flash once.

Momentarily release the Program button then press and hold it again.

The Led will flash 3 times.

Press Transmitter Buttons “I & II” simultaneously for about one second.

The Led will flash once.

Momentarily release the Program button then press and hold it again.

The Led will flash 4 times.

Press Transmitter Button “III” for about one second.

The Led will flash once.

Momentarily release the Program button then press and hold it again.

The Led will flash 5 times.

Press Transmitter Button “IV” for about one second.

The Led will flash once.

Momentarily release the Program button then press and hold it again.

The Led will flash 6 times.

Press Transmitter Buttons “III & IV” simultaneously for about one second.

The Led will flash once.

Release the Program button and wait until the Led flashes indicating the end of the process.

You may now check the transmitter’s functions.