



LINDGREN-PITMAN

Linesetter Digital Speed Read Out


Linesetter must be connected to hydraulic system ready to run.

Using a hand held direct read digital tachometer, run linesetter speed up to:

LS-3, = 370 RPM

LS-4 & LS-5 = 310 RPM

Adjust Vernier potentiometer so LP-SPEED-LS# displays 10 Knots.

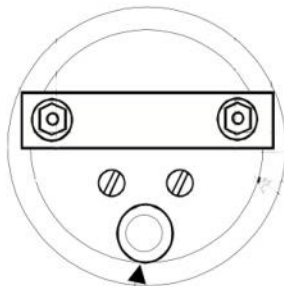


Calibration Controls
Under This Plug

4-position switch
(DO NOT CHANGE THIS SETTING)

Vernier potentiometer
[clockwise to increase display reading;
counterclockwise to decrease]

Shown with sealing plug removed

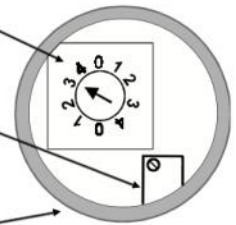

EXAMPLE:

Digital Laser Photo Handheld LCD
Contact and Non contact Tachometer RPM