

Installation Instructions for the LS3/LS4/LS5 Speed Readout Pickup (Sensor)

- 1) Rotate the main drive wheel by hand until one of the sealed steel inserts in drive wheel is directly in line with the threaded hole for mounting the pickup (sensor).
- 2) Screw the pick up into the hole until it comes in contact with the steel insert on wheel. Make sure the threads on pickup have some form of anti-seize lubricant applied. Back off slightly. Do not tighten lock nut yet.
- 3) With the line setter running, slowly turn the pickup in until it makes slight contact with the wheel. Then back off lightly until the pickup is no longer making contact and tighten lock nut. Install pickup cable to the pickup. Use lubricant on connector to prevent seizure.
Do not use a lubricant such as Never-Seez that contains metal in the product.
- 4) The readout will begin to display speed of line setter with the drive wheel turning and will become bolder as the speed of the wheel increases. No external power is required.

Note: The readout comes with a 2 year manufacturers warranty and the pickup has a lifetime warranty.