

## Cylinder Installation Instructions

**Applications:**

Tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.

**Caution:**

1. Do not use an electric generator to test the LED fixture.
2. Please abide by appropriate national, regional and local law and regulations when installed.
3. Do not install the fixture when raining to lower the risk of electric shock and avoid failure.

**Warning:**


1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge.
2. Wear gloves to avoid injury before installation.
3. If any smoke or spark of the wire occurs, please turn off the power immediately and notify relevant personnel.
4. This fixture is available in outdoor usage, but the distance from fixture to ground should be more than 2m.

Note: Please turn off the power before adjusting the color temperature.


This installation instruction applies to the following products. Although the products vary in appearance, the installation steps are the same:

**Installation:**



1. Turn off the power.

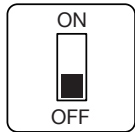


2. Remove screws for mounting plate removal.

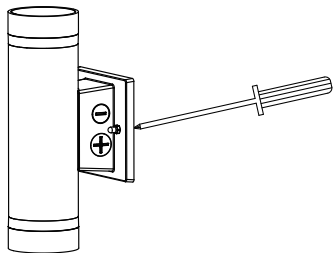


3. Use tools to unscrew both sides and remove mounting plates.

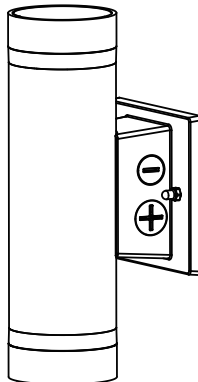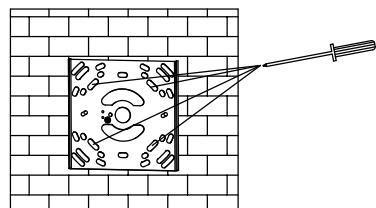


4. Fix the mounting plate to the junction box with the screwdriver and connect the wires properly.

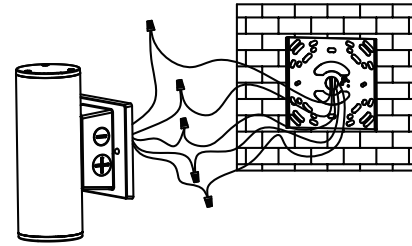

5. Lock the two end cap screws, the product is installed.

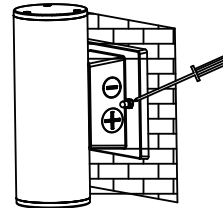

6. Make sure the installation is complete, before turning on the power switch.

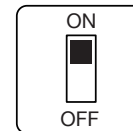


**Standard Wire:**

L/live wire: Black\Brown; N/null wire: White\Blue; ON Ground wire: Green\Yellow-green.

Warning: During grounding, make sure the earth wire of the driver and fixture housing are connected with the earth wire of the local power supply.

Operate as following instructions if the product is designed with below functions  
SPECIAL FUNCTIONS INSTRUCTIONS

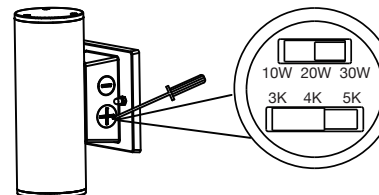

Note: Please turn off the power before adjusting the wattage and CCT.

CCT adjustable instruction fixture;

1. The color temperature of the lamp turns to 3000K when the switch is set to 3000K
2. The color temperature of the lamp turns to 4000K when the switch is set to 4000K
3. The color temperature of the lamp turns to 5000K when the switch is set to 5000K

Wattage adjustable instruction

Turn the wattage adjustable knob to a certain wattage gear, the power of the lamp will change to the corresponding wattage.

Adjustable wattage range 25%-100%.

Note: Please turn off the power and colour before adjusting the wattage.