



IMPORTANT SAFETY INSTRUCTIONS

1. Read carefully before installing fixture. Retain for future reference.

⚠ WARNING To prevent electrical shock, turn off electricity at fuse box before proceeding.

2. Failure to follow instructions may result in serious injury or death.

3. Upon receipt the fixture, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the package slip with the fixture label on the housing to assure you have received material.

4. This fixture must be wired in accordance with the international electrical code and applicable local codes and ordinances. Proper grounding is required to insure personal safety. Carefully observe the correct grounding procedure under installation section.

5. Fixture is for indoor and dry location, Do not use for outdoor location.

*Deco Digital assumes no responsibility for claims arising out of improper or careless handling or installation of this product.

Installation

1. Cut a hole in the ceiling drywall. Dimensions 47.25" x 3.875"

2. Add power feed.

3. Add mounting point supports. This should be wood blocking positioned 3 - 7/8" above the bottom (room side) surface of the drywall.

4. Remove fixture lens. Store temporarily in a safe place

5. Remove led tray. Store temporarily in a safe place

6. Connect power to fixture housing.

7. Install Fixture housing. Insert in hole. Use #10 Wood screws to fasten into place. Fasten through slots in fixture.

8. Make electrical connections to led tray.

9. Reinstall tray.

10. Reinstall lens.

11. Energize fixture.