

# **INSTALLATION INSTRUCTION**

#### **Outdoor Series**

LRX-20-50W-MCTP

#### SAFETY INSTRUCTION


- Read instructions carefully before attempting to install fixture. Retain instruction for future reference.
- Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- All wiring should be performed by a qualified electrician. This fixture is for outdoor use and should not be used in areas with limited ventilation or high ambient temperatures.

## **INSTALLATION- Directly fix to mounting surface**


- Do not remove any part of the fixture. 1.
- 2 Specification please see the label on fixture.
- 3. Use expansion bolts to secure the fixture on mounting surface.

(See Fig. 1&Fig.2)

- 4. Keep enough length wires to ensure adjusting angle unhindered.
- 5 Connect wires into wiring terminal; white wire to "Neutral" terminal, black wire to "Live" terminal, green wire to "Ground" terminal; and fix them by screws.

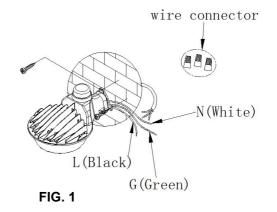

6. Please mention the main specification as following before wiring. (See Table 1)

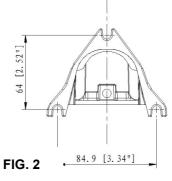

## INSTALLATION- Fix to mounting surface with an arm

- Connect the wire in same color (correspond to wire N, L and G) together with a wire connector.
- Put one end of the tube into the U-slot, and then fix the tube with two hex socket screws.
  Please make sure that the tube will not rotate. (See Fig. 3)
- Fixed -clamp on the pipe in a right position and make sure that the pipe will not rotate.
- Install the light fixture on the wall with four screws.

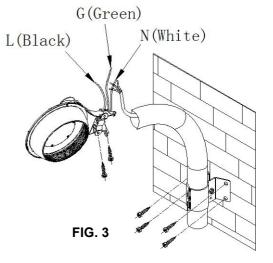



Table 1

Item	Model	Input Voltage	Input Current	Watt
Α	LRX-20-50W-MCTP	100-277VAC	0.72A	20W/30W/40W/50W

# Wattage tunable (Optional)

## **Diagrams and Methods of Watt Selectable Function:**

- 1. Please unscrew the knob cap before using the watt selectable function. (See FIG. A)
- According to the watt selectable label shown in the diagram, please toggle the DIP switch 1,2,3 to select the corresponding watt. (See FIG. B)
- 3. Screw the knob cap after using the watt selectable function. (See FIG. C)

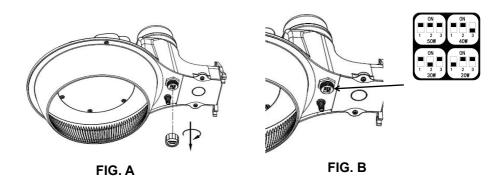


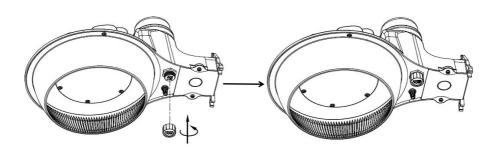


FIG. C

# **CCT tunable (Optional)**

### **Diagrams and Methods of CCT Selectable Function:**

Please screw the knob cap to select the corresponding CCT.

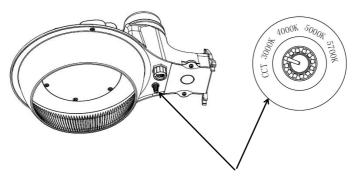

CCT Tunable selector (3000/4000/5000/5700K)

## After installation, please

- check whether the lighting fixture is firmly fixed.
- check whether wires are connected correctly.
- At last, turn on the power, and check if the lighting fixture works well. If not, please turn off the power and contact with local dealer.