




Danger – Risk of shock – Disconnect power before installation. The fixture should be installed following the NEC or your local electrical code. The fixture should be installed by a qualified electrician.


Instructions:

- 1. This product has 1-10v standard dimming function.
- 2. Choose the wire connection, dimming and installation method to your needs and the led fixture purchased.

Wiring Diagram:

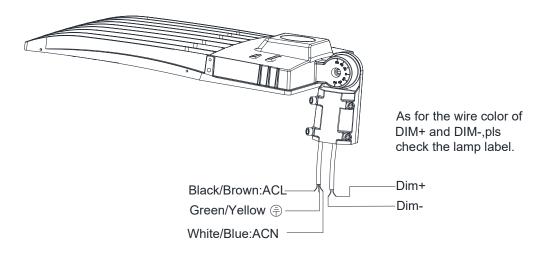

There are 3 different style mounts for this fixture.

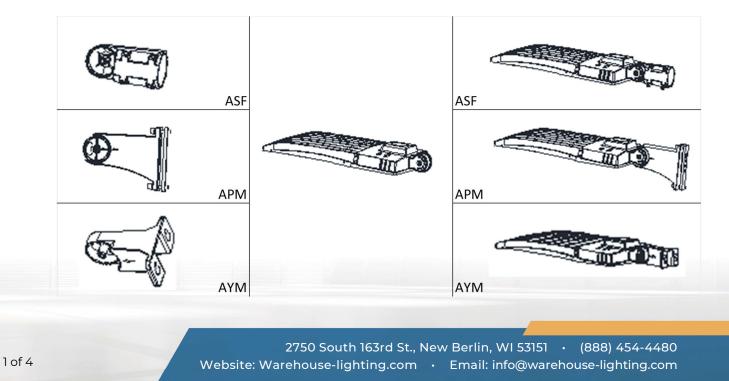



Installation Instructions based on the mount selected:

ADJUSTABLE SLIPFITTER MOUNT (ASF)

Step 1: Remove the bracket mounting screws on the fixture and run the wires through the bracket. (Figure 1) Step 2: Install the bracket on the fixture. (Figure 2)

 


Figure 1


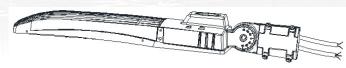


Figure 2

ADJUSTABLE POLE MOUNT (APM)

Step 1: Remove the bracket mounting screws on the fixture, open the side lid of bracket and run the wires through the bracket. (Figure 3) Step 2: Install the bracket on the fixture, then cover the side lid and tighten it. (Figure 4)

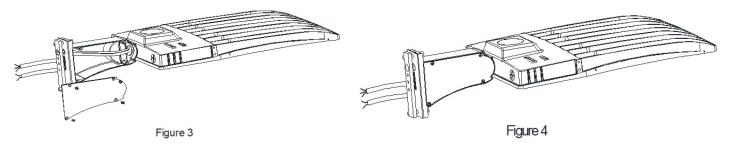

ADJUSTABLE YOKE MOUNT (AYM)

Step 1: Remove the mount screws on the fixture and run the wires through the bracket.(Figure 5) Step 2: Install the bracket on the fixture.(Figure 6)

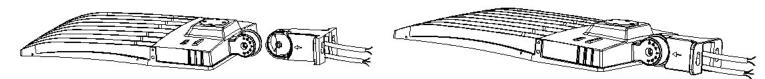


Figure 5








Installation of Fixture to Pole

ADJUSTABLE SLIPFITTER MOUNT (ASF)

- Step 1: Loosen the four bolts on ASF bracket, connect the wires correctly, and pull the wires into the poles.(Figure 9) Step 2: Place the bracket into the pole and lock the four bolts.(Figure 10)
- Notice: Adjustable angle is 0-90°(Figure 9)

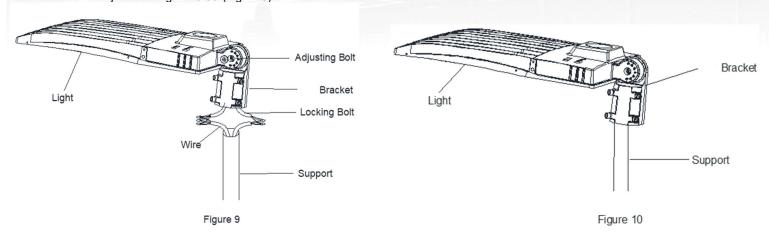


ADJUSTABLE POLE MOUNTING (APM)

Step 1: Fix APM bracket to square pole with bolt, open the side lid of APM bracket, pull the wire into junction box, and connect the wire correctly. (Figure 11)


Step 2: Put the connected wire into the junction box, then cover the junction box.(Figure 12)

Notice: Adjustable angle is 0-35° (Figure 11). Same as round pole installation, please remember to remove the silicon plate when install the fixture in round pole (Figure 13)

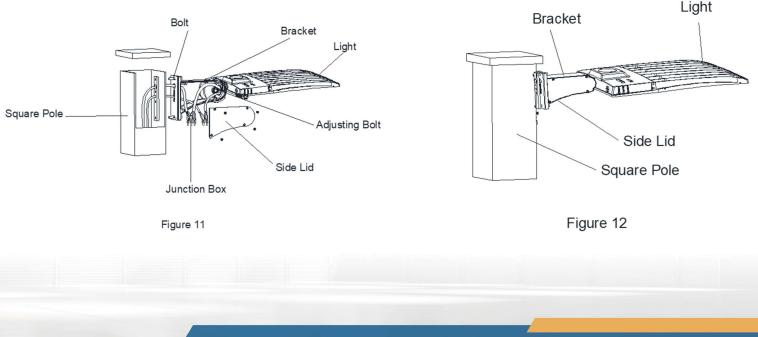

2750 South 163rd St., New Berlin, WI 53151 • (888) 454-4480 Website: Warehouse-lighting.com • Email: info@warehouse-lighting.com




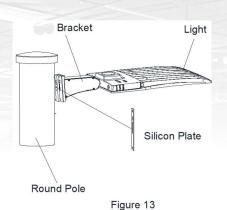

ADJUSTABLE YOKE MOUNT (AYM)

- Step 1: Drill holes on the wall as shown.(Figure 12)
- Step 2: Knock the expansion bolts into the wall.(Figure 13)

Step 3: Connect the fixture to the bracket and tighten the screws; connect the wires properly and put them into junction box. (Figure 14) Notice: Adjustable angle is 0-90° (Figure 14)

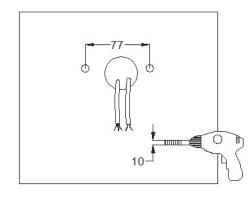

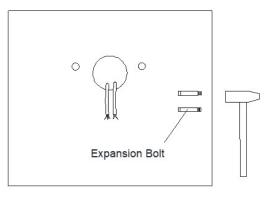


Figure 12

Figure 13

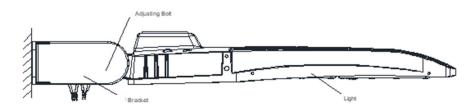


Figure 14